

## Adding an Extra Keypad

Connect 0v and 12v from the panel into D1 and D2 terminals on the keypad

Press and hold the D key on the keypad until the LCD displays "Security Code"

Enter the code 2000

Change the address of the keypad to "01" (or the next available address)

Press "A" to drop out of this menu (the LCD should now go blank)

Connect in the D3 and D4 from the panel to the keypad

Now go to the first keypad or the Enforcer

Enter the engineers menu and scroll to option "Assign Keypads/Readers?"

Press "Yes," change the address to 01 and press "Yes"

Change the type to "keypad" (option 0) and press "Yes"

Work through the keypads privileges and description until you get back to address

Press "No" until you reach the option "Exit Engineers Menu" and press "Yes"

The new keypad should now be fully functioning

If the keypad is still not working, please call Technical Support