



Pole & Tower Mounted Accessories


Anti climb guards

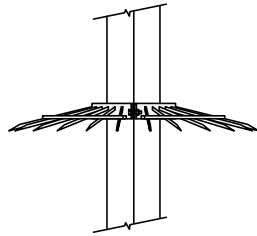


Column

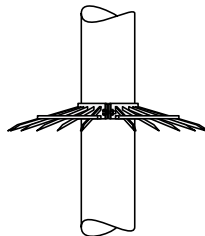


Pole

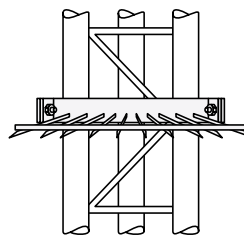


Tower

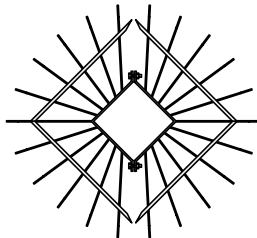

SGC/SGP
(Followed by column type and size
SGC for column SGP for wall mounted pole)

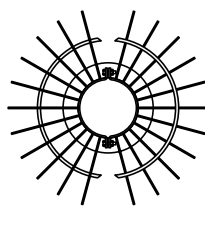


SGC
(Followed by pole diameter)

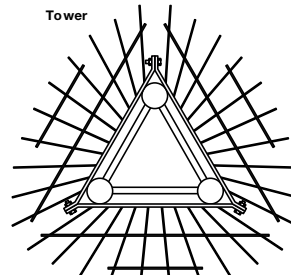


SGT
(Followed by tower type)


Ladder stays

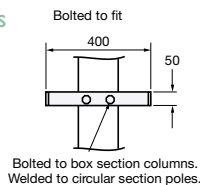

LSI
(Purchase with pole/column)

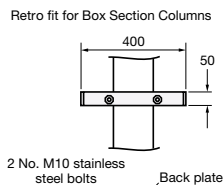


LSI/C
(Followed by column type or size)

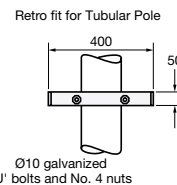


LSI/P
(Followed by pole diameter)


Adjustable telemetry receiver brackets

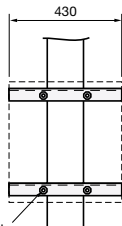

Column - ATBC/ATBP
(Followed by column type or size
ATBC for column ATBP for wall mounted pole)

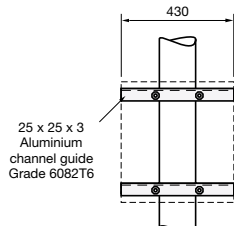

Pole - ATBC
(Followed by pole diameter)

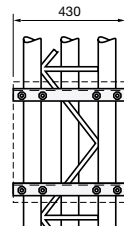

Tower - ATBT
(Followed by tower type)

NOTE
Pole columns size or tower type needs to be specified when ordering.

Fitting adjustable telemetry receiver bracket

1. Drill aluminium channels to fit hole centre on receiver box (one channel across the bottom, one across the top)
2. Bolt channels to the box
3. Trim channels to the width of the box using hacksaw
4. Bolt the box to the column/pole/tower using the 'U' bolts supplied