

AJAX Power supply units 12V PSU





Power supply units

Enable connecting central panels to **low-voltage networks** or using an **external battery**



12V PSU

for Hub/Hub Plus/ReX

DC input

Input voltage 8-20 V



12V PSU

for Hub 2

 
DC input

Input voltage 8-20 V

Use Ajax in premises lacking electricity or having an unstable power supply



Using the power supply unit

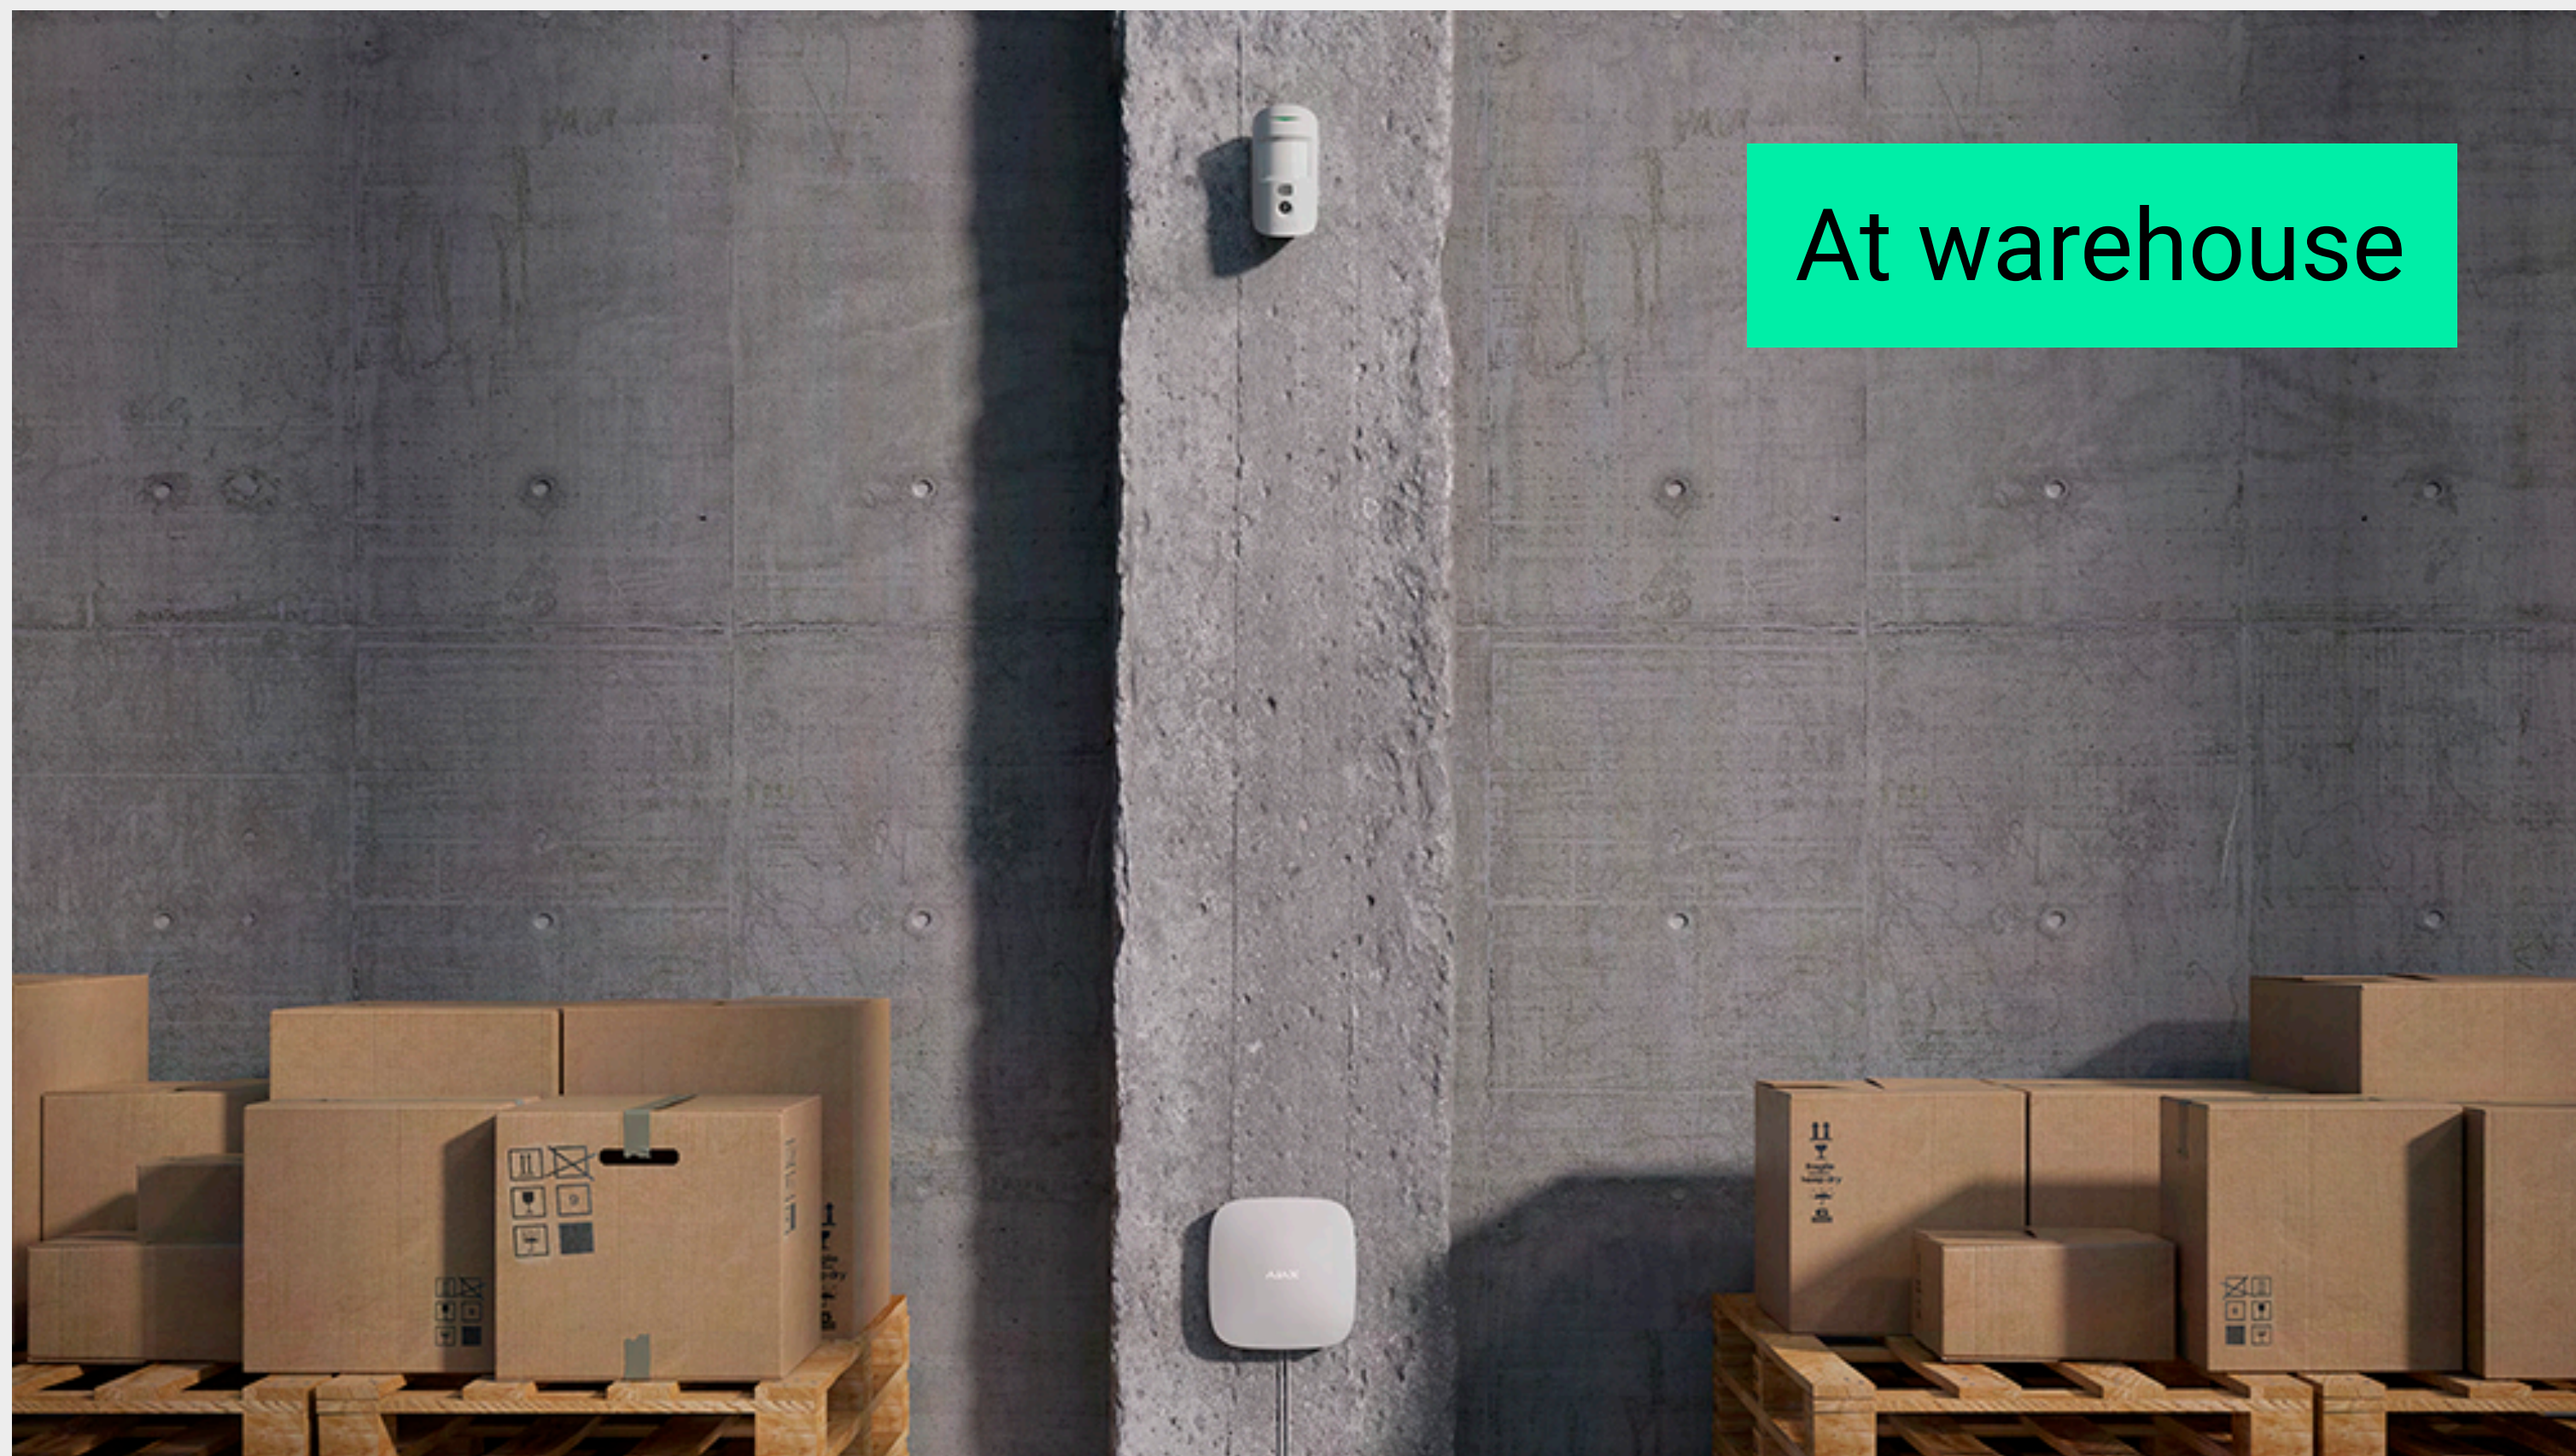

Hub 2



12V PSU for Hub 2



 
Connect the hub to low-voltage networks or use a portable battery



Using the power supply unit



Hub

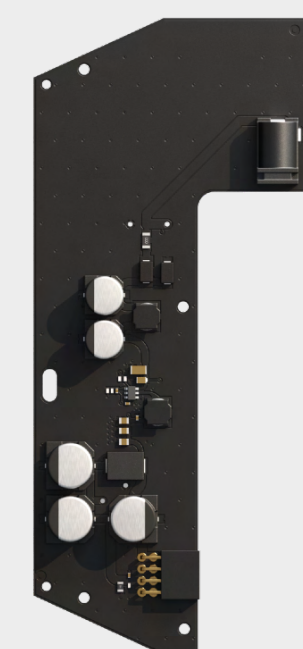

12V PSU
for Hub/Hub Plus/ReX



Connect the hub to a car or portable battery



In order to avoid interference from vibration during movement, protect the trailer only during parking.



Using the power supply unit



On yacht



Hub Plus



12V PSU
for Hub/Hub Plus/ReX



Insert a SIM card and connect the hub to the on-board network or battery

Tech specs

12V PSU for Hub/Hub Plus/ReX

12V PSU for Hub 2


Input voltage	8-20 V	8-20 V
Output voltage	4.65 V \pm 3%	4.8 V \pm 3%
Switch-on voltage	8 V \pm 2.5%	8 V \pm 2.5%
Switch-off voltage	6.9-7.5 V (depending on load)	6.9-7.5 V (depending on load)
Input current	<1 A	<1 A
Output current	<1.5 A	<1.5 A
Connection	Socket: 6,5 \times 2 mm Plug: 5,5 \times 2,1 mm (power jack)	Socket: 6,5 \times 2 mm Plug: 5,5 \times 2,1 mm (power jack)
Complete set	Terminal adapter Quick guide	Terminal adapter Quick guide



Power supply units

How to install power supply units:

 Each power supply unit features a standard socket for connecting the power jack plug and has a bundled terminal adapter. 12V PSU is installed into the device body, replacing the pre-installed 110/230 V power supply unit

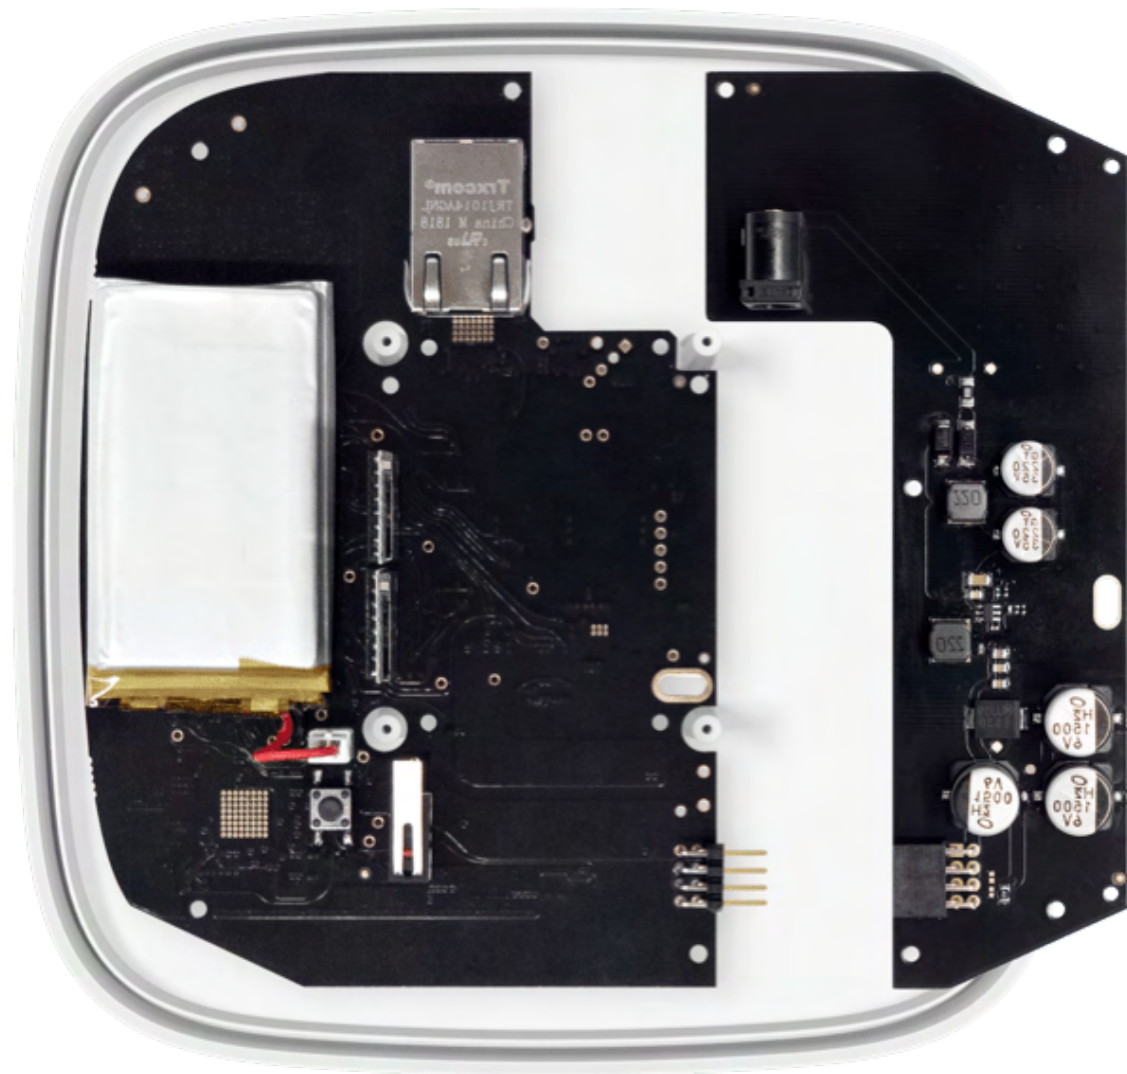

12V PSU
for Hub/Hub Plus/ReX



12V PSU
for Hub 2

Thank you

Power supply units 12V PSU:
ajax.systems/products