


Thank you for purchasing our product.
Please read this User's Manual before
using the product. Change without Notice

4 Channel Digital Video Recorder

User's Manual



Safety Precautions

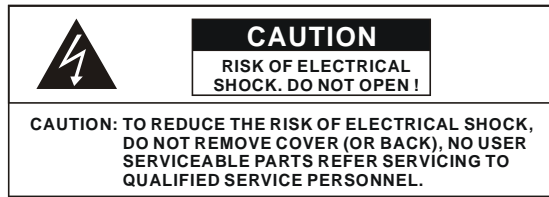

This label may appear on the bottom of the unit due to space limitations.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of insulated dangerous Voltage within the product's enclosure that may be sufficient magnitude to constitute risk of electrical shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE UNITS NOT SPECIFICALLY DESIGNED FOR



Attention: installation should be performed by qualified service Personnel only in accordance with the National Electrical Code or applicable local codes.



Power Disconnect. Units with or without ON-OFF switches have power supplied to the unit whenever the power cord is inserted into the power source; however, the unit is operational only when the ON-OFF switch is the ON position. The power cord is the main power disconnect for all unites.



“CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instruction.”

Warranty
and Service

During the warranty period (one year), we will repair or replace the DVR free of charge.

Be sure to have the model number, serial number and vendor stick on hard disk for service representative.

About this document

Before installing stand alone DVR, be sure to thoroughly review and follow the instructions in this Users Manual. Pay particular attention to the parts that are marked **NOTICE**.

Also, when connecting with external application, first turn the power OFF and follow manual instruction for appropriate installation.

Before reading this document

1. This document is intended for both the administrator and users of stand alone DVR Model.
2. This manual contains information for configuring, managing and using stand alone DVR Model.
3. To prevent fire or electrical shock, do not expose the product to heat or moisture
4. Be sure to read this manual before using stand alone DVR Model.
5. For questions and technical assistance of this product, contact your local dealer.

► Strong recommendation on installation of the DVR unit

1. Check electricity at the place you want to install the DVR unit is stable and meets our electricity requirements.

Unstable electricity will cause malfunction of the unit or give critical damage to the unit.

2. Several chips on the main board of the DVR unit and hard disk drive inside the unit generate heat, and it must be properly discharged.

Do not put any objects just beside exhaust port(fan) on the left side of the unit and do not close up an opening (fresh air in-take) on the right side of the unit..


3. Put the DVR unit at well-ventilated place and do not put heat-generating objects on the unit.



When it is installed inside 19 inch mounting rack together with other devices, please check built-in ventilation fan of the rack is properly running.

Content



Safety Precautions.....	2
About this document.....	3
Before reading this document.....	3
Unit Description of Front Panel.....	5
Unit Description of Rear Panel.....	6
Installation.....	7
Procedure.....	7
Picture.....	9
Playback.....	12
Function Setup.....	14
Login.....	14
Basic Operation.....	15
HDD Information.....	16
Date-Time Setup.....	17
Display Setup.....	18
Camera Setup.....	19
Buzzer Setup.....	24
System Setup.....	25
Advanced Setup.....	26
CF Card Data Read on PC.....	35
Hard Disk Data Read.....	49
Record Time Table: 80 GB HD.....	51
VGA Description (Optional).....	52
Additional.....	53

 Unit Description of Front Panel

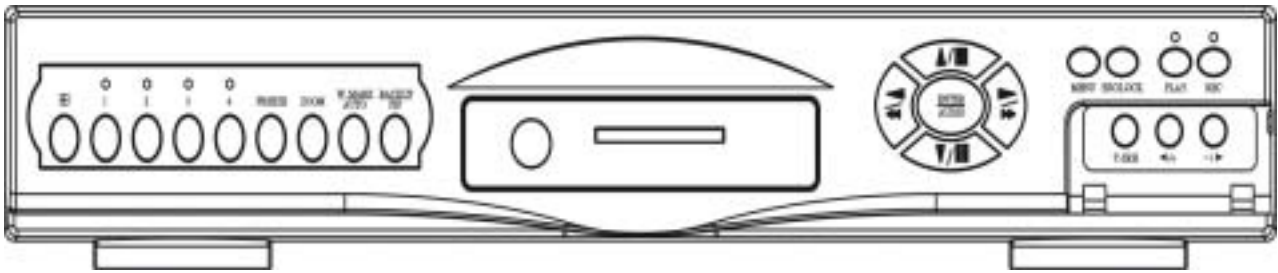


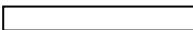1.  : 4 quad screen mode button / Mode function key / 4 or 9 split display on playback mode
2. **CHANNEL 1** : Channel 1 full screen button
3. **CHANNEL 2** : Channel 2 full screen button
4. **CHANNEL 3** : Channel 3 full screen button
5. **CHANNEL 4** : Channel 4 full screen button
6. **FREEZE** : Picture freeze mode button
7. **ZOOM** : Picture zoom x2 mode button
8. **AUTO / W.MARK** : Auto sequence mode / Water Mark function button.
9. **PIP / BACKUP** : Picture in picture mode button / Image backup button
10. **UP / STOP** : Direction button UP / Playback stop button ▲ / ■
11. **REW** : Reverse playback choose button / Still playback ◀ / ◀◀
12. **DOWN / PAUSE** : Direction button down / Playback pause ▼ / ■■
13. **FF** : Forward playback choose button / Still playback ▶ / ▶▶
14. **ENTER / AUDIO** : Sub-menu enter button / Audio on or off button
15. **MENU BUTTON** : Press this button to display the menu setup
16. **ESC/LOCK** : Press this button to Key Lock function / Sub-MENU exit button
17. **T-SRH** : Press this button to playback time search
18. **PLAY BUTTON** : Press this button to playback
19. **DIRECTION BUTTON** : Playback speed choose. (Increase)▶ or values change.
20. **REC BUTTON** : Press this button to start recording image
21. **DIRECTION BUTTON** : Playback speed choose.(reduce)◀ or values change.
22. **CF Card Slot** : Compact Flash Card insert 

 Unit Description of Rear Panel

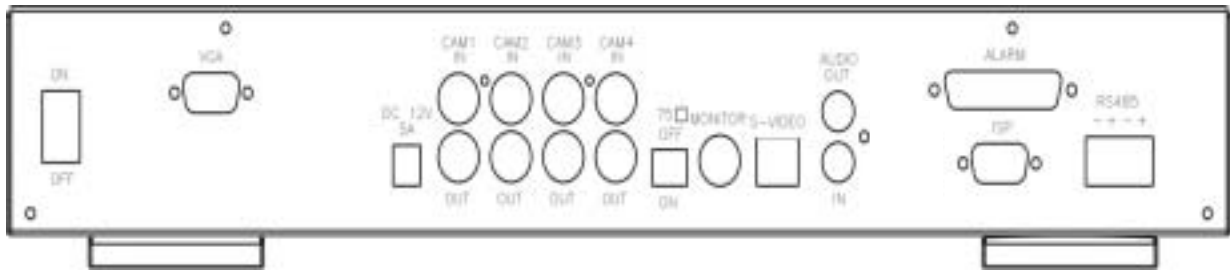

 Power code in 12V/5A, power switcher (ON / OFF)



Camera 1 ~ 4 in and looping out



75 Ohm ON/OFF (high/low adjust)



Audio channel input x 1 and output x 1



Monitor out



S-Video (Y/C) monitor



 
VGA output. PC monitor connector. (Optional)



RS-485 control keyboard connector



RS-232 connector (ISP. Firmware upgrade port)



Alarm connector




LAN (Not available)

Installation

Procedure


1) Camera Connection

Connect the camera to the CAMERA INPUT on the Rear Panel of the 4 CH DVR.

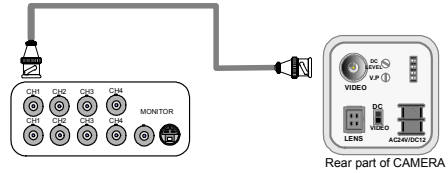


2) Monitor Connection (Composite Connection Method)

Connect the monitor to the MONITOR OUT on the Rear Panel of the 4 CH DVR.

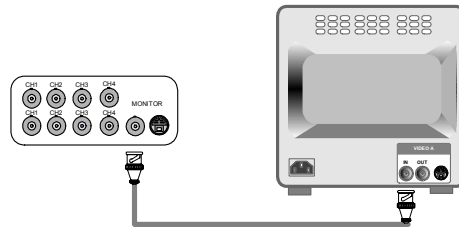


3) Monitor Connection

Connect S-VIDEO Monitor to MONITOR OUT on the Rear Panel of the 4 CH DVR.

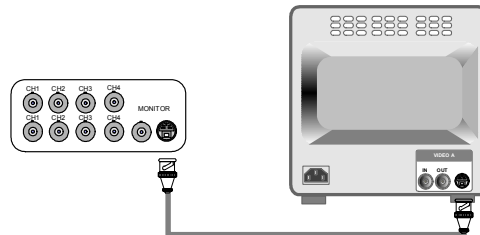

4) Sensor Connection

Connect the Sensor to the SENSOR INPUT/ OUTPUT on the Rear Panel of the system

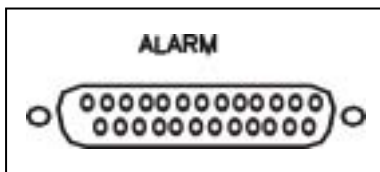

13,12,11,10,9,8,7,6,5,4,3,2,1


25,24,23,22,21,20,19,18,17,16,15,14

- 1.ALARM0
- 2.ALARM1
- 3.ALARM2
- 4.ALARM3
- 23.ALARM NC
- 24.ALARM NO
- 25.ALARM COM
- 5. ~ 19. GND

Relay output : COM+NC, COM+NO


Alarm input : Short-circuit between Alarm0, Alarm1, Alarm2 or Alarm3 and GND is recognized as alarm by default. Alarm0~3 will be corresponding to Camera1~4.

NOTICE: Sensor input is RECOGNIZED as LOW when alarm signal is on a level with GND, and it is recognized as HIGH when alarm signal is FLOATING or 5V. Following is internal circuit.

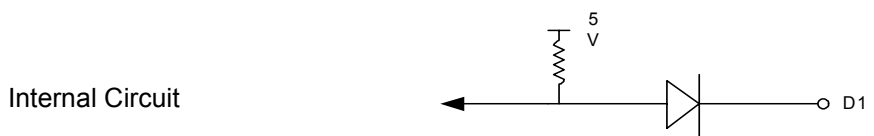

Thus, there is a danger of damage, when the sensor input goes to a Negative level or voltage higher than 5V.

5) HDD connection

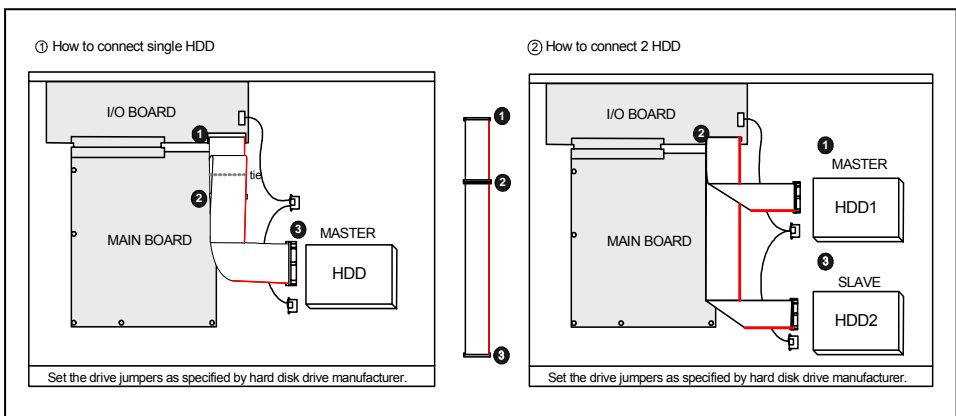

1. Make sure the HDD is MASTER.
2. Make sure the cable connector is correct.
3. Please check the HDD panel for Master set up.

1. Make sure the HDD is MASTER and SLAVE.
2. Make sure the cable connector is correct.
3. Please check the HDD panel for Master and Slave set up.

Notice:


- Maximum 2 internal hard drives installed.
- Hard Disk Master and Slave jumper pin must be set correctly, otherwise it makes DVR react faulty.

Hard Disk testing table:

Brand	Model	Capacity	Notice
Seagate	Barracuda	80 GB	
IBM	DeskStar	80 GB	
WD2000	Caviar	200 GB	
Hitachi	DeskStar	80 GB	
Maxtor	MaxLinell	300 GB	




Full screen or quad screen display


Press  quad button to display 4 quad screen.

Press numeric 1 / 2 / 3 / 4 buttons to display a desired camera image in full screen.

1.) FREEZE Mode


1. In live and the quad mode press  (FREEZE) button to freeze image.

Press  again to cancel freeze mode.


2. On the full screen display, press  (FREEZE) button to freeze full screen image.

2.) Zoom Mode(Display Enlargement.)

Go to full screen mode with numeric buttons at live or playback mode, then press ZOOM button to display screen Enlargement.

Use  button to move position.



3.) Auto Mode


Press  (AUTO) button to start screen auto sequencing, and press it again to cancel auto mode.



4.) W.MARK. Water Mark mode.

Water Mark protection function on or off. To prevent hacker using special software to modify the image data. System Setup→Watermark Check mode On. Press W.Mark button to on or off. (Playback mode only)

5.) PIP (PICTURE IN PICTURE)

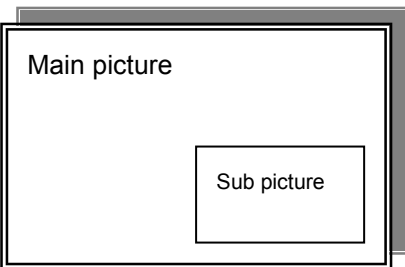1.) Press  (PIP) button. Press  (AUTO) button to start sub-screen auto sequencing.



2) With  button, select the main channel screen, press  button to select desired camera channel in small screen.

6.) BACKUP / PIP. Image backup mode.(Image back up must be done on playback mode only.)

Locate the playback point of which you want. Press BACKUP, the BACKUP CAUTION window pop-up. Press ENTER to begin data back up. Capacity of CF card is not limit, but the maximum capacity display is 9999MB.

On playback mode, presses BACKUP:

Lower-Right corner of the screen:

**** BACKUP CAUTION ****
 ALL DATA IN THE CF CARD
 WILL BE CLEARED.
 PRESS [ENTER] TO BACKUP.
 PRESS [BACKUP] TO CANCEL.

0000M / 0256M


0000M / 0256 (Presently back up progress / Total capacity of CF card)

Important:

If the CF card contains old data, please format CF card to FAT or FAT 32 on computer before insert to DVR CF card slot. Otherwise, DVR would not detect correct CF card format. Any brand of CF card is acceptable.

Additional:

During playback, CF card is full or user press BACKUP button screen display a “PAUSE” caption, User takes out the CF to computer USB slot then save data to hard disk. After, re- insert CF card to DVR slot, user press BACKUP again. Press ENTER to continue backup or backup button to cancel.

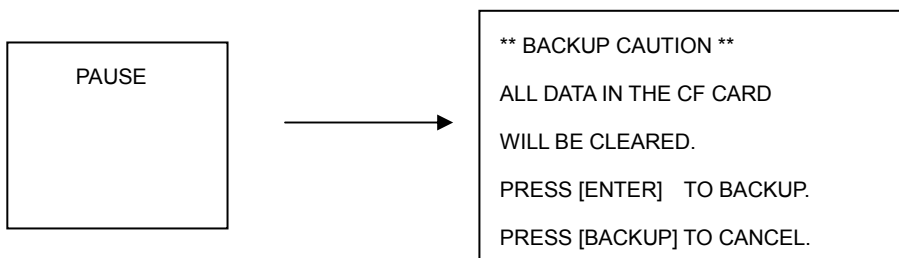

CF card testing table:

Brand	Model	Capacity	Notice
Cannon	FC-8M	8 MB	
PQI		32/128 MB	
Nikon		16 MB	
KingMax		16 MB	
Apacer		1 GB	40x support, 66x error
Sandisk	F1 x24	512 MB	
Transcend	F1 x45	256 MB	

7.) Alarm Sensor Recording

>See the alarm recording setup page


8.) Scheduled Recording

>See the scheduled recording setup page


9.) Motion detection Recording

>See the motion detection recording setup page

10.) Key Lock function

>On the Live or Playback mode, press  (lock), Only, numeric, freeze, auto, pip, and zoom buttons could work. Press lock key again to enter the login-in window. Enter admin or user password to unlock. Key lock function only accept password correct log in even re-boot DVR power.

11.)AUDIO function))))

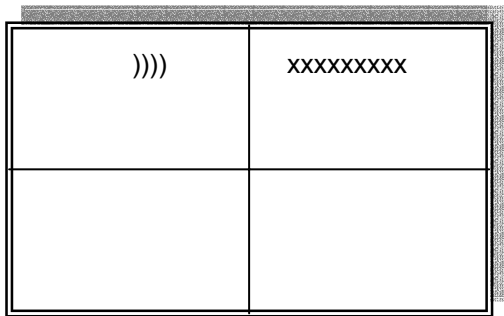


Audio playback: Press **AUDIO** / ENTER,)))) displays on the Upper-left of screen. At that time, audio will playback. Press it again to turn it off.

Notice

Audio playback only on normal(x 1) playback.


Playback

1. Playback Mode

- 1) Press  button to begin playback. (System playback the images backward)

2. T-SRH button

- 1) T-SRH: Playback by time search.
Press T-SRH button to active playback function.

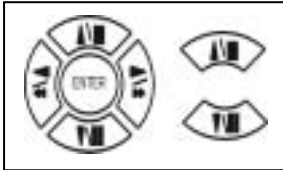


Press direction button
UP/DOWN to choose
items.

MAIN PLAY PAGE

- 1.MASTER TIME LIST
- 2.SLAVE TIME LIST
- 3.MASTER EVENT LIST
- 4.SLAVE EVENT LIST
- 5.GOTO DATE: 2004/12/31
- 6.GOTO TIME: 12:12
- 7.GOTO PLAY

1) TIME LIST (Playback image by Time-Search): Recorded images list (by hours)

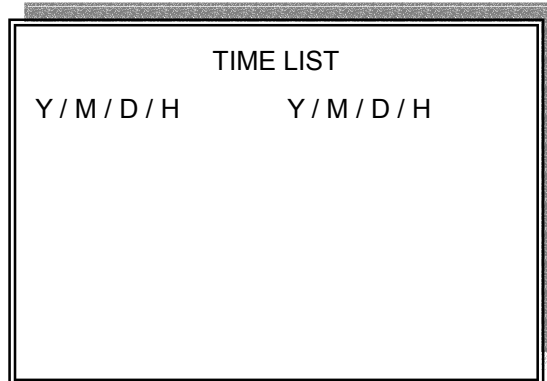


TIME LIST

Y / M / D / H Y / M / D / H



Y / M / D / H (Beginning of recording time) Y / M / D / H (End of recording time)

Every playback data list displays by an hour.

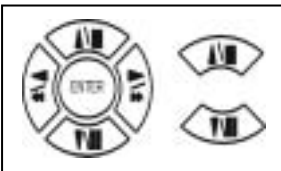
No page display limit. 10 items display on each page.



Press direction button UP/DOWN to choose items.

Press   values change button to change to previous / next page.

2) EVENT LIST (Alarm List): Event source- Video loss / Alarm trigger / Motion / Record

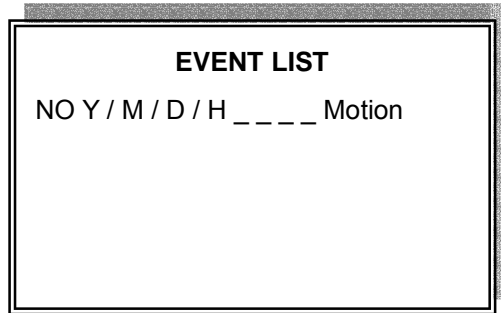

10 items display on each page / Total 5000 items display for 500 pages. When event list is out of compass, the total items are less than 5000.

Y / M / D / M : Year / Month / Day Hour / Minute


>Event happens time.

_ _ _ _ : Event Channel Display.

>1 CH, 2 CH, 3 CH, 4 CH.

Motion: Event type.

>Includes Motion / Alarm / V-Loss / Record

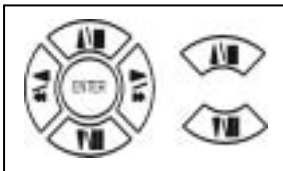

Press direction button UP/DOWN to choose items.

Press ◀ ▶ values change button to change page. Press ENTER to start playback.

>Special time search playback:

Go TO DATE : 2 0 0 2 / 1 2 / 1 2

-Choose year / month / day

>Press direction button Left / Right to choose items, press values change button ◀ ▶ to change value.

GOTO TIME : 1 2 : 1 2

-Choose hour and minute

>Press direction button Left / Right to choose items, press values change button ◀ ▶ to change value.

GOTO PLAY


-Press ENTER button to start playback.


Notice: Playback speed change by ◀ ▶ . Speed is x 1, x 2, x 4, x 8, x 16.

Function Setup



LOGIN

- 1) Press  button to enter into menu. You could do the system function setup in MENU.
- 2) Password enter window pop-up:

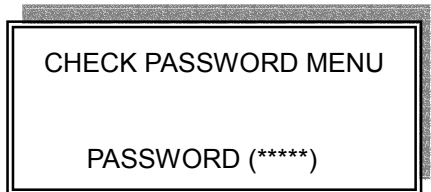


Default password (Account-Admin) : 44444


Default password (Account-User) : 11111



- 3) Press numeric (1 ~ 4)button or remote controller (1 ~ 4)to choose password.
- 4) Remote controller function buttons are same as DVR panel function buttons.

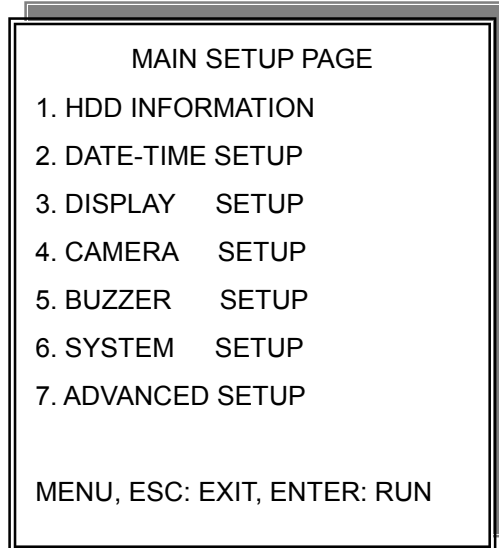
Press MENU button to enter MAIN SETUP PAGE.




1) Use direction button up/down  button to select setup item.

2) Press  button to enter into sub-menu function setup.

 3) Press sub-menu item with direction button up/down 
or left/right  button.

And change the value with  values change button or turn inner-shuttle.


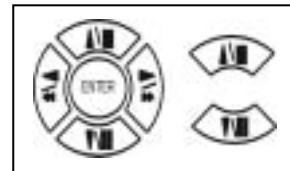


4) Press ESC to go back to main / sub menu or exit menu.

Notice:

1. ADMIN level can setup all DVR menu functions.
2. USER level cannot setup ADVANCED page of DVR main menu function.

1. HDD INFORMATION

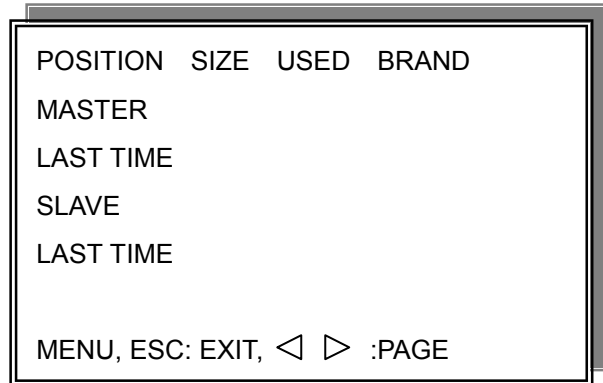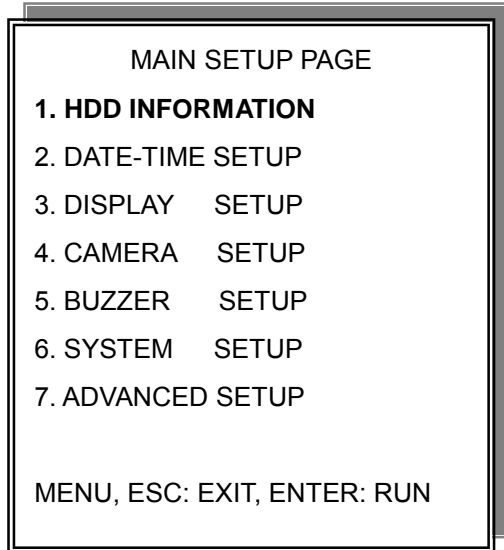

- 2 hard disk information display.

Information display: POSITION SIZE USED BRAND

>POSITION: Master / Slave



>SIZE: Hard Disk capacity. xxGB. Maximum display is 999MB

>USED: 00 ~ 100 %. Hard disk overwrites always on 100 %.

>BRAND: DVR auto detect hard disk brand.

>LAST TIME: The last record time display.

2. DATE-TIME SETUP

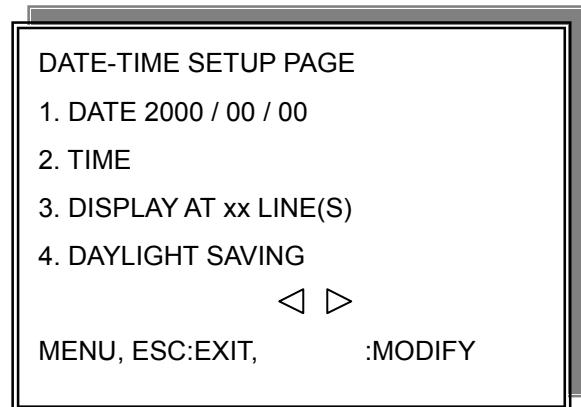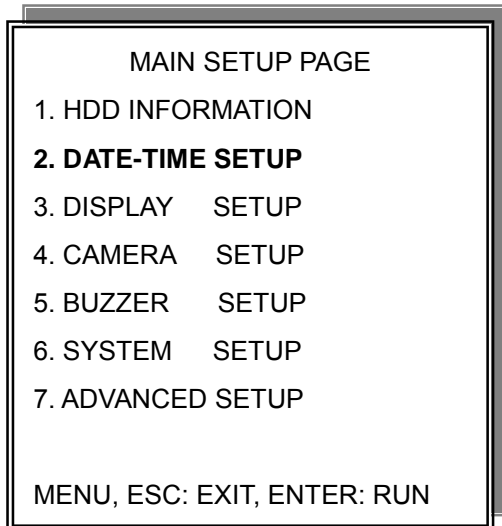

1. DATE

2. TIME: > Use direction button up/down choose position, values change button to change date and time values.

3. DISPLAY AT xx LINE(S)

-Date and Time position on screen xx line(s). 00 ~ 23.

4. DAY LIGHT SAVING:

-Day light saving function on or off.

The Day light Savings function that enable two special updates when it sets to "ON".



On the first Sunday in April, the time increments from 1:59:59 AM to 3:00:00 AM.

On the last Sunday in October when the time first reaches 1:59:59 AM, it changes to 1:00:00 AM.



Press direction button up/down/left/right to choose items or move date-time position.

3. DISPLAY SETUP

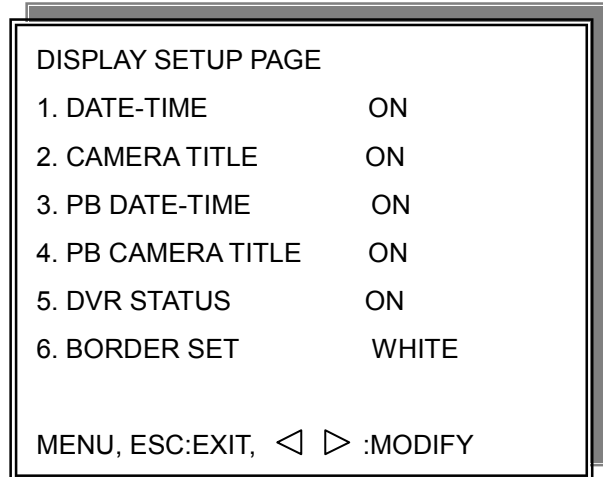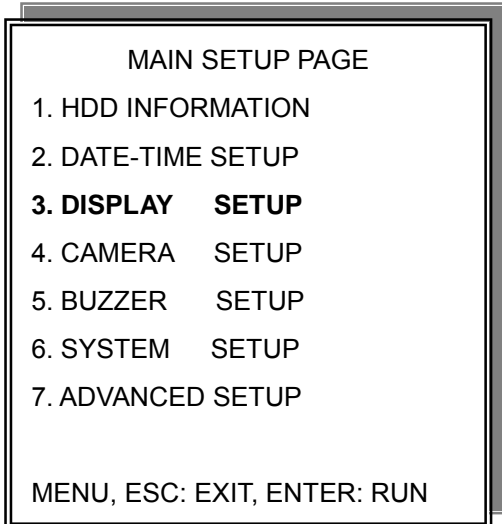



1. DATE-TIME: Date and Time caption display mode on or off setup.
>ON / OFF
2. CAMERA TITLE: Camera Title caption display mode on or off setup.
>ON / OFF
3. PB DATE-TIME: Play back date and time caption display mode on or off setup.
>ON / OFF
4. PB CAMERA TITLE: Play back camera title caption display mode on or off setup.
>ON / OFF
5. DVR STATUS: DVR system, record, playback, audio caption display mode on or off setup.
>ON / OFF
6. BORDER SET: Border color WHITE / DARK / BLACK / GRAY.





Press direction button up/down to choose the desired item.

Press ◀ ▶ values change button to change values.

4. CAMERA SETUP

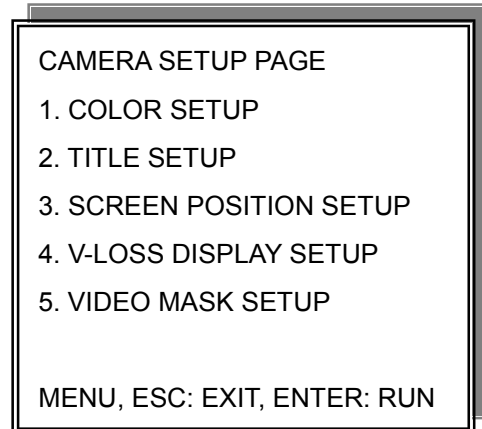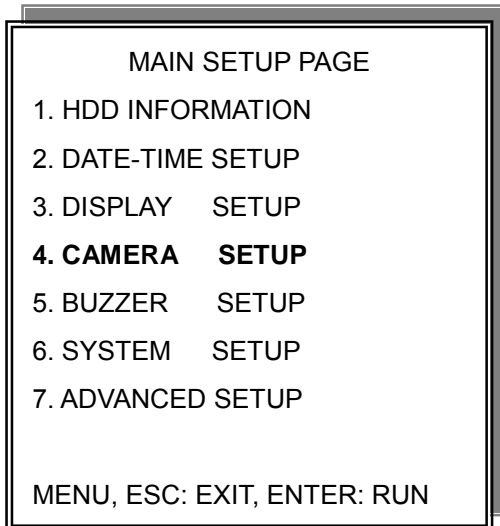

(1.) COLOR SETUP

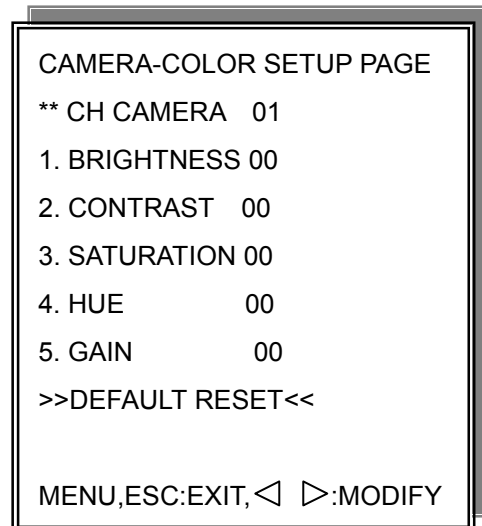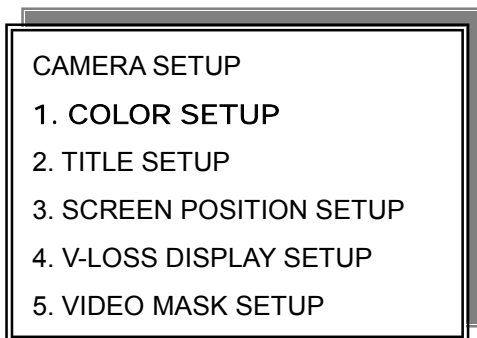

CAMERA-COLOR SETUP : Adjust Camera Image

- CH NUMBER : Select camera
- BRIGHTNESS : Adjust screen brightness (-31~ +32)
- CONTRAST : Adjust color contrast (-31~ +32)
- SATURATION : Adjust color saturation (-31~ +32)
- HUE : Adjust color hue (-31~ +32)
- GAIN : Adjust image signal level (-31~ +32)

>>DEFAULT RESET<< : Press ENTER button to reset DVR values.





Press direction button up/down to choose items.

Press ◀ ▶ values change button to change values.

>Right adjustment of each element in COLOR setup will increase picture quarterly displayed. We recommend you to adjust each element of COLOR SETUP for cameras and monitor to be connected to the DVR unit.

(2.) TITLE SETUP: Input TITLE of each camera. 18 characters can be input.

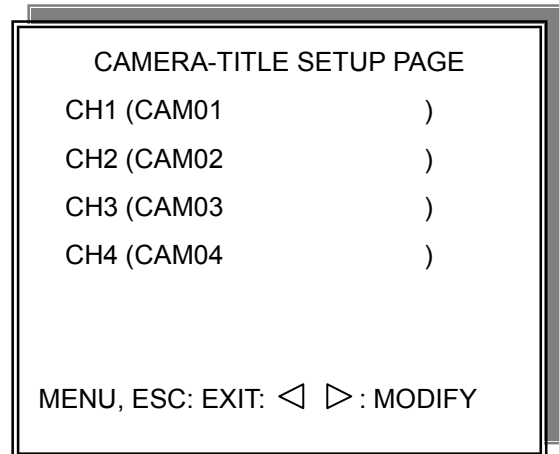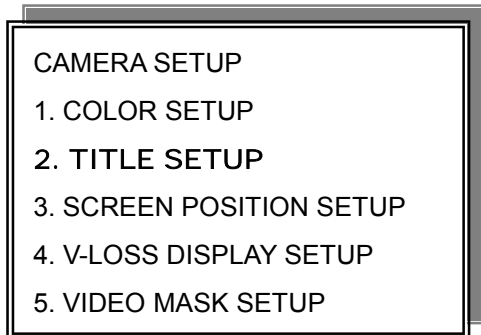

Press direction button up/down/left/right to choose items and position.



Press ◀ ▶ values change button to change values.

Characters choose:

Numeric: 0 / 1 / 2 / 3 / 4 / 5 / 6 / 7 / 8 / 9

Capital letter: A / B / C / D / E / F / G / H / I / J / K / L / M / N / O / P / Q / R / S / T / U / V / W / X / Y / Z

(3.) SCREEN POSITION SETUP

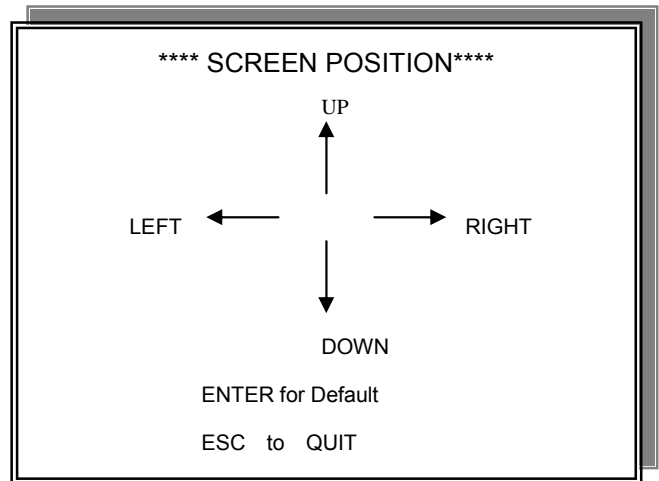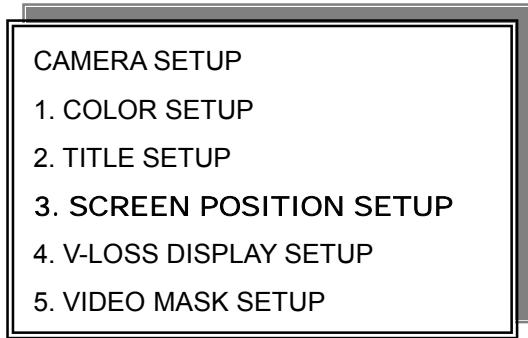

1.





Press direction buttons up/down/left/right to move screen position.

2. Press ENTER button for default.

3. Press ESC button to quit.

(4.) V-LOSS DISPLAY SETUP

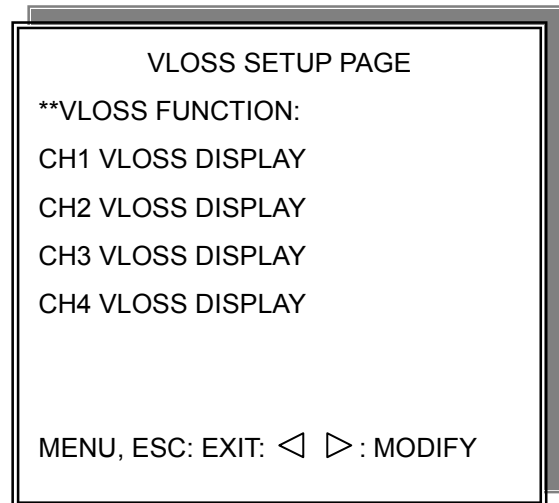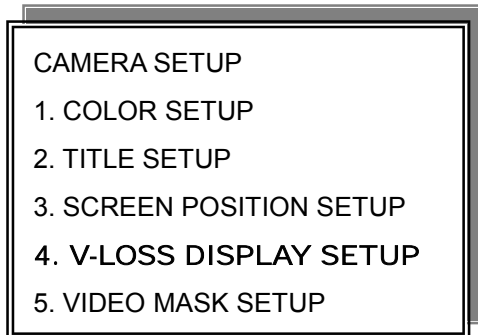

** VLOSS FUNCTION: ON / OFF

CH1 VLOSS DISPLAY: ON / OFF

CH2 VLOSS DISPLAY: ON / OFF

CH3 VLOSS DISPLAY: ON / OFF

CH4 VLOSS DISPLAY: ON / OFF





Press direction buttons up/down/left/right to choose items.



Press values change button to change values.

(5.) VIDEO MASK SETUP

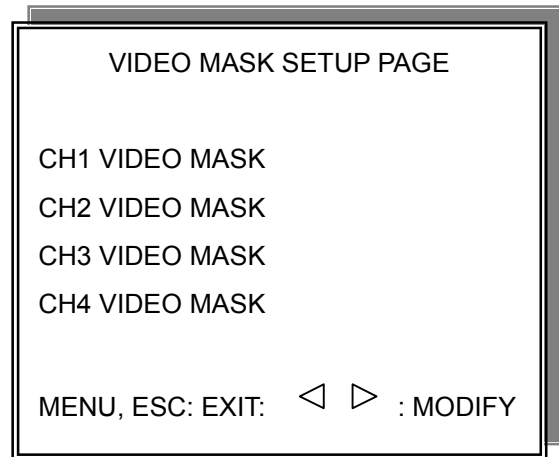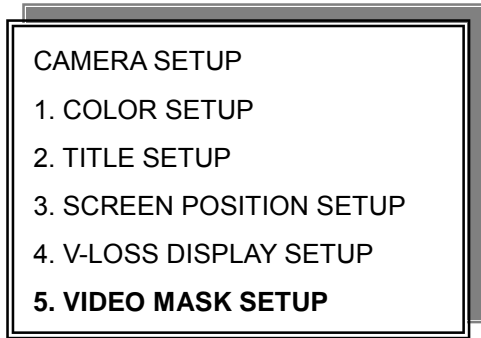

CH1 VIDEO MASK: ON / OFF

CH2 VIDEO MASK: ON / OFF

CH3 VIDEO MASK: ON / OFF

CH4 VIDEO MASK: ON / OFF

MASK means this channel would not display on the live screen, but it still recording.





Press direction buttons up/down/left/right to choose items.



Press values change button to change values.

5. BUZZER SETUP

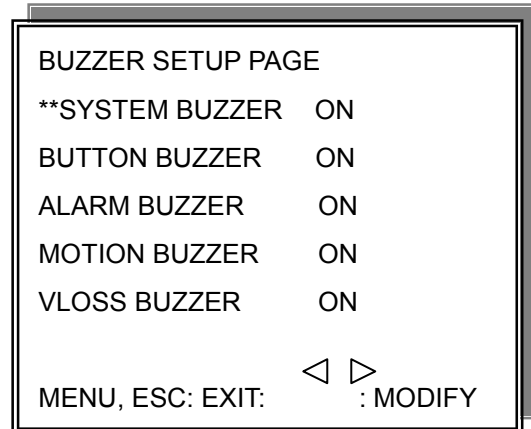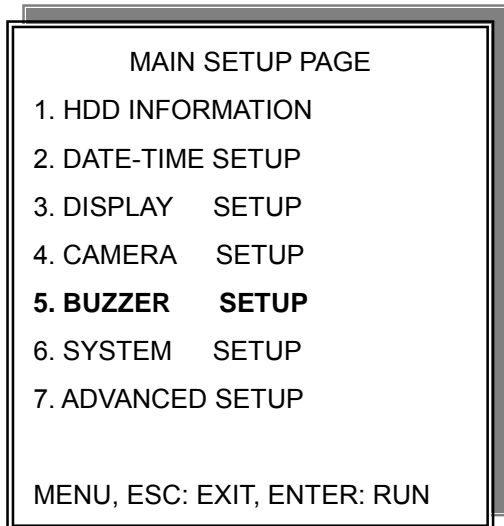

**SYSTEM BUZZER: Buzzer function

>ON / OFF

1. BUTTON BUZZER?

> ON / OFF

2. ALARM BUZZER?

> ON / OFF

3. MOTION BUZZER?

> ON / OFF

4. VLOSS BUZZER?

> ON / OFF





Press direction buttons up/down to BUZZER SETUP items.



Press values change button to change values.

6. SYSTEM SETUP

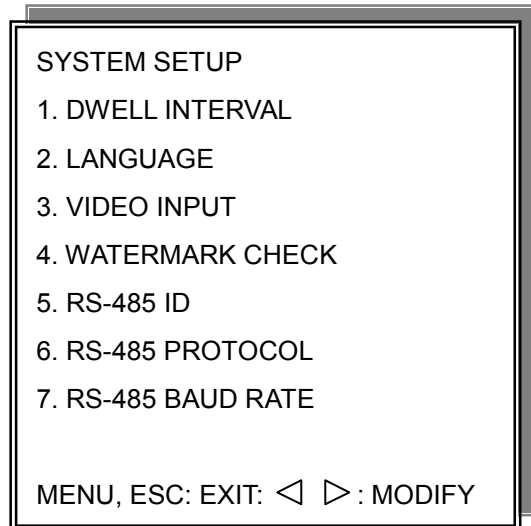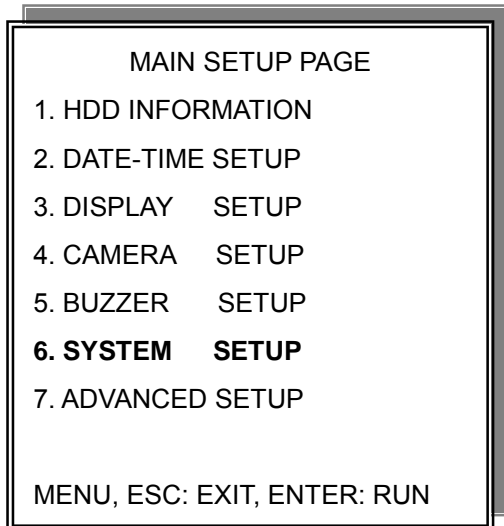

SYSTEM SETUP

1. DWELL INTERVAL:
- 0 ~ 999SEC
2. LANGUAGE
- ENGLISH / CHINESE / JAPANESE
3. VIDEO INPUT: NTSC / PAL system detection,
- AUTO / NTSC / PAL
4. WATERMARK CHECK:
-ON / OFF
5. RS-485 ID:
- 01 ~ 16
6. RS-485 PROTOCOL
- KEYBOARD / LILIN / PELCO-P / PELCO-D / NICECAM
7. RS-485 BAUD RATE
- 1200 / 2400 / 4800 / 9600

RS-485 ID and protocol is the command for system control keyboard. If user has no keyboard to control then does not have to care.







Press direction buttons up/down to choose items.



Press values change button to change values.

8. ADVANCED SETUP

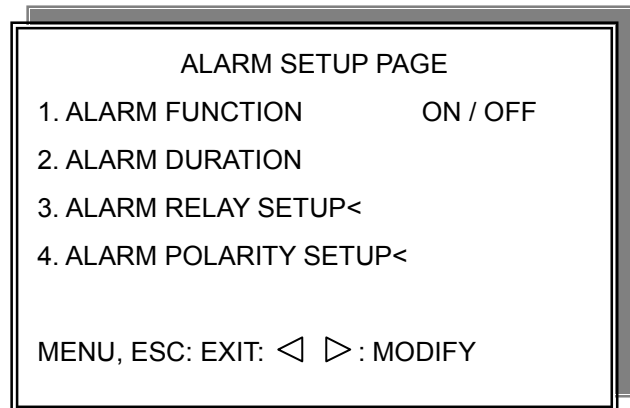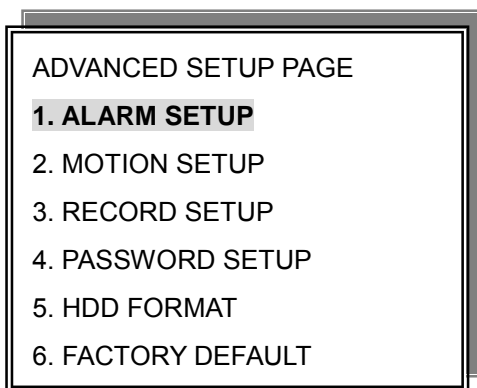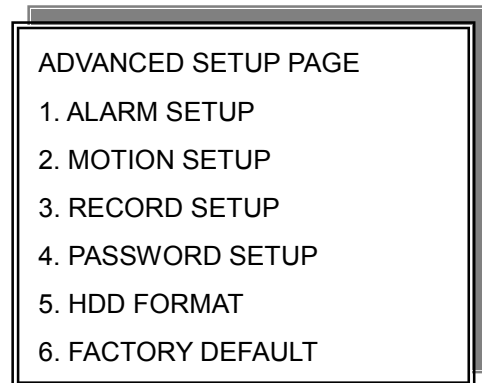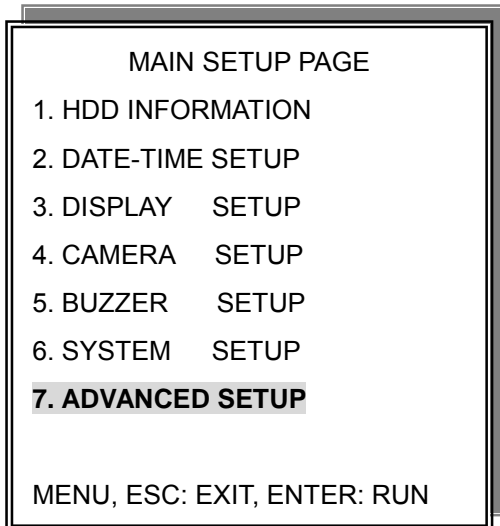

1. Alarm function: ON / OFF

2. Alarm duration: 0 ~ 999

ALARM RELAY SETUP PAGE

ALARM01 : ON / OFF

ALARM02 : ON / OFF

ALARM03 : ON / OFF

ALARM04 : ON / OFF

ALARM POLARITY SETUP PAGE

ALARM01: NO / NC / OFF

ALARM02: NO / NC / OFF

ALARM03: NO / NC / OFF

ALARM04: NO / NC / OFF





Press direction buttons up/down to choose items.



Press values change button to change values.

2. MOTION SETUP

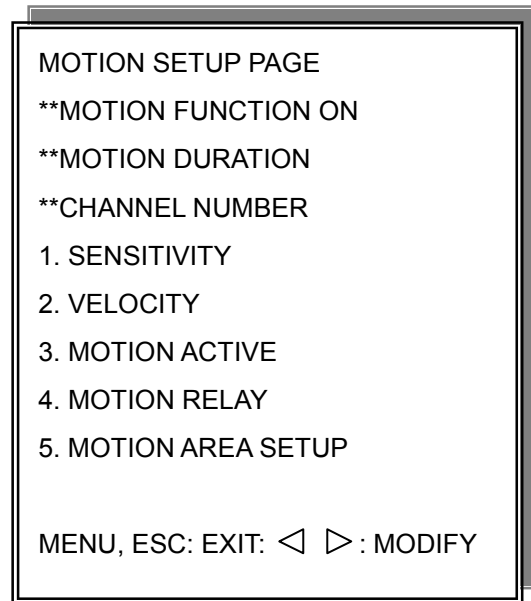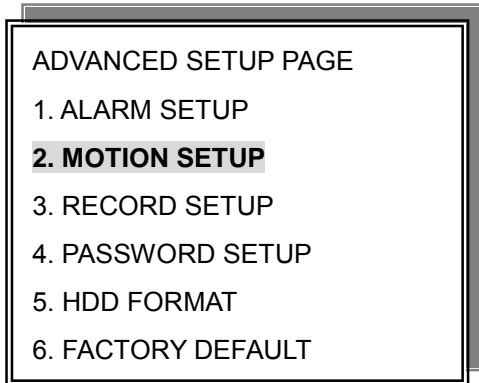

MOTION SETUP

**MOTION FUNCTION (For all channel)

-ON / OFF

**MOTION DURATION

-0 ~ 999

**CHANNEL NUMBER

Ch 1 / Ch 2 / Ch 3 / Ch 4

1. SENSITIVITY Adjusts motion Detection Sensitivity.

-1 ~ 32 (low →high)

2. VELOCITY Adjusts motion object slow /fast speed detection

-1 ~ 10 (slow speed→fast speed)

3. MOTION ACTIVE (For each channel)

-ON / OFF. The function only for channel motion detect active, not for motion record per each.

4. MOTION RELAY

-ON / OFF

5. >MOTION AREA SETUP<



Press direction buttons up/down to choose items.



Press values change button to change values.

> MOTION AREA SETUP <



All area detect with factory default. Press quad button to change mode and then increase or reduce.

For example:

Clear lattices





Press value change button to reduce. ◁

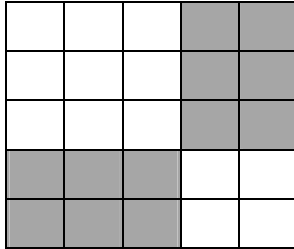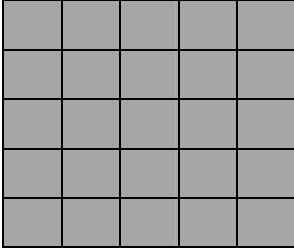

Add lattices



Press value change button to reduce. ▷

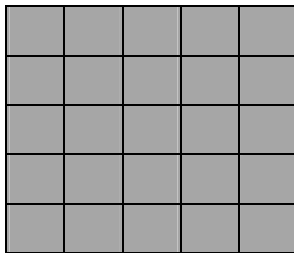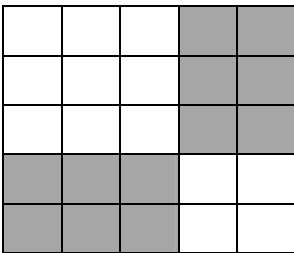

Icon:



Press ▷ to increase all area, press ◁ to reduce all area.

Icon:



Press Up / Down / Left / Right direction key to move, press ▷ to increase lattices; press ◁ to reduce lattices.



Icon: +

Press Up / Down / Left / Right direction key to move and increase area.

Icon: X

Press Up / Down / Left / Right direction key to move and reduce area.

3. RECORD SETUP

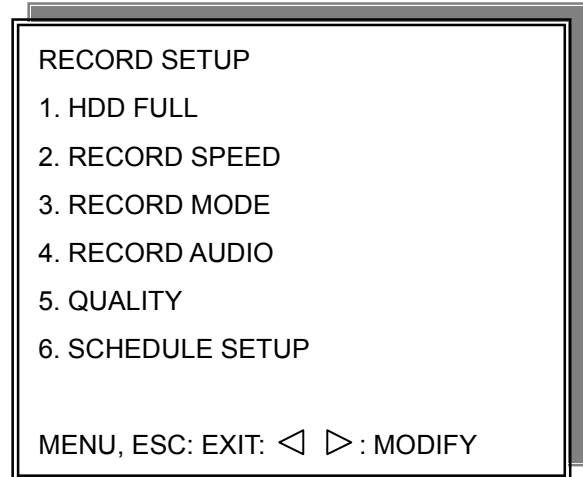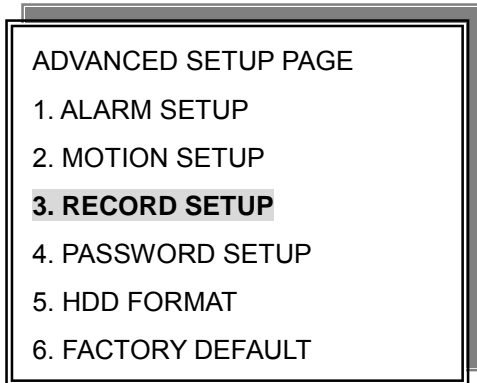

RECORD SETUP

- 1) HDD FULL: When hard disk is full, DVR next step is kept overwrite record or stop record?
-OVERWRITE / STOP REC
- 2) RECORD SPEED: Record FPS setup
-1/30(1/30), 1/15(1/15), 1/10(1/10), 1/5 (1/5), 1/3 (1/3), 1/2 (1/2), 1(1), 2(2), 3(3.13), 5(5), 10 (8.33), 15(12.5), 30(25), 60(50), 120(100).
- 3) RECORD MODE: Record mode setup.
-ALWAYS / SCHEDULE / EVENT / EVENT ON SCHEDULE / EVENT + SCHEDULE
- 4) RECORD AUDIO: Audio record setup (After 1 speed, audio record is not available.)
-ON / OFF
- 5) QUALITY: Record image quality setup
- SUPER / HIGH / FINE / NORMAL / LOW
- 6) SCHEDULE SETUP



Press direction buttons up/down to choose items.



Press values change button to change values.

Additional:

2. RECORD SPEED. 1/30(1/30), 1/15(1/15), 1/10(1/10), 1/5 (1/5), 1/3 (1/3), 1/2 (1/2), 1(1), 2(2), 3(3.13), 5(5), 10 (8.33), 15(12.5), 30(25), 60(50), 120(100).

-120 for the real time recording. When playback, it displays 30 frames per each channel on FULL screen, 15 frames per each channel on 4-split screen.

3. RECORD MODE. ALWAYS / SCHEDULE / EVENT / EVENT ON SCHEDULE / EVENT + SCHEDULE.

-Always: 24 hours recording. Manual record or stop.

-Schedule: Date and time schedule recording mode.

-Event: Alarm / Motion / V-Loss event mode recording.


-Event on schedule: Event record only on schedule time.

-Event + Schedule: Except event on schedule recording, it would still do record if event happens not on schedule time.

4. RECORD AUDIO: ON / OFF.

-Choose on, DVR would do audio recording.

>SCHEDULE SETUP<

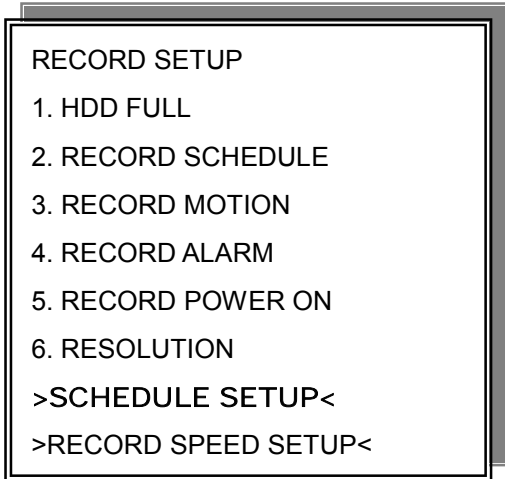

Press direction buttons up/down to SCHEDULE items.



Press values change button to change values.

 
Factory default is everyday all schedules time on recording.

SCHEDULE SETUP


CURSOR STEP

30MIN / 6MIN


SUN




MON

 


TUE

 


WED

 


THU

 

FRI

 

SAT

 

Press direction buttons up/down/left/right to see date and time difference.



Press values change left/right button to change 30MIN or 6 MIN

++ / -- : Increase / Reduce. Every day record with factory default.



On , use up/down button to choose date, press mode button to change on ++ or --. After, use direction left / right button to start increase or reduce time area.

Mode function button

++ increase


-- reduce

SCHEDULE SETUP

30MIN 

CURSOR STEP


SUN

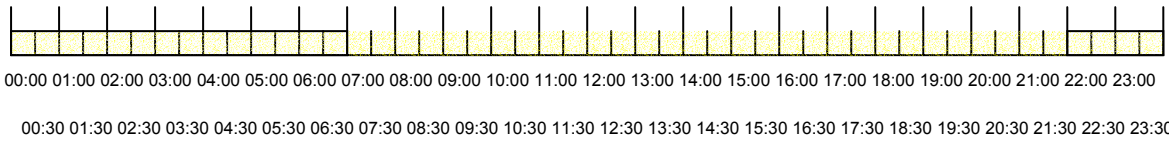


MON




TUE

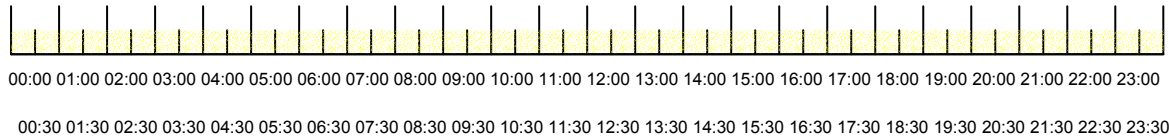


WED

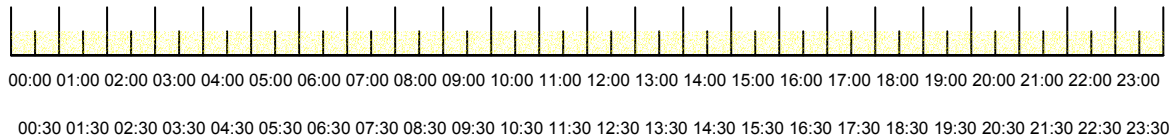


THU

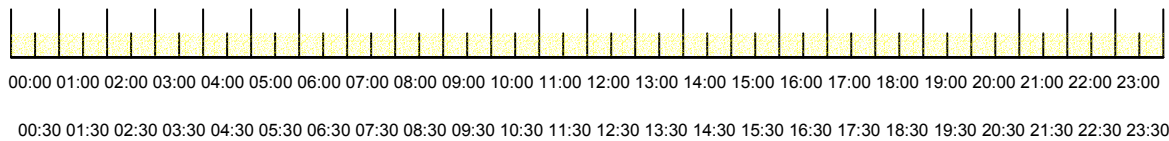

FRI


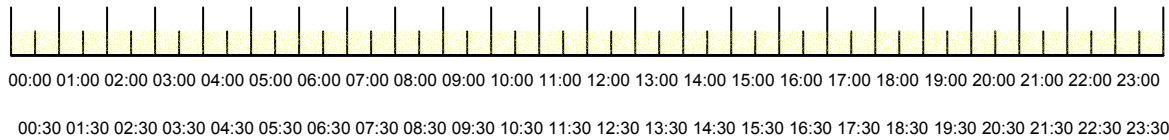


SAT

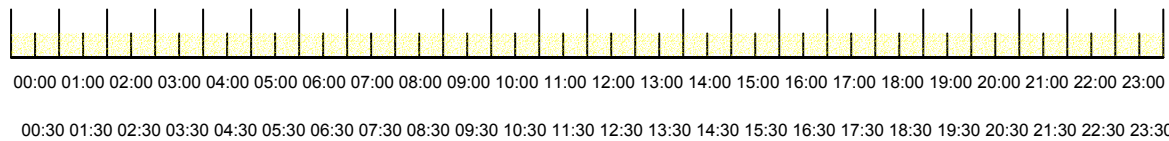

For example: TUE ~ SAT, all day schedule time recording, but SUN 07:00 ~ 22:00 and MON 01:30 ~ 11:30 do schedule recording. User can press ENTER to see the schedule time area difference.

5. PASSWORD SETUP

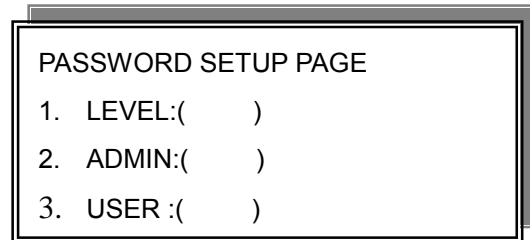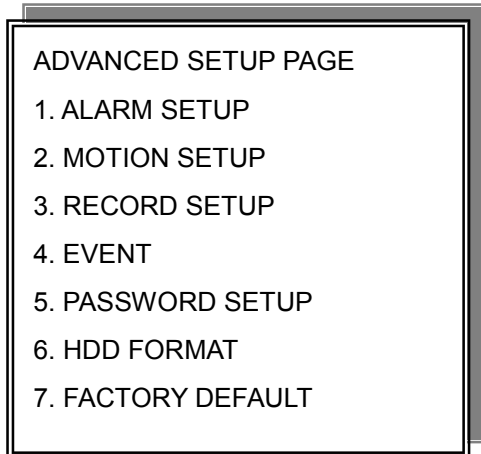

- 1) LEVEL (Log In level ID type setup)
>NONE / ADMIN / USER



Press direction buttons up/down/left/right to
Choose items position.

-ADMIN:

-USER



Press values change button to change values.

-NONE, user does not need to insert password before enter in MENU.

- 2) ADMIN password
>44444 (Factory Default)

Notice:

- 3) USER password
>11111 (Factory Default)

Password always 5 character input, cannot < 5 characters




Press direction buttons up/down/left/right to choose items position.

Press numeric (1 ~ 4)button or remote controller (1 ~ 4)to choose password.

Choose ADMIN: Only admin password can login advance menu.

Choose User: Both user and admin password can login menu but can not go advance menu.

6. HDD FORMAT

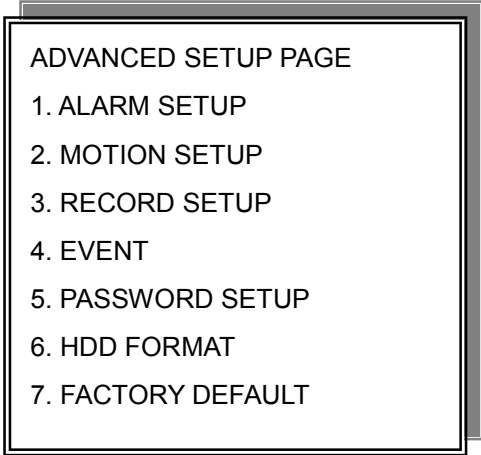


Press direction buttons up/down to
HDD FORMAT items position.

Press ENTER to format all HDD.

Caution: User can format HDD only when
all HDD stop record or playback.

→ HDD FORMAT CAUTION!! :

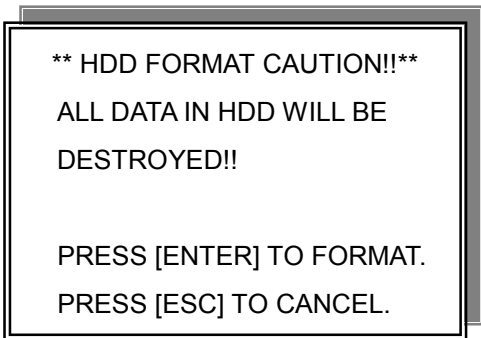


Press ENTER button to format hard disk.




Press ESC button to cancel hard disk format

7. FACTORY DEFAULT

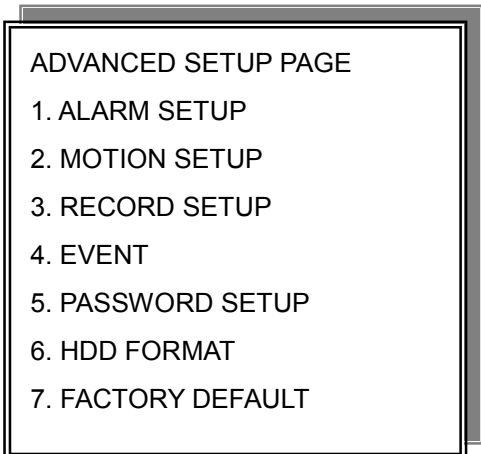

Press direction buttons up/down to
FACTORY DEFAULT items position.

Press ENTER to restore.

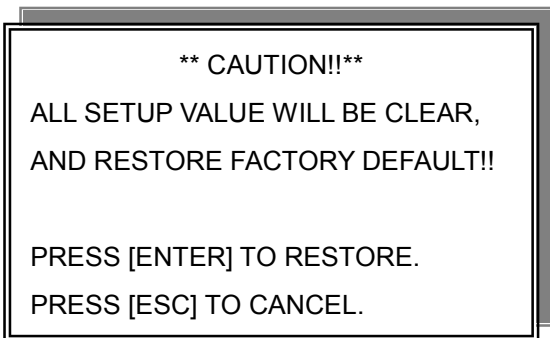

Press ENTER button to restore.



Press ESC button to cancel.

CF Card Data Read on PC


1. CD folder, save setup.exe to PC hard disk or double click it.
2. Acrobat Adobe PDF installed in PC is necessary




2. Install Shield Wizard processing.




3. Click Next.

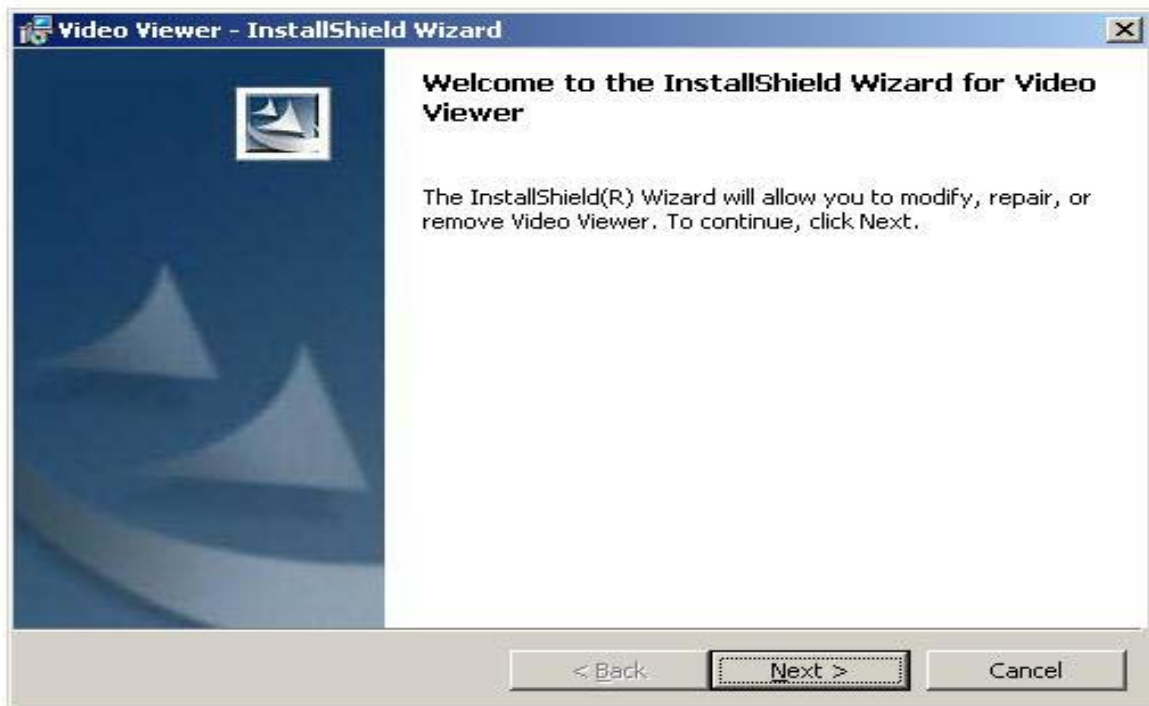

4. Choose folder.

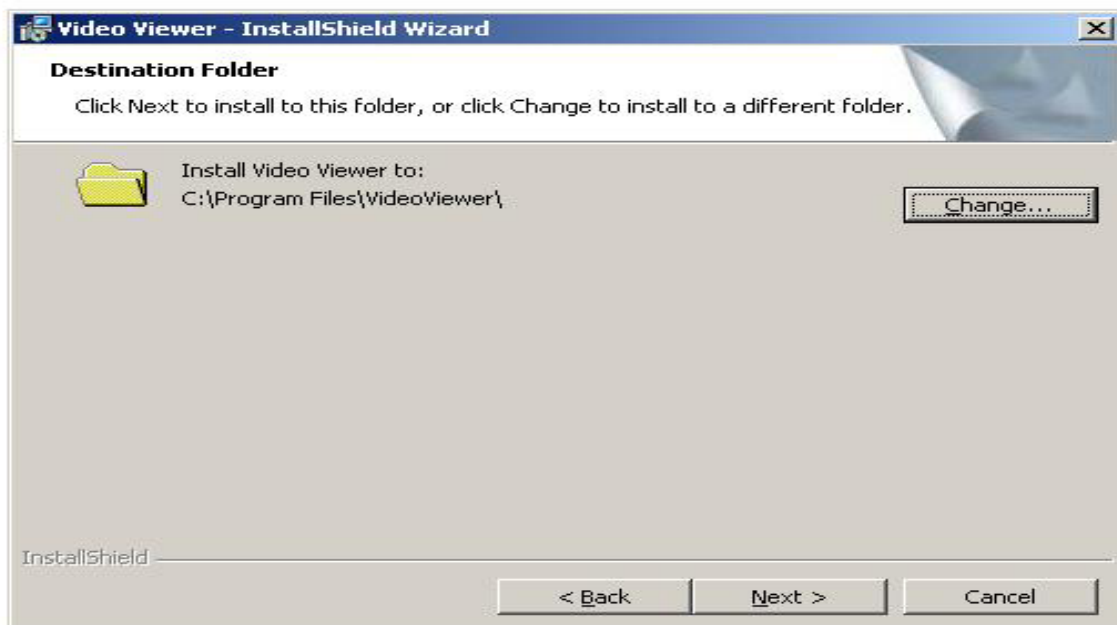


5. After choose folder, click OK.

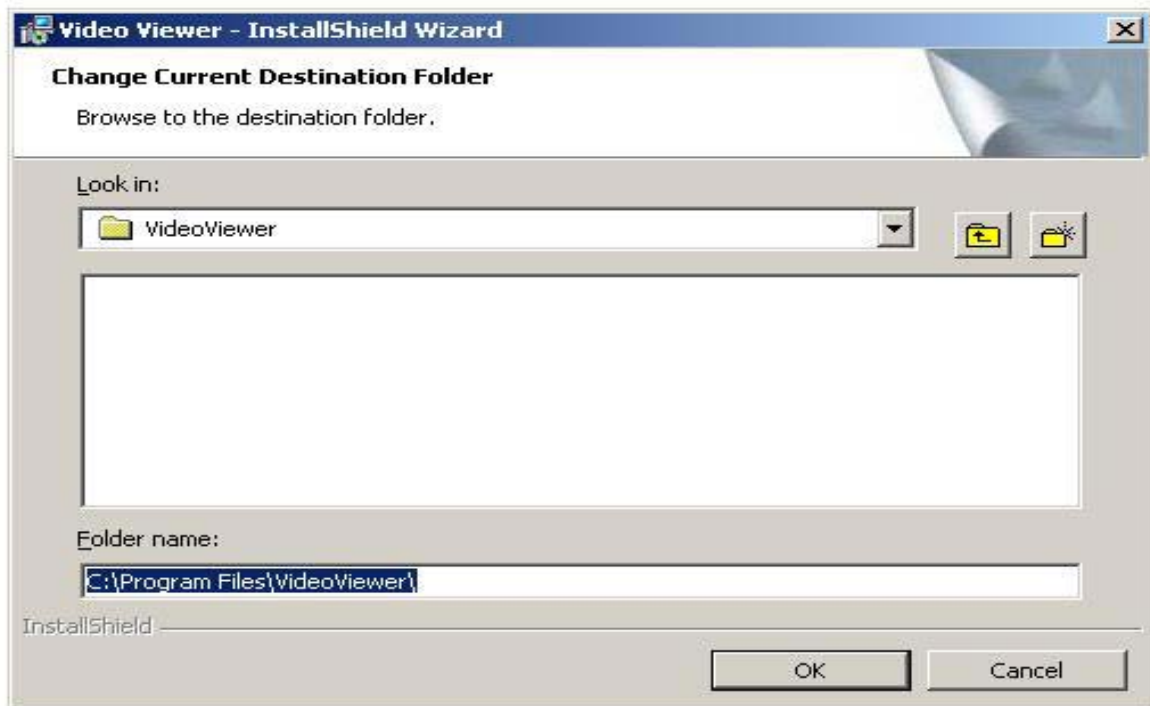

6. Click install to start.




7. Installing

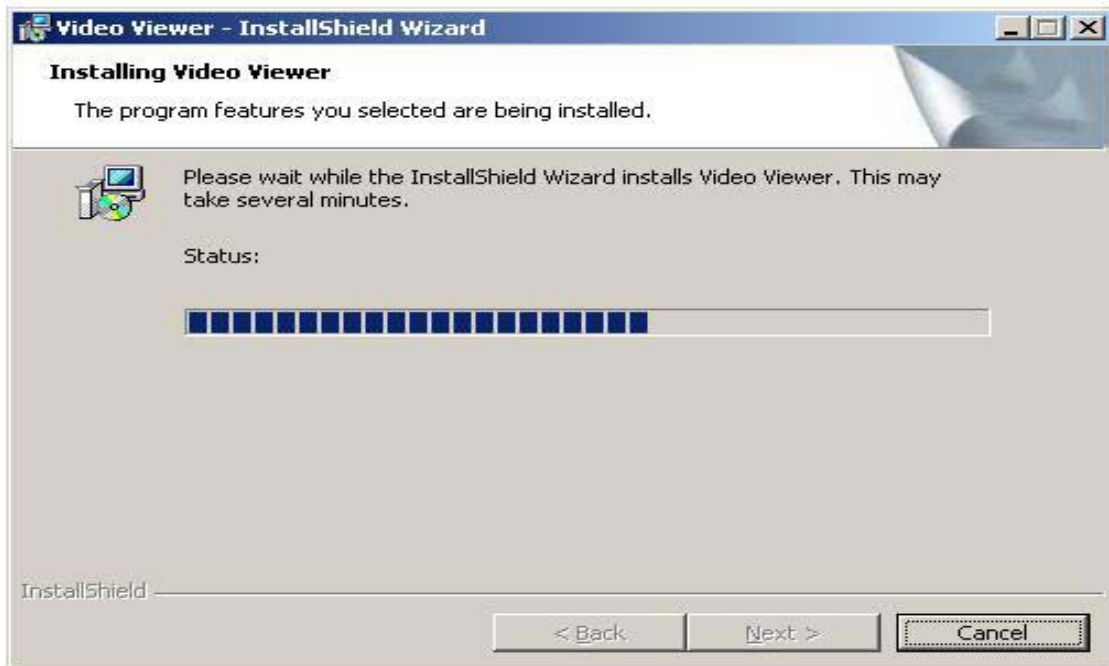


8. Click Finish



Start→Program→ Video Viewer→Video Viewer

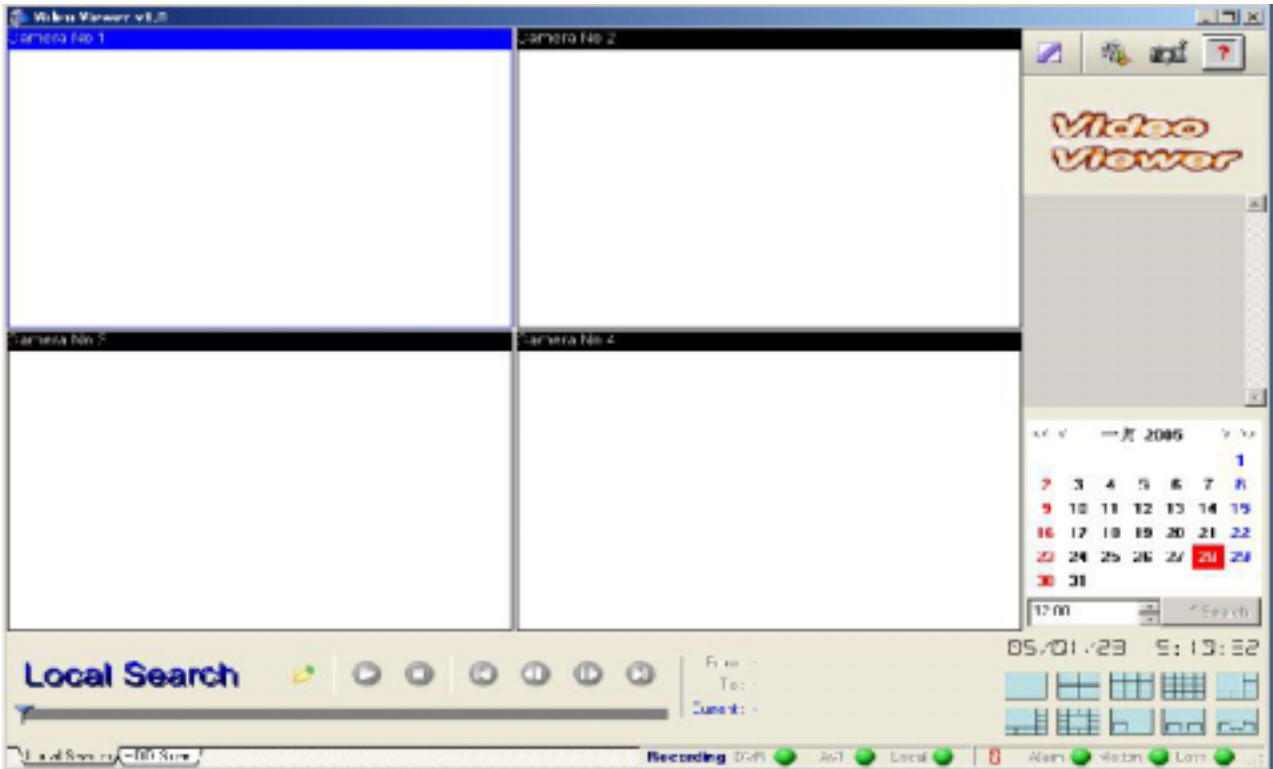


Click Local Search.

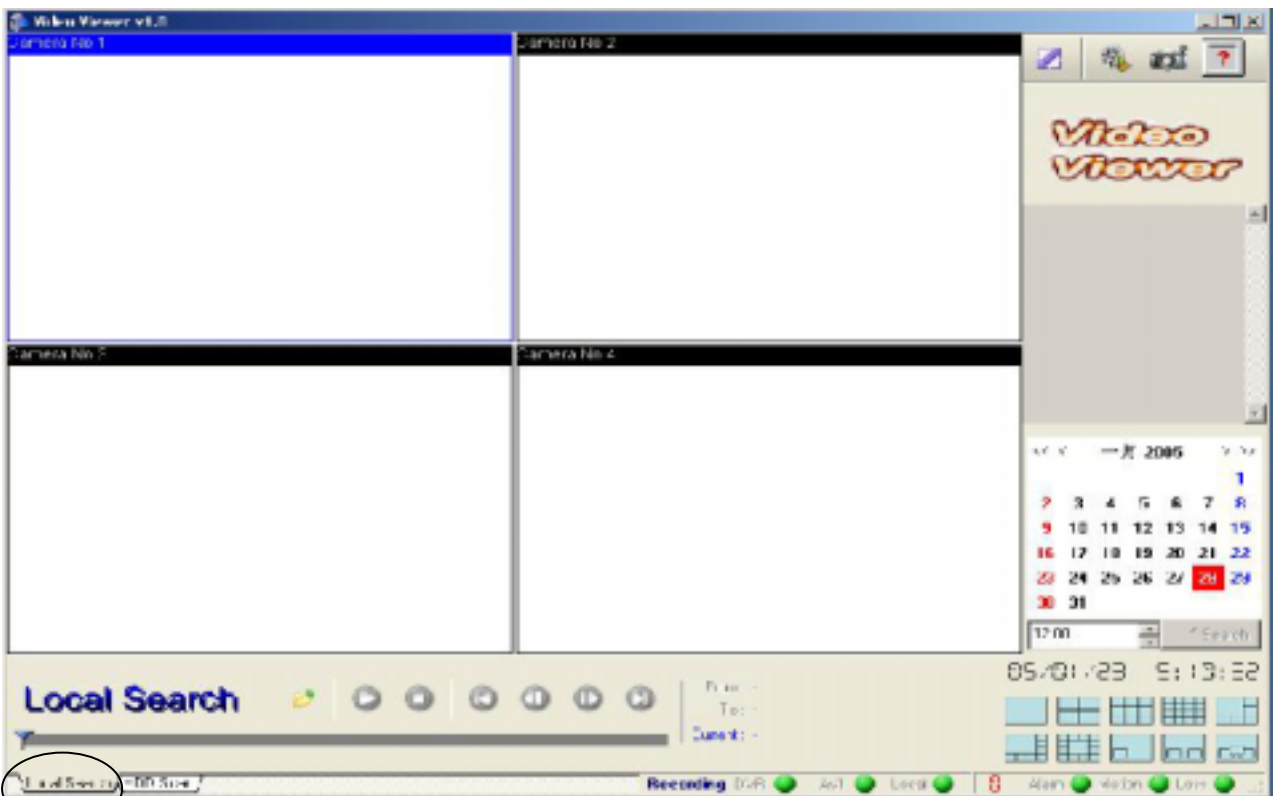


Left key of mouse click Local Search.

Choose folder

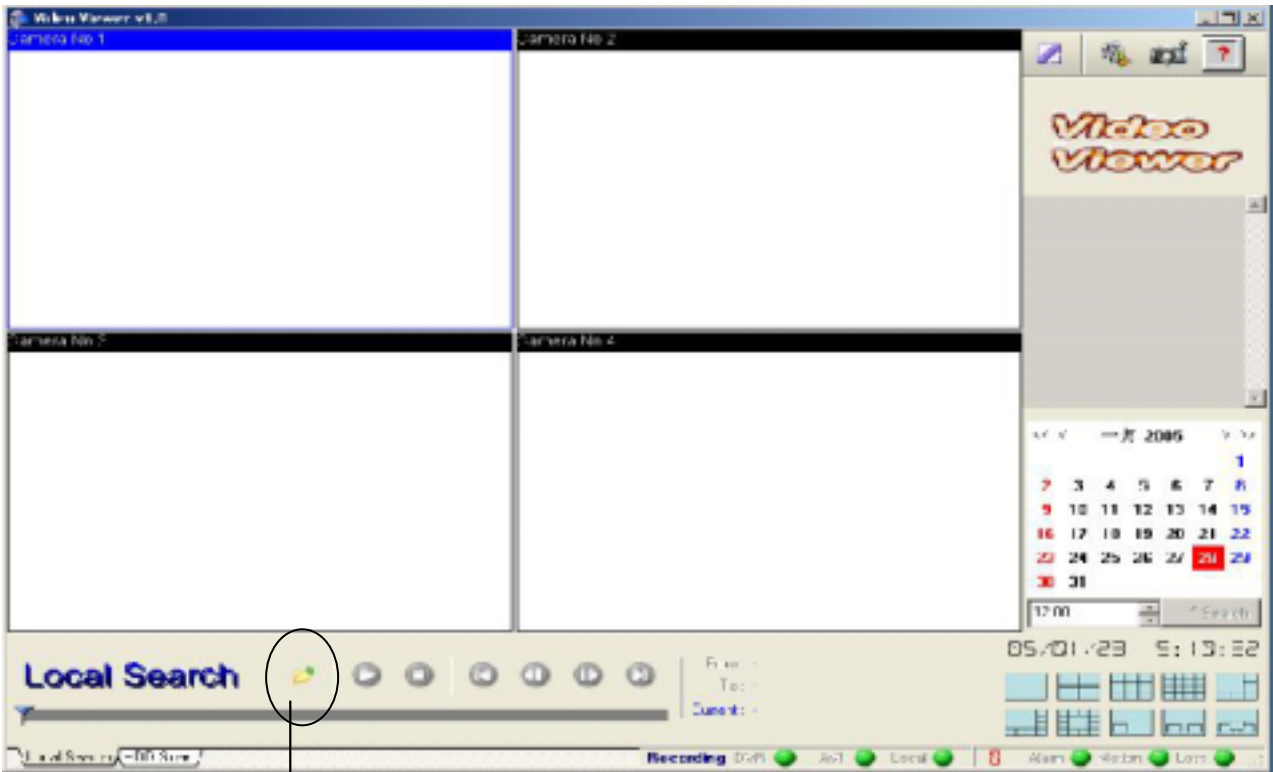


Click folder.

Choose new removable hard disk → BACKUP.DVR file. → OPEN.

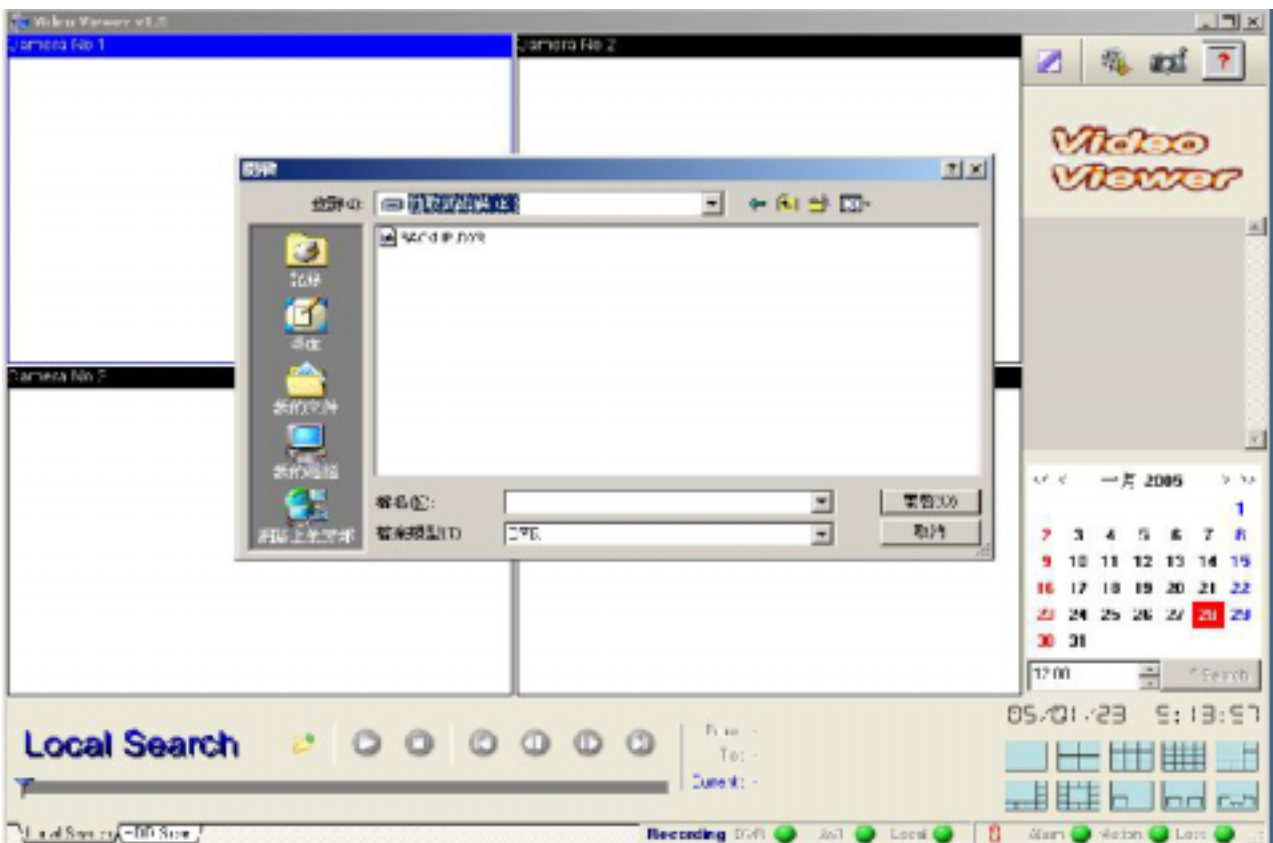


Start to playback

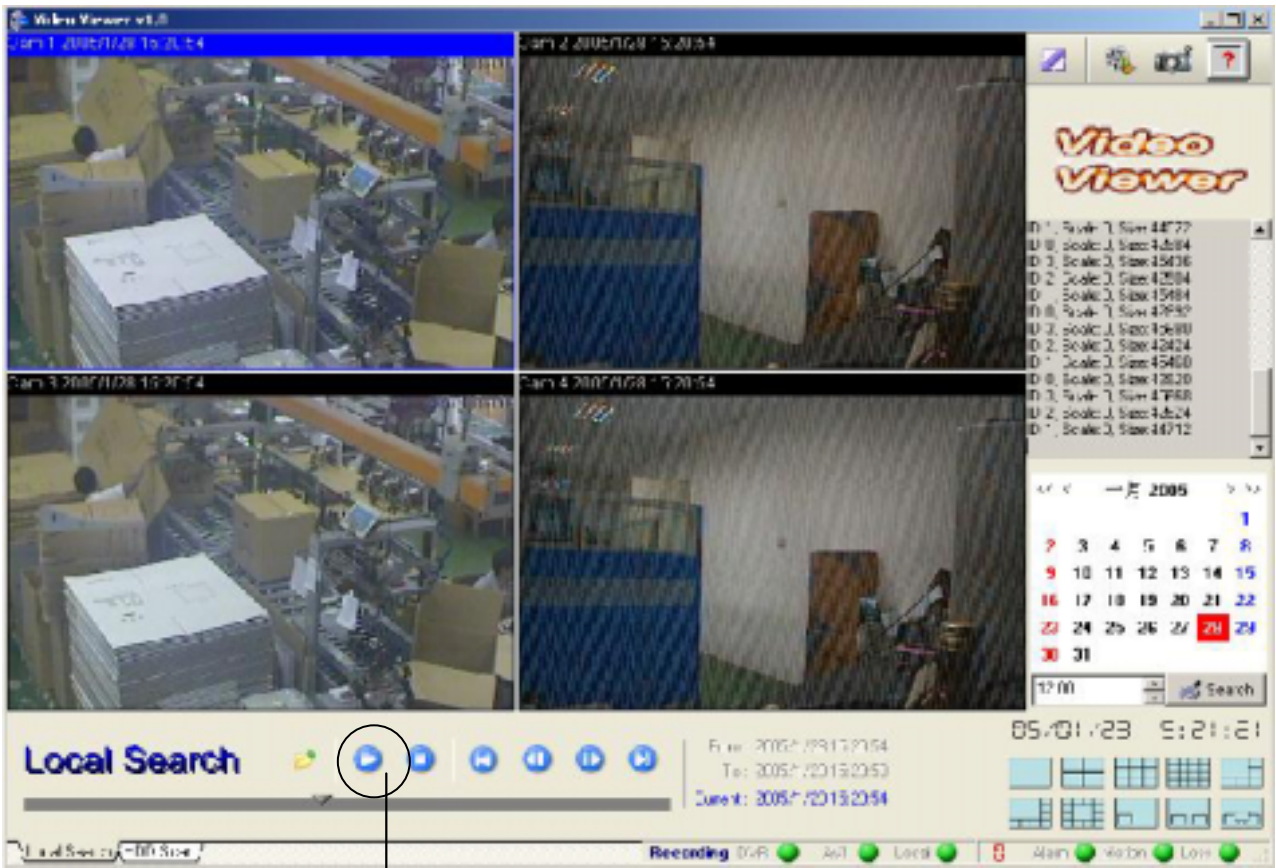

Left key of mouse click play


Icon:

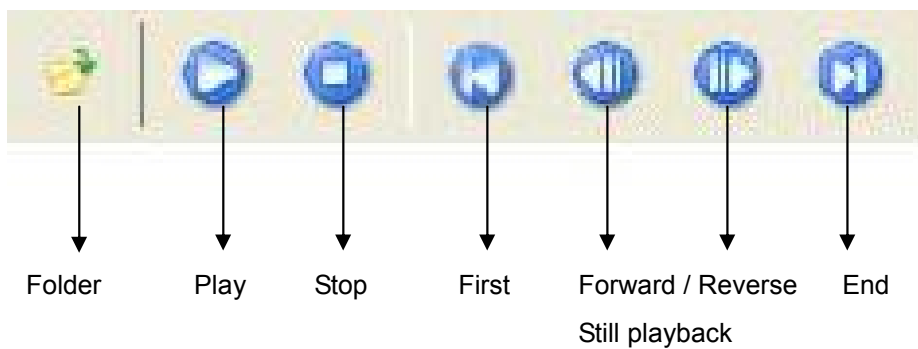

Picture capture save. (.JPG file saves.) Only camera full channel save, no quad pictures save.

For example: Channel 1 .jpg save. Mouse click 1 channel once, then click mouse right button.


Choose save as→choose the folder you want to save.

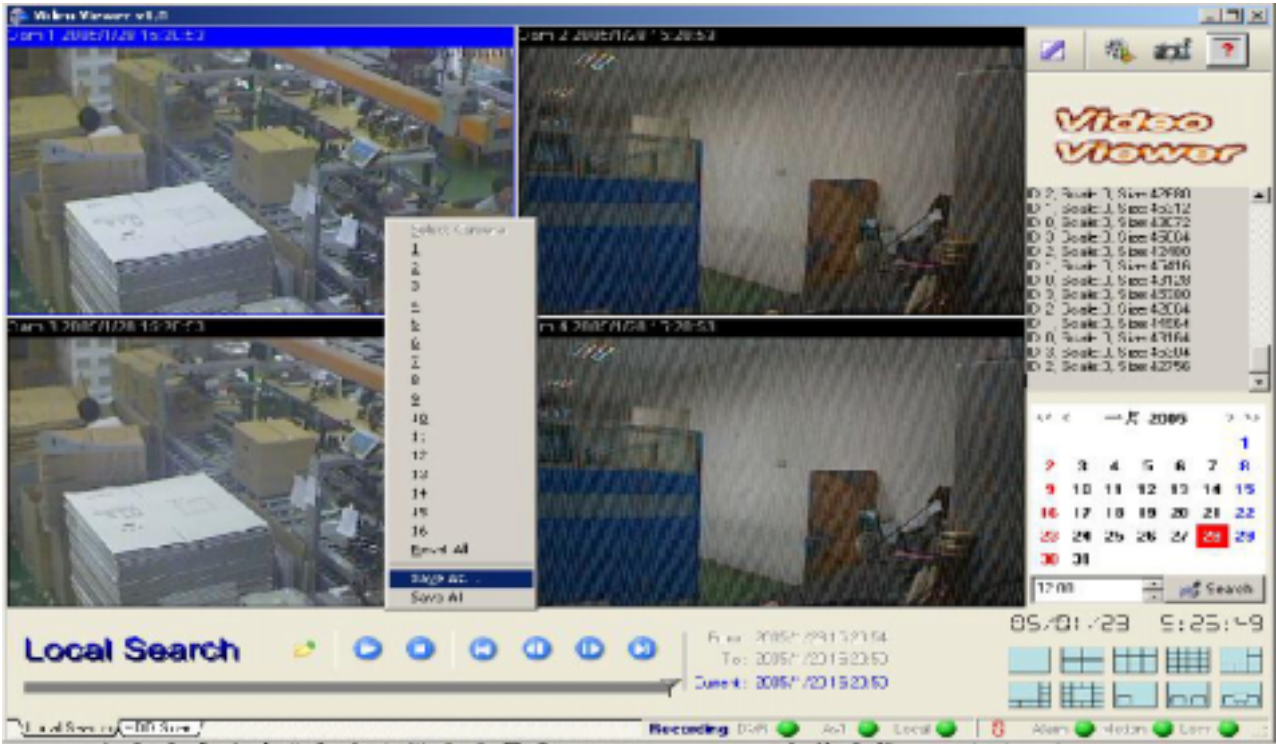

Type any file name you want, and then click save.




Or choose save all. Save all cameras full channel picture.

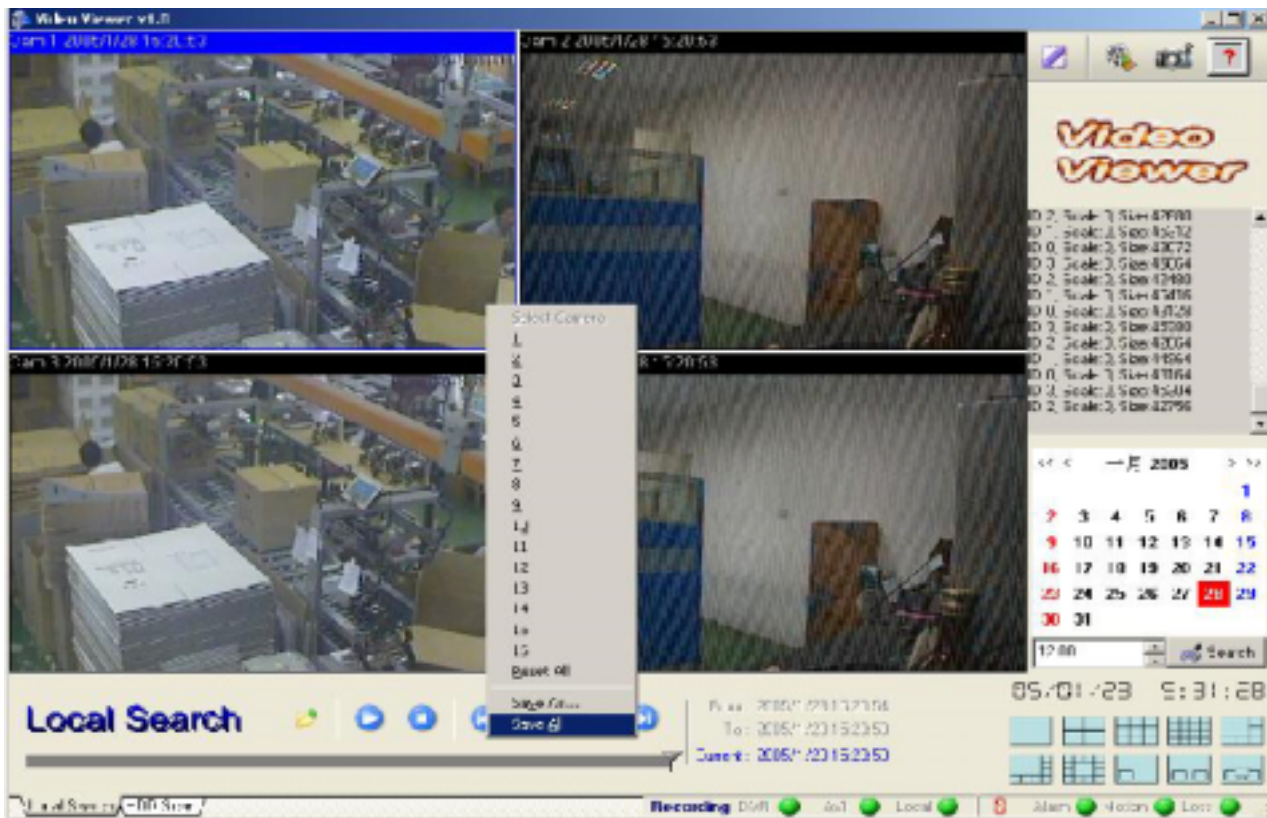


Choose folder and type file name.



Click mouse left button, blue bar display. Click mouse right button to choose 1 ~ 4 cameras to change position.

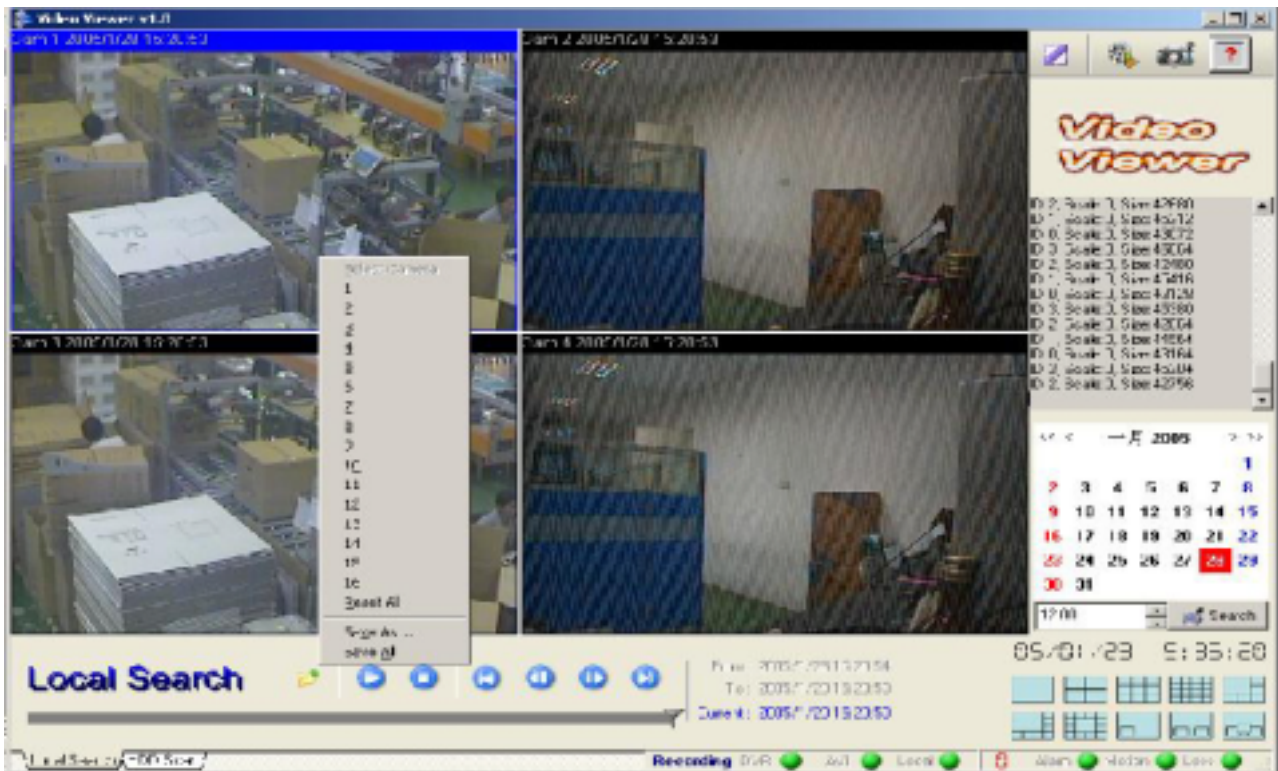

Icon function:

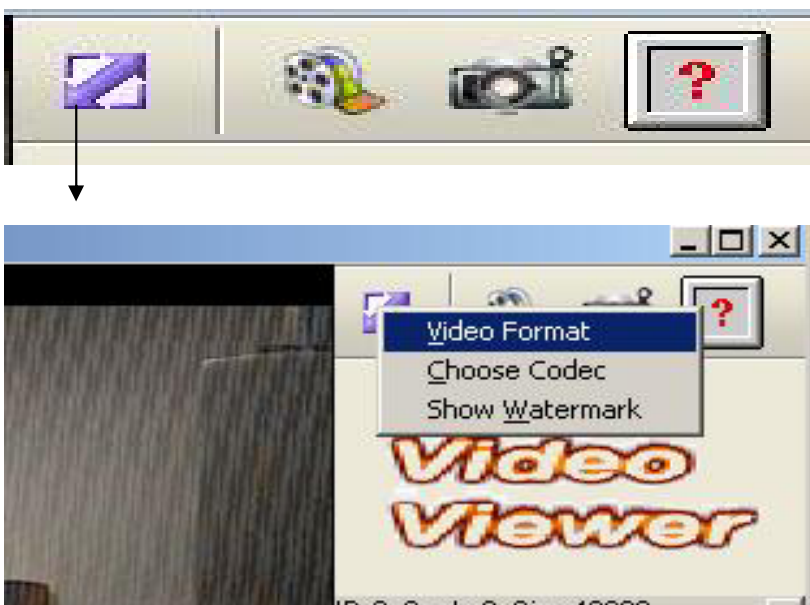


Setting:

Video Format: NTSC or PAL.


Choose Codec: AVI encode format.

Show Watermark: Water mark function on or off.

Video Format: Chose NTSC or PAL.

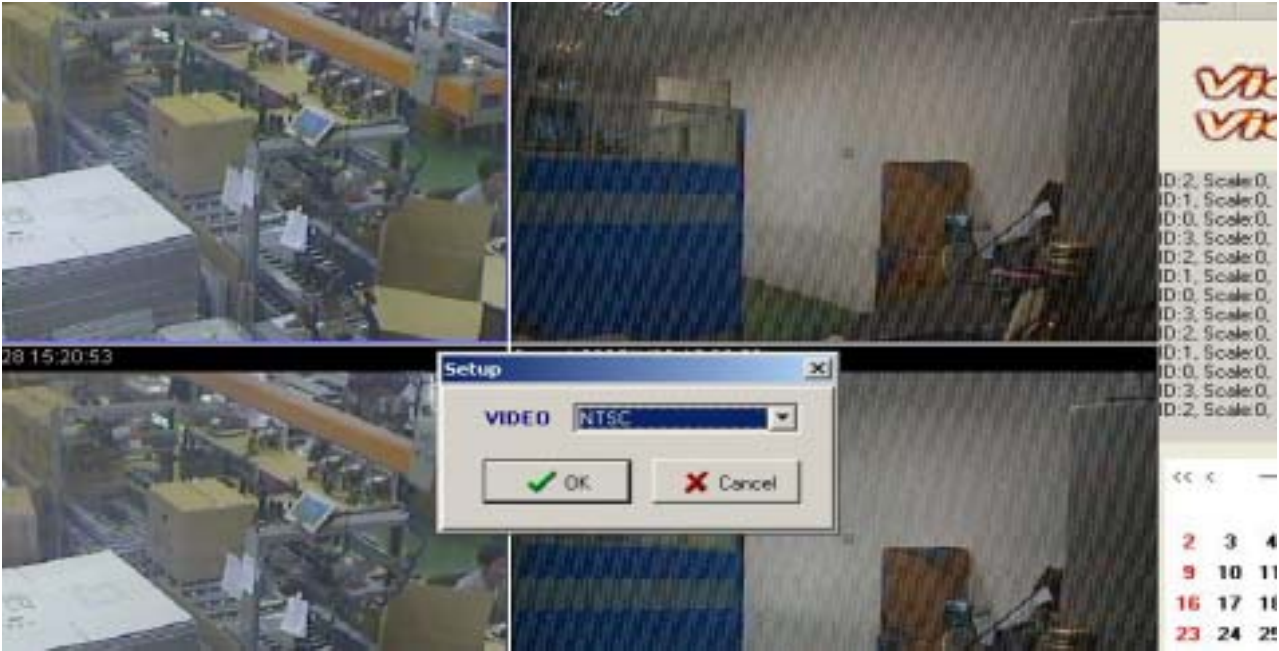

Choose Codec: File format.

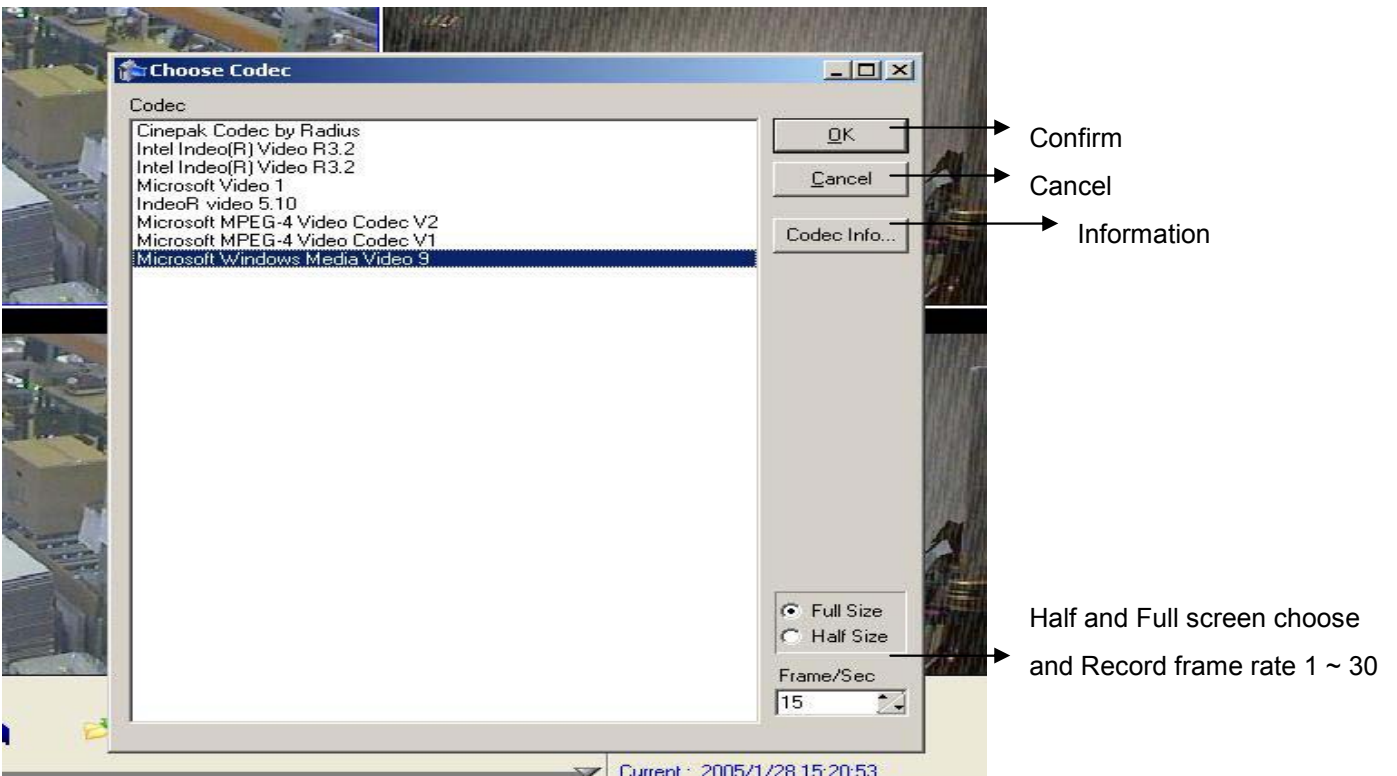

Show Watermark: Water mark function or off.


To check file has been modify or not.



AVI file save:




AVI button: AVI file save.

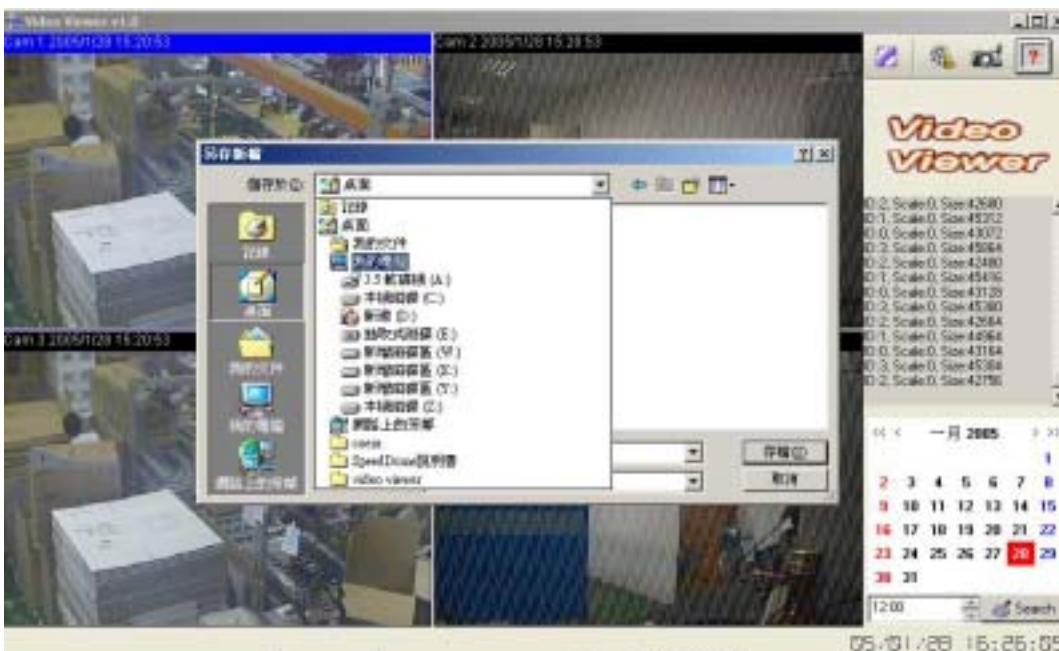


Choose folder and type file name

Click save:

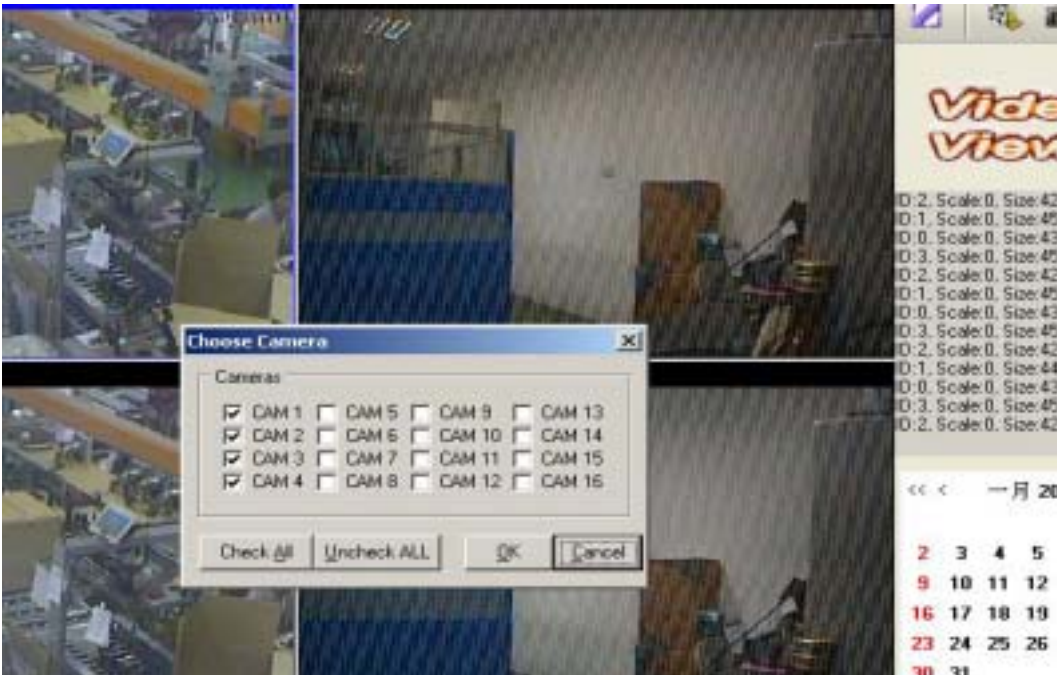

Choose 1 ~ 4,
and then click OK.


Click OK, and then AVI red light on:

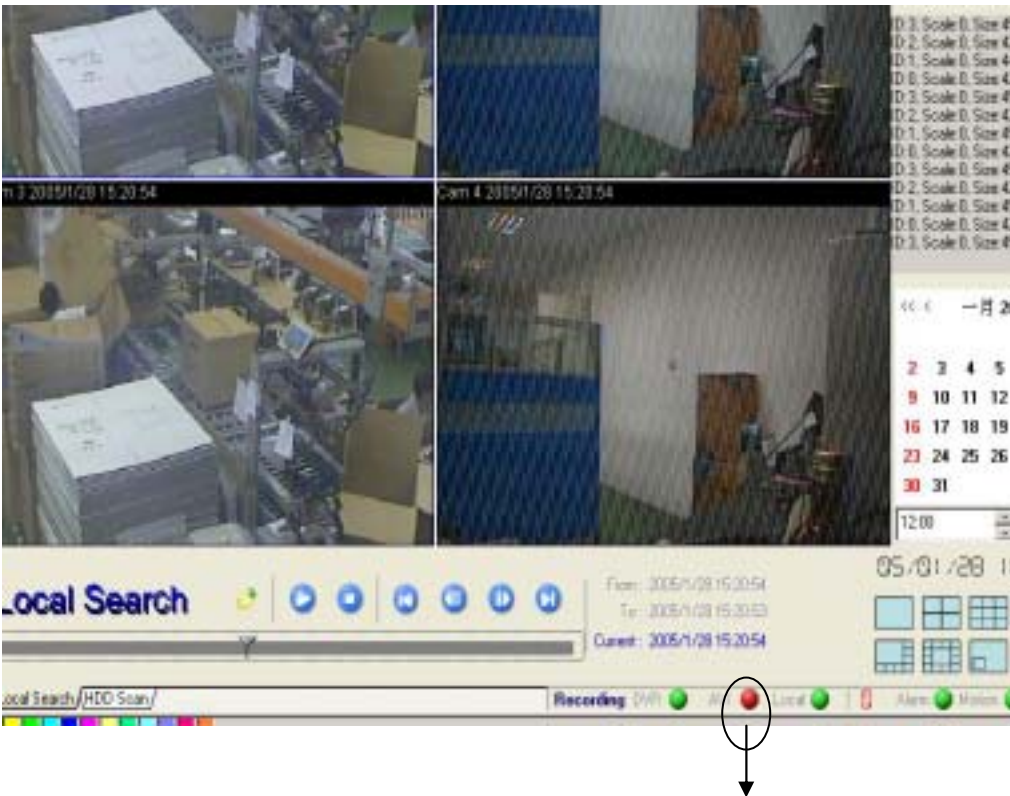


Click play button to start
record, Click AVI button to stop.

AVI red light on, start to record.

JPG file save:

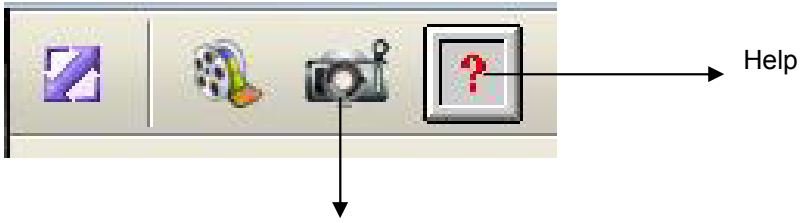


Choose folder and type file name
Choose camera 1 ~ 4 or save all.

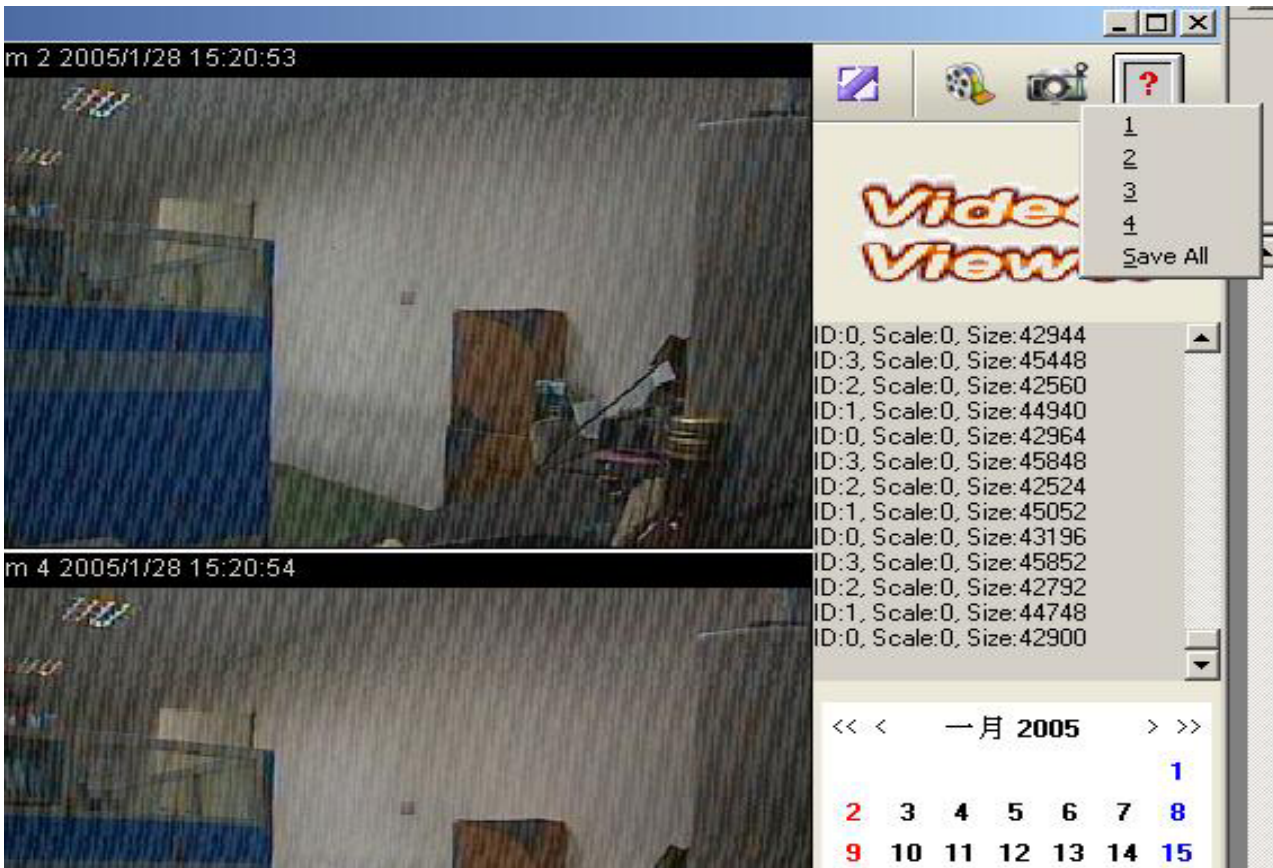

Hard Disk Data Read

1. Take HDD out from DVR to personal computer. Make sure hard disk in PC is Master or Slave, switch hard disk jumper to Master or Slave.
2. Computer power on, do not need to BIOS setup, just login Windows system.
3. Start→Program→ Video Viewer→ Video Viewer
4. Click HDD Scan.

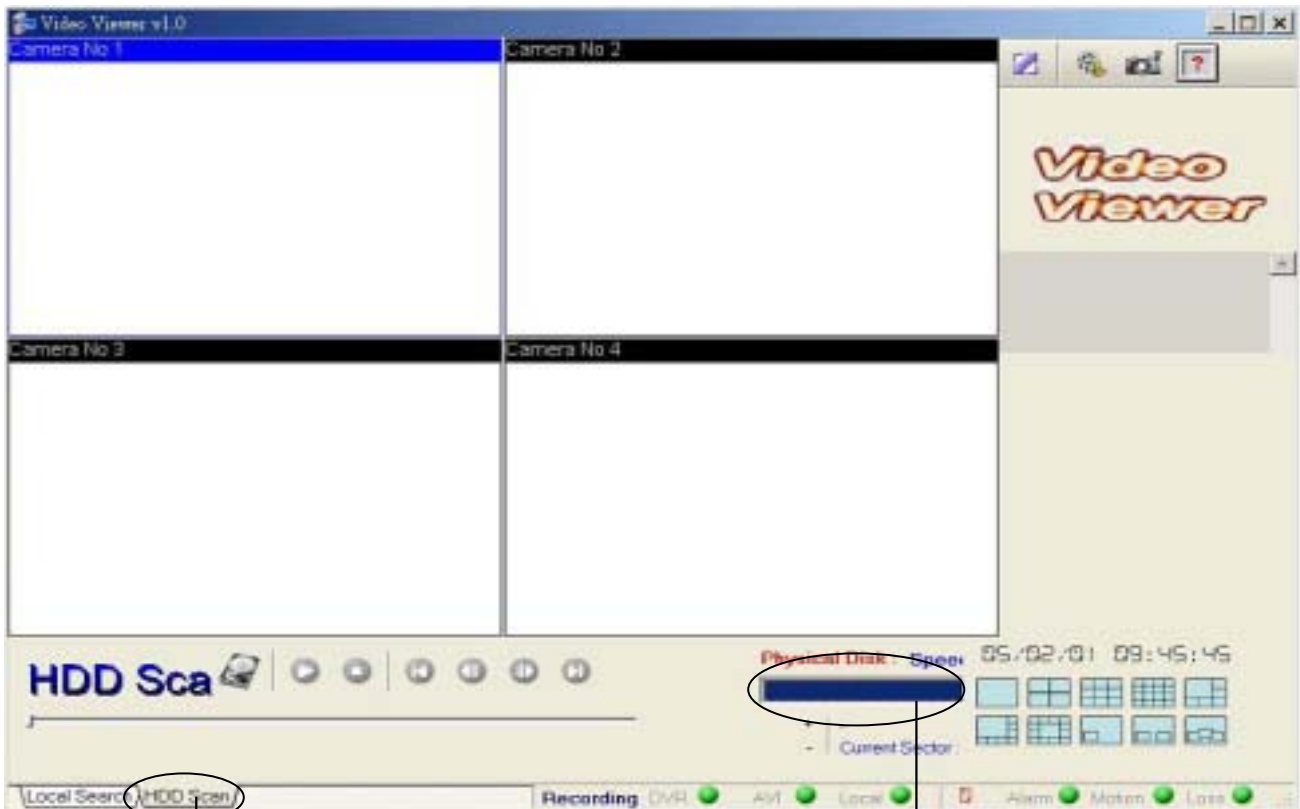

Left key of mouse click HDD Scan.


Click here, hard disk list on. Click the correct DVR hard disk, data will not loose if choose wrong HDD.

Hard Disk list on:



Click here, hard disk list on. Click the correct DVR hard disk, data will not loose if choose wrong HDD.

Click correct hard disk model, after function on, user can start to data read. Function access is same as prior pages.

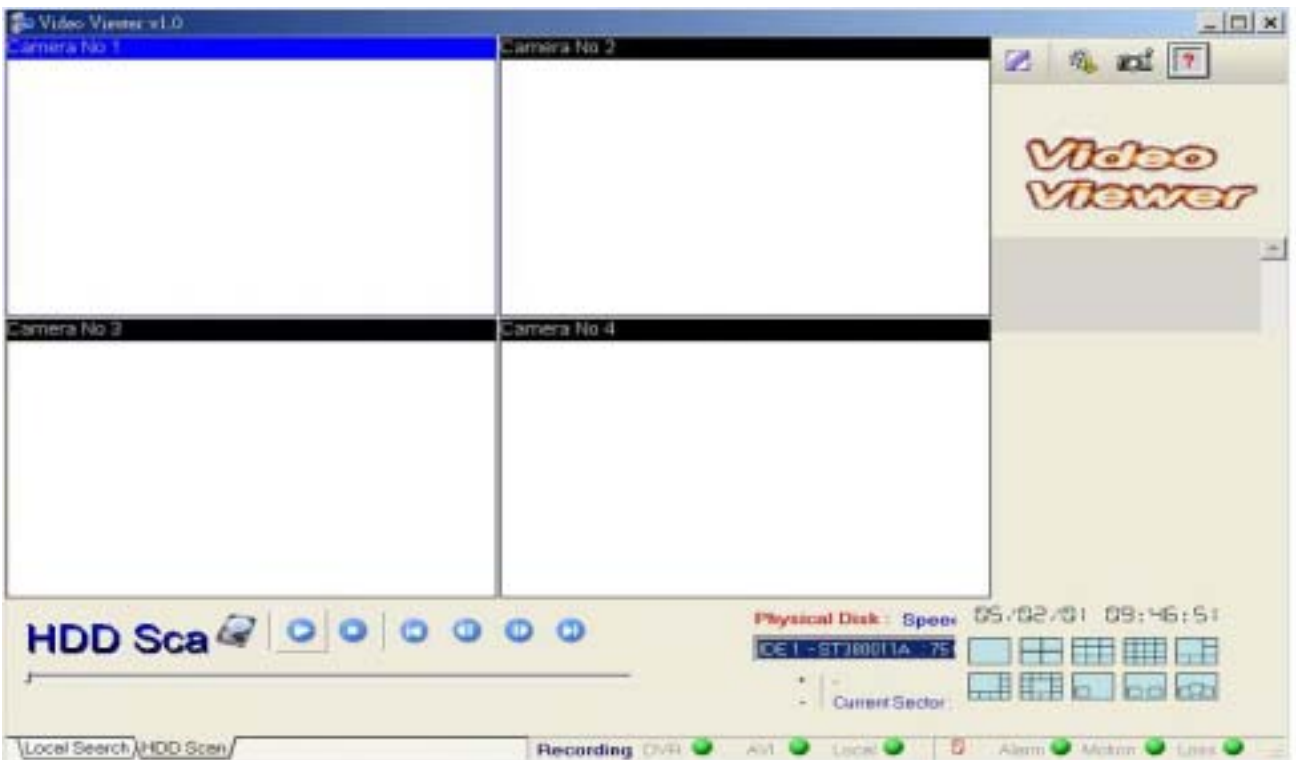

Record Time Table: 80GB HD

Record Quality: Low. KB Range: Lowest: 13, Highest: 20. Average: 17.

REC FPS	120	60	30	15	10
REC Hour	21.7	21.7	43.5	87.1	130.7
REC FPS	5	3	2	1	1/2
REC Hour	261.4	435.7	653.5	1307.1	2614.3
REC FPS	1/3	1/5	1/10	1/15	1/30
REC Hour	4357.2	6535.9	13071.8	21786.4	43572.8

Record Quality: Normal. KB Range: Lowest: 14, Highest: 25. Average: 20.

REC FPS	120	60	30	15	10
REC Hour	18.5	18.5	37	74	111.1
REC FPS	5	3	2	1	1/2
REC Hour	222.2	370.3	555.5	1111.1	2222.2
REC FPS	1/3	1/5	1/10	1/15	1/30
REC Hour	3703.7	5555.5	11111.1	18518.5	37037

Record Quality: Fine. KB Range: Lowest: 15, Highest: 28. Average: 22.

REC FPS	120	60	30	15	10
REC Hour	16.8	16.8	33.6	67.3	101
REC FPS	5	3	2	1	1/2
REC Hour	202	336.7	505	1010.1	2020.2
REC FPS	1/3	1/5	1/10	1/15	1/30
REC Hour	3367	5050.5	10101	16835	33670

Record Quality: High. KB Range: Lowest: 17, Highest: 30. Average: 24.

REC FPS	120	60	30	15	10
REC Hour	15.4	15.4	30.8	61.7	92.5
REC FPS	5	3	2	1	1/2
REC Hour	185.1	308.6	462.9	925.9	1851.8
REC FPS	1/3	1/5	1/10	1/15	1/30
REC Hour	3086.4	4629.6	9259.2	15432	30864.1

Record Quality: Super. KB Range: Lowest: 19, Highest: 45. Average: 32.

REC FPS	120	60	30	15	10
REC Hour	11.5	11.5	23.1	46.2	69.4
REC FPS	5	3	2	1	1/2
REC Hour	138.8	231.4	347.2	694.4	1388.8
REC FPS	1/3	1/5	1/10	1/15	1/30
REC Hour	2314.8	3472.2	6944.4	11574	23148.1


VGA Description (Optional)

Accessories:

1. 20 PIN Male to Female D-SUB pin cable X 1
2. VGA PCB bracket X1
3. Screws X4

(only fit on product serials Z7-00-VGA0-00)

1. VGA board introduction.

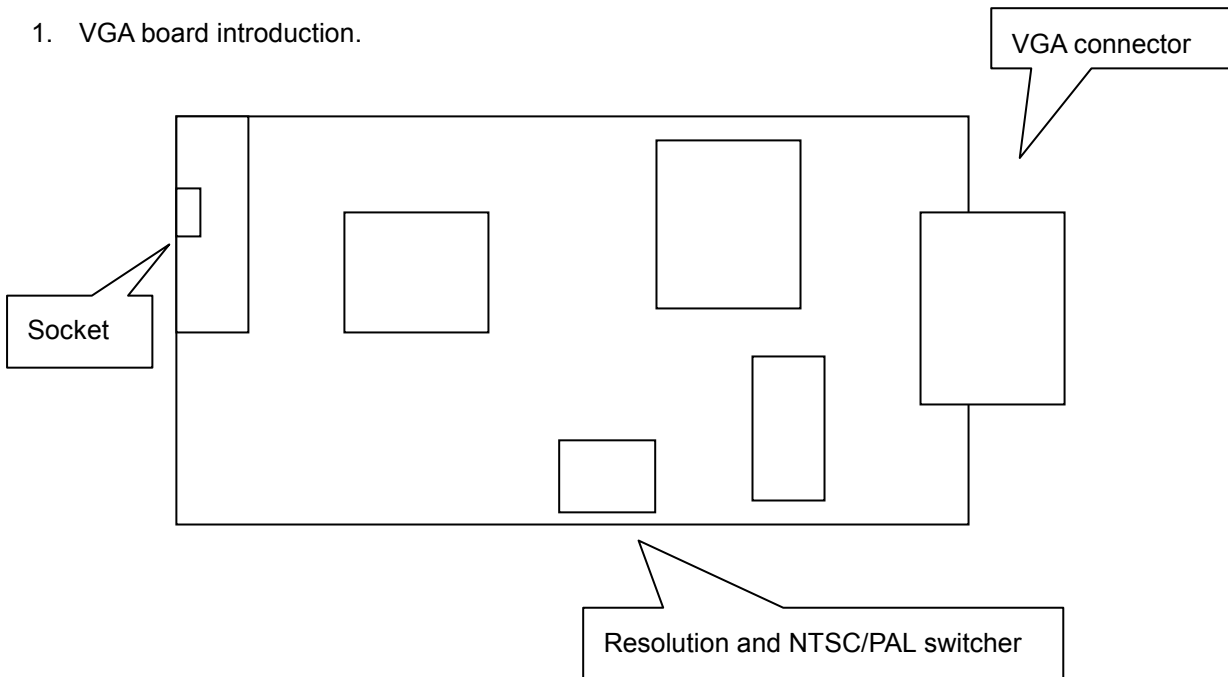



3. Resolution and NTSC/PAL switcher table

Pin 4	Resolution	Pin 1	Pin 2	Pin 3
PAL ----ON	640X480 60HZ	ON	ON	ON
NTSC ---OFF	800X600 60HZ	ON	ON	OFF
	1024X768 60HZ	ON	OFF	ON
	640X480 75HZ	ON	OFF	OFF
	800X600 75HZ	OFF	ON	ON
	1024X768 75HZ	OFF	ON	OFF
Resolution and NTSC/PAL switcher description				
Step. 1	DVR Power off			
Step. 2	Pin 4 switcher to NTSC or PAL			
Step. 3	DVR Power on			
Step. 4	Pin 1 ~3 switcher resolution. can not be power off DVR.			



Additional

Hard Disk x 2 can be installed on DVR base. Both are 2-iron slices immobile type.
2 Iron slices are in the accessories box, please tell supplier if slices are not exist

2-iron slices immobile type:

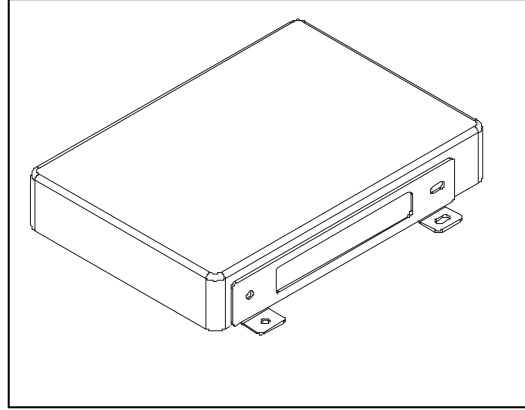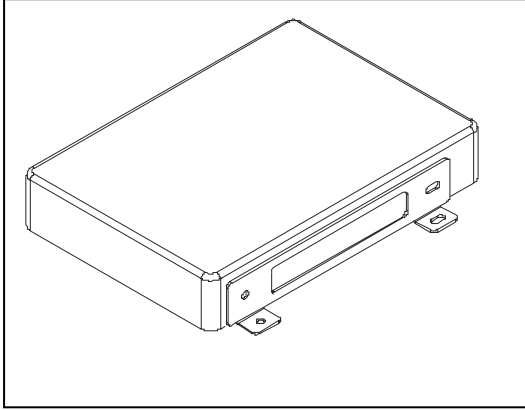

Slices immobile type: 4 screws hole on each slice. 2 for DVR base fixed. Another 2 for hard disk fixed.

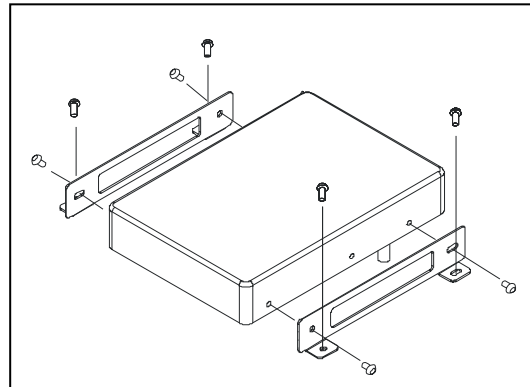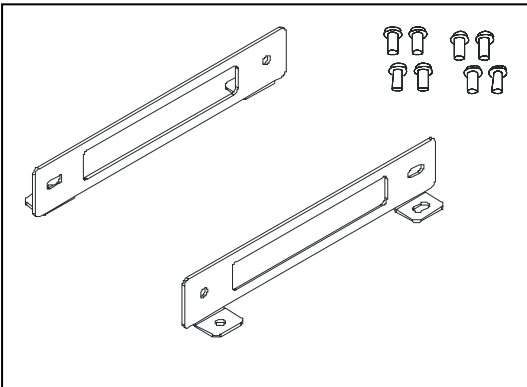

Hard disk install.: Locking hard disk screws, then locking DVR base screws to fixed on.

