



HIKVISION

Network Fisheye Camera

User Manual

UD.6L0201D1624A01

Thank you for purchasing our product. If there are any questions or requests, please do not hesitate to contact the dealer.

This manual applies to **DS-2CD6362F-I (V) (S)**, **DS-2CD6332FWD-I (V) (S)** network fisheye camera.

This manual may contain several technical incorrect places or printing errors, and the content is subject to change without notice. The updates will be added to the new version of this manual. We will readily improve or update the products or procedures described in the manual.

DISCLAIMER STATEMENT

“Underwriters Laboratories Inc. (“UL”) has not tested the performance or reliability of the security or signaling aspects of this product. UL has only tested for fire, shock or casualty hazards as outlined in UL’s Standard(s) for Safety, UL60950-1. UL Certification does not cover the performance or reliability of the security or signaling aspects of this product. UL MAKES NO REPRESENTATIONS, WARRANTIES OR CERTIFICATIONS WHATSOEVER REGARDING THE PERFORMANCE OR RELIABILITY OF ANY SECURITY OR SIGNALING RELATED FUNCTIONS OF THIS PRODUCT.”

Regulatory Information

FCC Information

FCC compliance: This equipment has been tested and found to comply with the limits for a digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

EU Conformity Statement



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the Low Voltage Directive 2006/95/EC, the EMC Directive 2004/108/EC, the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info.



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info.

Safety Instruction

These instructions are intended to ensure that the user can use the product correctly to avoid danger or property loss.

The precaution measure is divided into ‘Warnings’ and ‘Cautions’:

Warnings: Serious injury or death may be caused if any of these warnings are neglected.

Cautions: Injury or equipment damage may be caused if any of these cautions are neglected.

	
Warnings Follow these safeguards to prevent serious injury or death.	Cautions Follow these precautions to prevent potential injury or material damage.



Warnings:

- Please adopt the power adapter which can meet the safety extra low voltage (SELV) standard. And source with 12 VDC or 24 VAC (depending on models) according to the IEC60950-1 and Limited Power Source standard.
- If the product does not work properly, please contact your dealer or the nearest service center. Never attempt to disassemble the camera yourself. (We shall not assume any responsibility for problems caused by unauthorized repair or maintenance.)
- To reduce the risk of fire or electrical shock, do not expose this product to rain or moisture.
- This installation should be made by a qualified service person and should conform to all the local codes.
- Please install blackouts equipment into the power supply circuit for convenient supply interruption.
- Please make sure that the ceiling can support more than 50(N) Newton gravities if the camera is fixed to the ceiling.
- If the product does not work properly, please contact your dealer or the nearest service center. Never attempt to disassemble the camera yourself. (We shall not assume any responsibility for problems caused by unauthorized repair or maintenance.)



Cautions:

- Make sure the power supply voltage is correct before using the camera.
- Do not drop the camera or subject it to physical shock.
- Do not touch sensor modules with fingers. If cleaning is necessary, use a clean cloth with a bit of ethanol and wipe it gently. If the camera will not be used for an extended period of time, put on the lens cap to protect the sensor from dirt.
- Do not aim the camera lens at the strong light such as sun or incandescent lamp. The strong light can cause fatal damage to the camera.
- The sensor may be burned out by a laser beam, so when any laser equipment is being used, make sure that the surface of the sensor not be exposed to the laser beam.
- Do not place the camera in extremely hot, cold temperatures (the operating temperature should be between $-30\text{ }^{\circ}\text{C} \sim 60\text{ }^{\circ}\text{C}$, or $-40\text{ }^{\circ}\text{C} \sim 60\text{ }^{\circ}\text{C}$ if the camera model has an “H” in its suffix), dusty or damp environment, and do not expose it to high electromagnetic radiation.
- To avoid heat accumulation, good ventilation is required for a proper operating environment.
- Keep the camera away from water and any liquid.
- While shipping, the camera should be packed in its original packing.
- Improper use or replacement of the battery may result in hazard of explosion. Please use the manufacturer recommended battery type.

Notes:

For the camera supports IR, you are required to pay attention to the following precautions to prevent IR reflection:

- Dust or grease on the dome cover will cause IR reflection. Please do not remove the dome cover film until the installation is finished. If there is dust or grease on the dome cover, clean the dome cover with clean soft cloth and isopropyl alcohol.
- Make certain the installation location does not have reflective surfaces of objects too close to the camera. The IR light from the camera may reflect back into the lens causing reflection.
- The foam ring around the lens must be seated flush against the inner surface of the bubble to isolate the lens from the IR LEDS. Fasten the dome cover to camera body so that the foam ring and the dome cover are attached seamlessly.

Table of Contents

Chapter 1	System Requirement	8
Chapter 2	Network Connection	9
2.1	Setting the Network Camera over the LAN.....	9
2.1.1	Wiring over the LAN	9
2.1.2	Detecting and Changing the IP Address	10
2.2	Setting the Network Camera over the WAN.....	11
2.2.1	Static IP Connection	11
2.2.2	Dynamic IP Connection.....	12
Chapter 3	Access to the Network Camera	15
3.1	Accessing by Web Browsers	15
3.2	Accessing by Client Software	17
Chapter 4	Live View.....	18
4.1	Live View Page	18
4.2	Starting Live View.....	19
4.3	Recording and Capturing Pictures Manually	20
4.4	Operating PTZ Control	20
4.4.1	PTZ Control Panel	20
4.4.2	Setting / Calling a Preset.....	21
4.4.3	Setting / Calling a Patrol.....	22
Chapter 5	Network Camera Configuration.....	24
5.1	Configuring Local Parameters.....	24
5.2	Configuring Time Settings	26
5.3	Configuring Network Settings	28
5.3.1	Configuring TCP/IP Settings	28
5.3.2	Configuring Port Settings	29
5.3.3	Configuring PPPoE Settings.....	30
5.3.4	Configuring DDNS Settings	30
5.3.5	Configuring SNMP Settings	34
5.3.6	Configuring 802.1X Settings	35
5.3.7	Configuring QoS Settings.....	36
5.3.8	Configuring UPnP™ Settings.....	37
5.3.9	Email Sending Triggered by Alarm	38
5.3.10	Configuring NAT (Network Address Translation) Settings	40
5.3.11	Configuring FTP Settings	41
5.4	Configuring Video and Audio Settings.....	42
5.4.1	Configuring Video Settings	42

5.4.2	Configuring Audio Settings	44
5.4.3	Configuring ROI Encoding.....	45
5.5	Configuring Image Parameters	47
5.5.1	Configuring Display Settings	47
5.5.2	Configuring OSD Settings	50
5.5.3	Configuring Privacy Mask.....	51
5.6	Configuring and Handling Alarms.....	52
5.6.1	Configuring Motion Detection.....	52
5.6.2	Configuring Video Tampering Alarm	55
5.6.3	Configuring Alarm Input	56
5.6.4	Configuring Alarm Output.....	57
5.6.5	Handling Exception	58
5.6.6	Configuring Line Crossing Detection.....	59
5.6.7	Configuring Intrusion Detection	60
5.7	Configuring Heat Map.....	62
Chapter 6	Storage Settings	65
6.1	Configuring NAS Settings	65
6.2	Configuring Recording Schedule.....	67
6.3	Configuring Snapshot Settings	71
Chapter 7	Playback.....	73
Chapter 8	Log Searching.....	75
Chapter 9	Others.....	76
9.1	Managing User Accounts.....	76
9.2	Configuring RTSP Authentication.....	78
9.3	Anonymous Visit	78
9.4	IP Address Filter.....	79
9.5	Security Service	81
9.6	Viewing Device Information.....	81
9.7	Maintenance	82
9.7.1	Rebooting the Camera	82
9.7.2	Restoring Default Settings	83
9.7.3	Exporting / Importing Configuration File	83
9.7.4	Upgrading the System.....	84
9.8	RS-232 Settings.....	84
9.9	RS-485 Settings.....	85
9.10	Fisheye Parameters	86

Appendix.....	88
Appendix 1 SADP Software Introduction.....	88
Appendix 2 Port Mapping.....	91

Chapter 1 System Requirement

Operating System: Microsoft Windows XP SP1 and above version / Vista / Win7 /

Server 2003 / Server 2008 32bits

CPU: Intel Pentium IV 3.0 GHz or higher

RAM: 1G or higher

Display: 1024×768 resolution or higher

Web Browser: Internet Explorer 6.0 and above version, Safari 5.02 and above version, Mozilla Firefox 3.5 and above version and Google Chrome8 and above versions.

Chapter 2 Network Connection

Before you start:

- If you want to set the network camera via a LAN (Local Area Network), please refer to *Section 2.1 Setting the Network Camera over the LAN*.
- If you want to set the network camera via a WAN (Wide Area Network), please refer to *Section 2.2 Setting the Network Camera over the WAN*.

2.1 Setting the Network Camera over the LAN

Purpose:

To view and configure the camera via a LAN, you need to connect the network camera in the same subnet with your computer, and install the SADP or iVMS-4200 software to search and change the IP of the network camera.

Note: For the detailed introduction of SADP, please refer to Appendix 1.

2.1.1 Wiring over the LAN

The following figures show the two ways of cable connection of a network camera and a computer:

Purpose:

- To test the network camera, you can directly connect the network camera to the computer with a network cable as shown in Figure 2-1.
- Refer to the Figure 2-2 to set network camera over the LAN via a switch or a router.

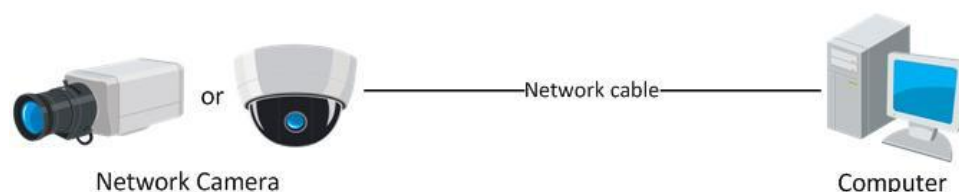


Figure 2-1 Connecting Directly

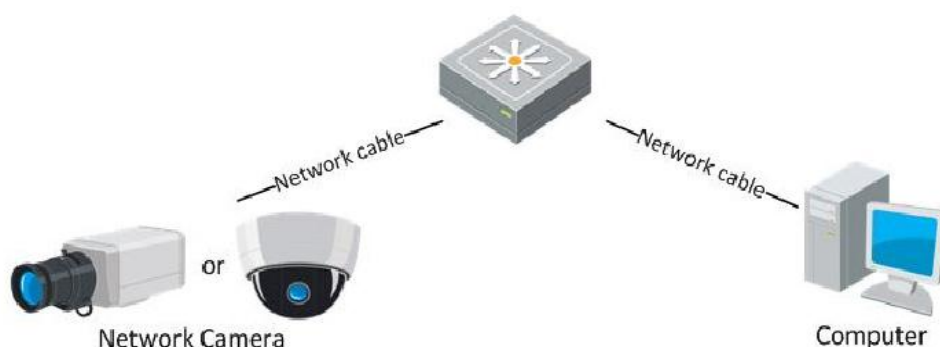


Figure 2-2 Connecting via a Switch or a Router

2.1.2 Detecting and Changing the IP Address

You need the IP address to visit the network camera.

Steps:

1. To get the IP address, you can choose either of the following methods:
 - ◆ Use SADP, a software tool which can automatically detect the online network cameras in the LAN and list the device information including IP address, subnet mask, port number, device serial number, device version, etc., shown in Figure 2-3.
 - ◆ Use the iVMS-4200 client software to list the online devices. Please refer to the user manual of iVMS-4200 client software for detailed information.
2. Change the IP address and subnet mask to the same subnet as that of your computer.
3. Enter the IP address of network camera in the address field of the web browser to view the live video.

Notes:

- The default IP address is 192.0.0.64 and the port number is 8000. The default user name is admin, and password is 12345.
- For accessing the network camera from different subnets, please set the gateway for the network camera after you logged in. For detailed information, please refer to *Section 5.3.1 Configuring TCP/IP Settings*.

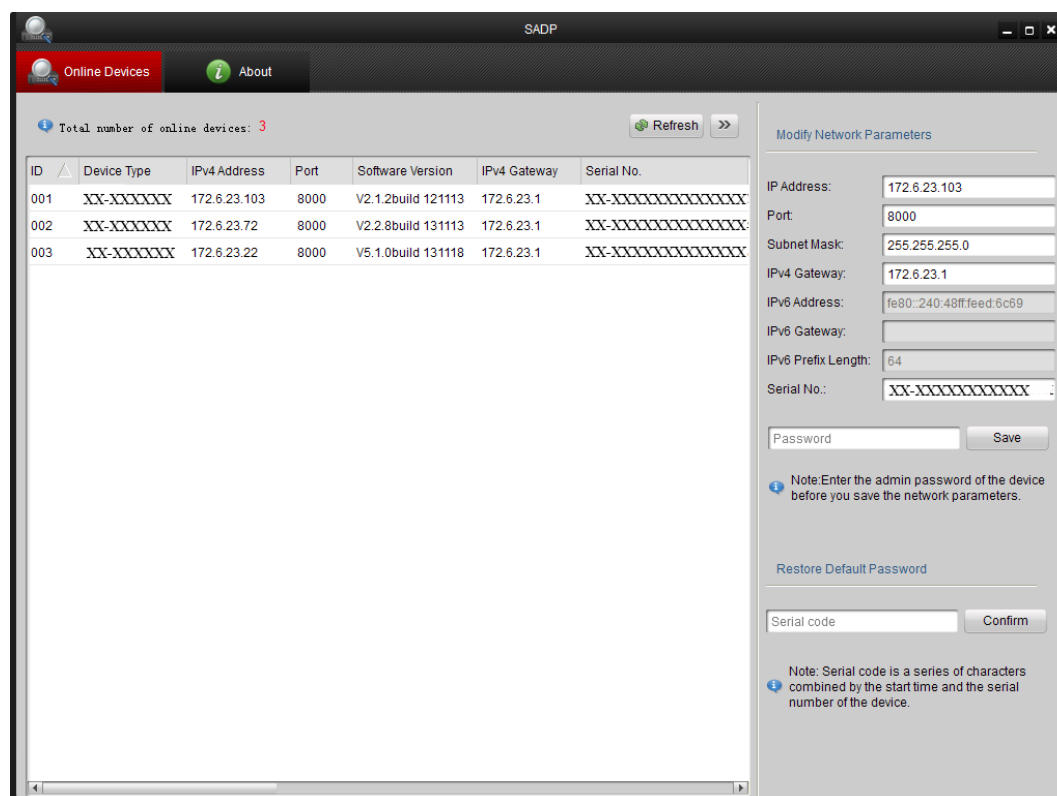


Figure 2-3 SADP Interface

2.2 Setting the Network Camera over the WAN

Purpose:

This section explains how to connect the network camera to the WAN with a static IP or a dynamic IP.

2.2.1 Static IP Connection

Before you start:

Please apply a static IP from an ISP (Internet Service Provider). With the static IP address, you can connect the network camera via a router or connect it to the WAN directly.

- **Connecting the network camera via a router**

Steps:

1. Connect the network camera to the router.

2. Assign a LAN IP address, the subnet mask and the gateway. Refer to *Section 2.1.2 Detecting and Changing the IP Address* for detailed IP address configuration of the camera.
3. Save the static IP in the router.
4. Set port mapping, e.g., 80, 8000, and 554 ports. The steps for port mapping vary according to the different routers. Please call the router manufacturer for assistance with port mapping.

Note: Refer to Appendix 2 for detailed information about port mapping.

5. Visit the network camera through a web browser or the client software over the internet.

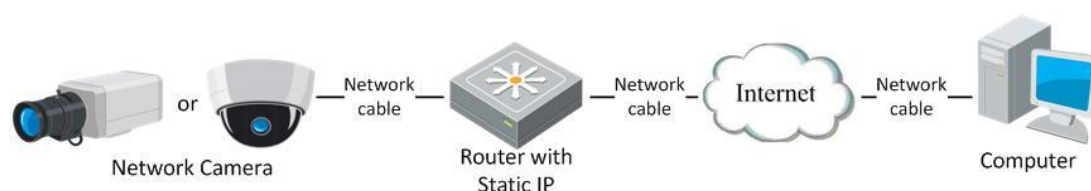


Figure 2-4 Accessing the Camera through Router with Static IP

- **Connecting the network camera with static IP directly**

You can also save the static IP in the camera and directly connect it to the internet without using a router. Refer to *Section 2.1.2 Detecting and Changing the IP Address* for detailed IP address configuration of the camera.

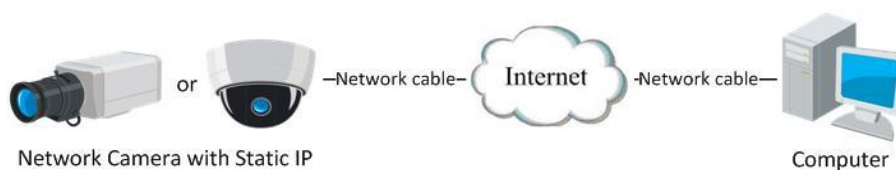


Figure 2-5 Accessing the Camera with Static IP Directly

2.2.2 Dynamic IP Connection

Before you start:

Please apply a dynamic IP from an ISP. With the dynamic IP address, you can connect the network camera to a modem or a router.

- **Connecting the network camera via a router**

Steps:

1. Connect the network camera to the router.
2. In the camera, assign a LAN IP address, the subnet mask and the gateway. Refer to *Section 2.1.2 Detecting and Changing the IP Address* for detailed LAN configuration.
3. In the router, set the PPPoE user name, password and confirm the password.
4. Set port mapping. E.g. 80, 8000, and 554 ports. The steps for port mapping vary depending on different routers. Please call the router manufacturer for assistance with port mapping.

Note: Refer to Appendix 2 for detailed information about port mapping.

5. Apply a domain name from a domain name provider.
6. Configure the DDNS settings in the setting interface of the router.
7. Visit the camera via the applied domain name.

● Connecting the network camera via a modem

Purpose:

This camera supports the PPPoE auto dial-up function. The camera gets a public IP address by ADSL dial-up after the camera is connected to a modem. You need to configure the PPPoE parameters of the network camera. Refer to *Section 5.3.3 Configuring PPPoE Settings* for detailed configuration.

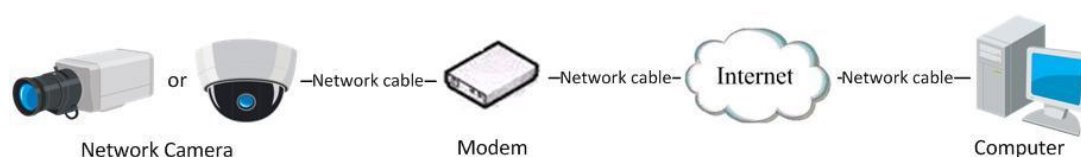


Figure 2-6 Accessing the Camera with Dynamic IP

Note: The obtained IP address is dynamically assigned via PPPoE, so the IP address always changes after rebooting the camera. To solve the inconvenience of the dynamic IP, you need to get a domain name from the DDNS provider (E.g. DynDns.com). Please follow the steps below for normal domain name resolution and private domain name resolution to solve the problem.

◆ Normal Domain Name Resolution

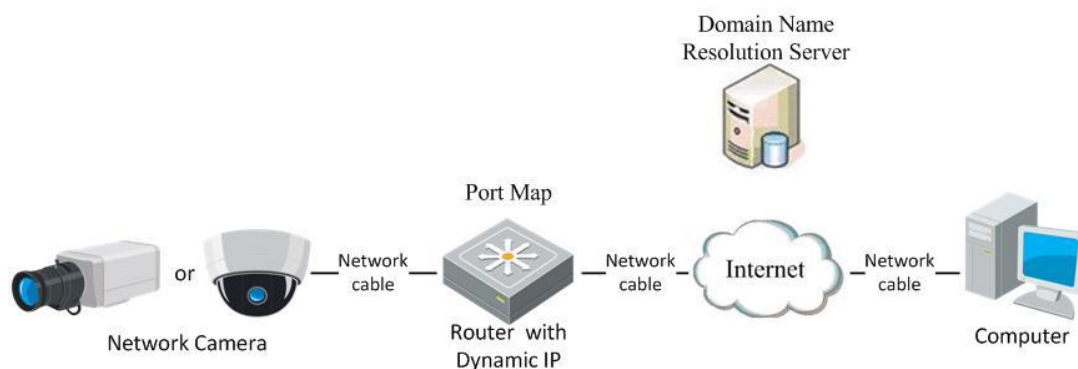


Figure 2-7 Normal Domain Name Resolution

Steps:

1. Apply a domain name from a domain name provider.
2. Configure the DDNS settings in the **DDNS Settings** interface of the network camera. Refer to *Section 5.3.4 Configuring DDNS Settings* for detailed configuration.
3. Visit the camera via the applied domain name.

◆ Private Domain Name Resolution

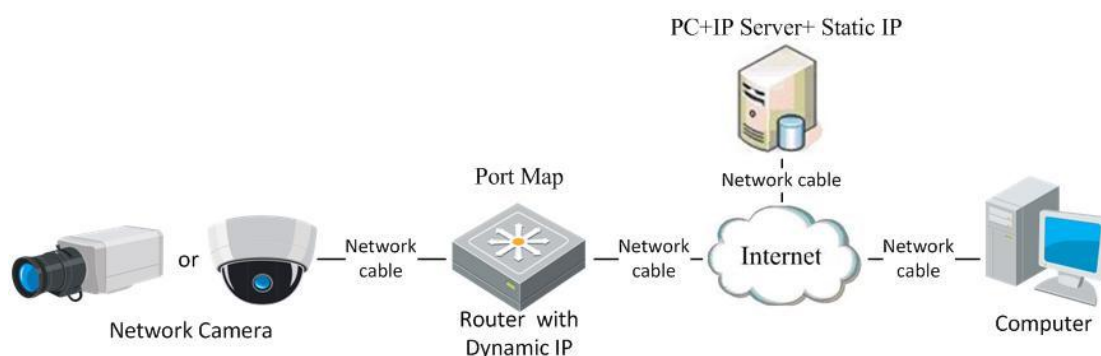


Figure 2-8 Private Domain Name Resolution

Steps:

1. Install and run the IP Server software in a computer with a static IP.
2. Access the network camera through the LAN with a web browser or the client software.
3. Enable DDNS and select IP Server as the protocol type. Refer to *Section 5.3.4 Configuring DDNS Settings* for detailed configuration.

Chapter 3 Access to the Network Camera

3.1 Accessing by Web Browsers

Steps:

1. Open the web browser.
2. Input the IP address of the network camera in the address bar, e.g., 192.0.0.64 and press the **Enter** key to enter the login interface.
3. Input the user name and password and click **Login**.

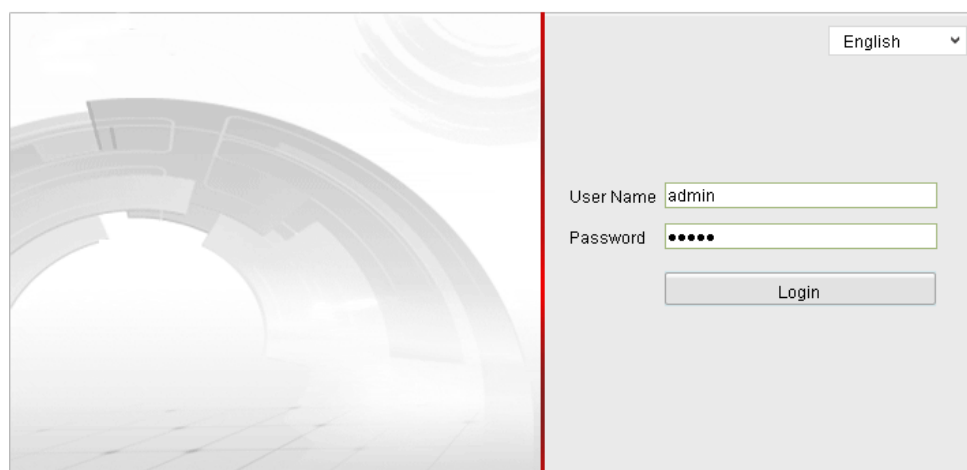


Figure 3-1 Login Interface

Notes:

- The default user name is admin, and the default password is 12345.
 - Switch the display language from the upper-right corner between Chinese and English.
4. Install the plug-in before viewing the live video and operating the camera. Please follow the installation prompts to install the plug-in.

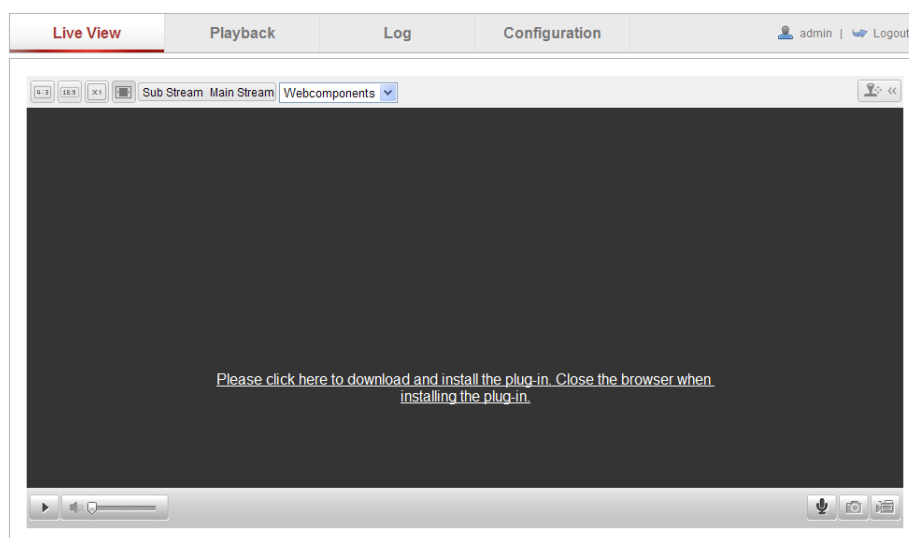


Figure 3-2 Download and Install Plug-in

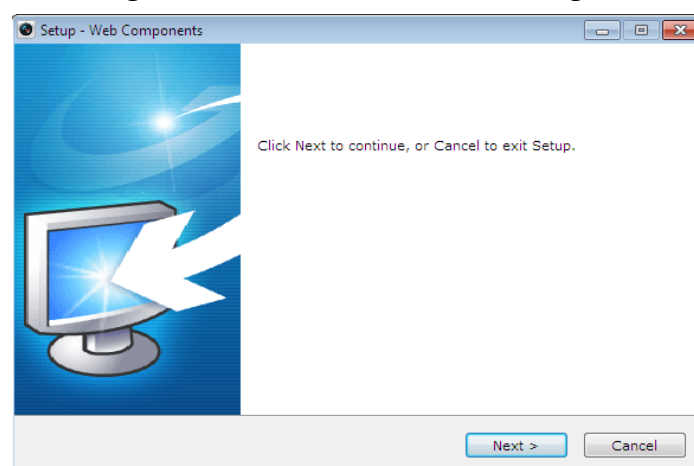


Figure 3-3 Install Plug-in (1)

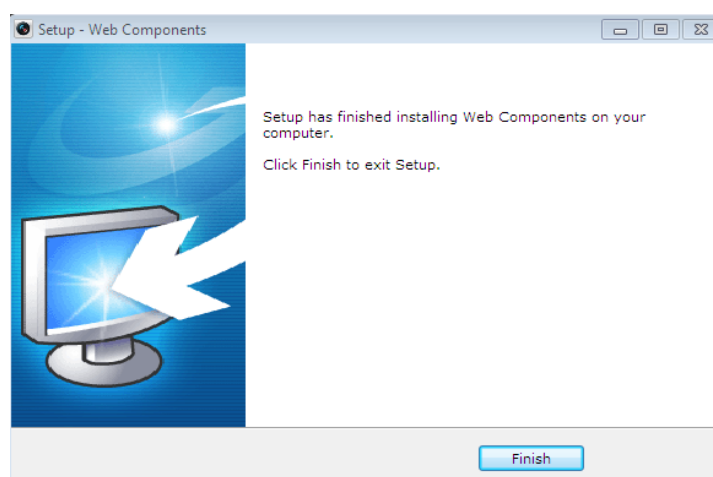


Figure 3-4 Install Plug-in (2)

Note: You may have to close the web browser to install the plug-in. Please reopen the web browser and log in again after installing the plug-in.

3.2 Accessing by Client Software

The product CD contains the iVMS-4200 client software. You can view the live video and manage the camera with the software.

Follow the installation prompts to install the software. The control panel and live view interface of iVMS-4200 client software are shown as bellow.

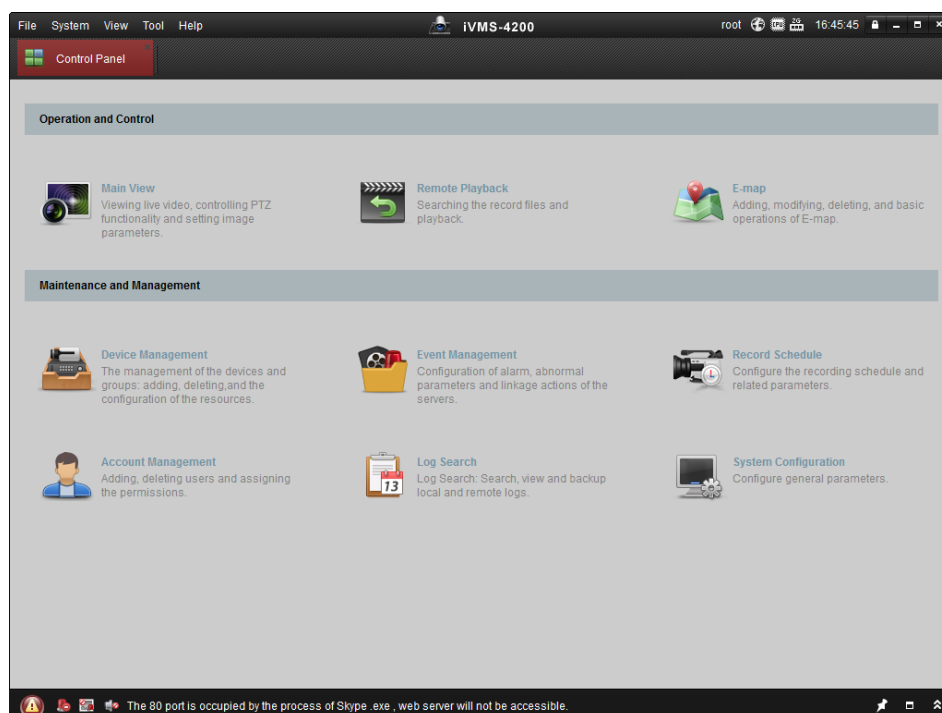


Figure 3-5 iVMS-4200 Client Software

Note: For detailed information about the software, please refer to the user manual of the iVMS-4200 Client Software.

Chapter 4 Live View

4.1 Live View Page

Purpose:

The live view page allows you to view the real-time video, capture images, realize PTZ control, set/call presets and configure video parameters.

Log in the network camera to enter the live view page, or you can click **Live View** on the menu bar of the main page to enter the live view page.

Descriptions of the live view page:



Figure 4-1 Live View Page

Menu Bar:

Click the tab to enter Live View, Playback, Log and Configuration page respectively.

Layout Control:

Click each tab to adjust the layout of the live view. 4:3, 16:9, and auto are selectable.

Live View Mode:

Display the live video in Fisheye View, Panorama View, or PTZ View.

- **Fisheye View:** In the Fisheye View mode, the whole wide-angle view of the fisheye camera is displayed. This view mode is called Fisheye View because it

approximates the vision of a fish's convex eye. The lens produces curvilinear images of a large area, while distorting the perspective and angles of objects in the image.

- **Panorama View:** In the Panorama View mode, the distorted fisheye image is transformed to normal perspective image by some calibration methods.
- **PTZ View:** The PTZ View is the close-up view of some defined area in the Fisheye View or Panorama View, and it supports the electronic PTZ function, which is also called e-PTZ.

Note: Each PTZ View is marked on the Fisheye View and Panorama View with a specific navigation box.

Live View Window:

Display the live view in fisheye mode, panorama mode, or PTZ mode.

Toolbar:

Start / Stop the live view, enable / disable the two-way audio, adjust the audio volume, capture pictures and record the video files.

PTZ Control:

Realize the pan / tilt / zoom function of PTZ view via the navigation box, and set the PTZ moving speed.

Preset/Patrol Settings:

Set and call the preset/patrol for the camera.

4.2 Starting Live View

In the live view window as shown in Figure 4-2, click  on the toolbar to start the live view of the camera.



Figure 4-2 Live View Toolbar

Table 4-1 Descriptions of the Toolbar

Icon	Description
	Start/Stop live view.

	The window size is 4:3.
	The window size is 16:9.
	Self-adaptive window size.
	Manually capture the picture.
	Manually start/stop recording.
	Audio on and adjust volume /Mute.
	Turn on/off microphone.

4.3 Recording and Capturing Pictures Manually

In the live view interface, click  on the toolbar to capture the live pictures or click  to record the live view. The saving paths of the captured pictures and clips can be set on the **Configuration > Local Configuration** page. To configure remote scheduled recording, please refer to *Section 6.2*.

Note: The captured image will be saved as JPEG file or BMP file in your computer.

4.4 Operating PTZ Control

Purpose:

In the live view interface, you can use the PTZ control buttons to realize pan/tilt/zoom control of the camera.

If the expand mode is 1 fisheye + 3 PTZ or 1 panorama + 3 PTZ, you can use the PTZ control interface to adjust the view angle and the PTZ speed.

4.4.1 PTZ Control Panel

On the live view page, click  to show the PTZ control panel or click  to hide it.

Click the direction buttons to control the pan/tilt movements.



Figure 4-3 PTZ Control Panel

Notes:

There are 8 direction arrows (⬆️, ⬇️, ⬅️, ➡️, ⬇️➡️, ⬆️➡️, ⬆️➡️, ⬆️➡️) in the live view window when you click and drag the mouse in the relative positions.

Table 4-2 Descriptions of PTZ Control Panel

Icon	Description
	Auto Scan
	Zoom in/out
	Adjust speed of pan/tilt movements

4.4.2 Setting / Calling a Preset

● **Setting a Preset:**

1. In the PTZ control panel, select a preset number from the preset list.

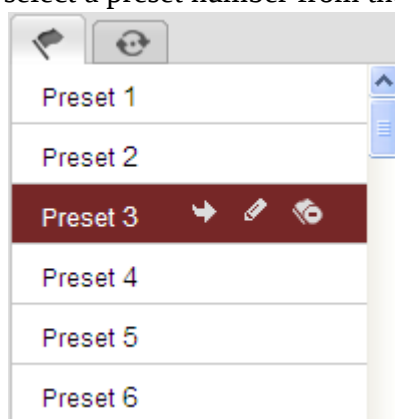


Figure 4-4 Setting a Preset

2. Use the PTZ control buttons to move the lens to the desired position.
 - Pan the camera to the right or left.
 - Tilt the camera up or down.
 - Zoom in or out.

3. Click  to finish the setting of the current preset.
4. You can click  to delete the preset.

Note: You can configure up to 128 presets.

● Calling a Preset:

This feature enables the camera to point to a specified preset scene manually when an event takes place.

For the defined preset, you can call it at any time to the desired preset scene.

In the PTZ control panel, select a defined preset from the list and click  to call the preset.

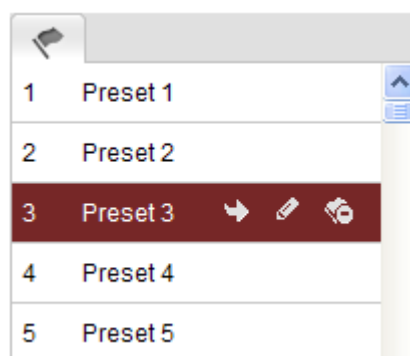


Figure 4-5 Calling a Preset

4.4.3 Setting / Calling a Patrol

Note:

No less than 2 presets have to be configured before you set a patrol.

Steps:

1. Click  to enter the patrol configuration interface.
2. Select a path No., and click  to add the configured presets.
3. Select the preset, and input the patrol duration and patrol speed.
4. Click OK to save the first preset.
5. Follow the steps above to add the other presets.

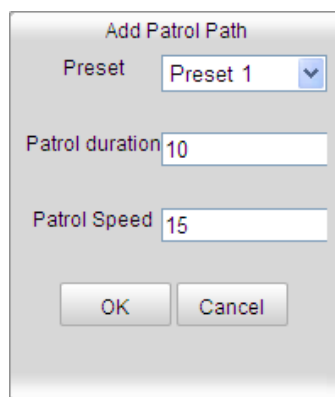


Figure 4-6 Add Patrol Path

6. Click  to save a patrol.
7. Click  to start the patrol, and click  to stop it.
8. (Optional) Click  to delete a patrol.

Chapter 5 Network Camera Configuration

5.1 Configuring Local Parameters

Note: The local configuration refers to the parameters of the live view, record files and captured pictures. The record files and captured pictures are the ones you record and captured using the web browser and thus the saving paths of them are on the PC running the browser.

Steps:

1. Enter the Local Configuration interface:

Configuration > Local Configuration

Live View Parameters				
Protocol	☒ TCP	☐ UDP	☐ MULTICAST	☐ HTTP
Live View Performance	☐ Shortest Delay	☐ Real Time	☒ Balanced	☐ Fluency
Rules	☒ Enable	☐ Disable		
Image Format	☒ JPEG	☐ BMP		

Record File Settings	
Record File Size	☐ 256M ☒ 512M ☐ 1G
Save record files to	C:\Documents and Settings\zhongqiuyue\Web\RecordFiles Browse
Save downloaded files to	C:\Documents and Settings\zhongqiuyue\Web\DownloadFiles Browse

Picture and Clip Settings	
Save snapshots in live view to	C:\Documents and Settings\zhongqiuyue\Web\CaptureFiles Browse
Save snapshots when playback to	C:\Documents and Settings\zhongqiuyue\Web\PlaybackPics Browse
Save clips to	C:\Documents and Settings\zhongqiuyue\Web\PlaybackFiles Browse

Figure 5-1 Local Configuration Interface

2. Configure the following settings:

- **Live View Parameters:** Set the protocol type and live view performance.

- ◆ **Protocol Type:** TCP, UDP, MULTICAST and HTTP are selectable.

TCP: Ensures complete delivery of streaming data and better video quality, yet the real-time transmission will be affected.

UDP: Provides real-time audio and video streams.

HTTP: Allows the same quality as of TCP without setting specific ports for

streaming under some network environments.

MULTICAST: It's recommended to select MCAST type when using the Multicast function. For detailed information about Multicast, refer to *Section 5.3.1 TCP/IP Settings*.

- ◆ **Live View Performance:** Set the live view performance to Shortest Delay, Real Time, Balanced or Best Fluency.
- ◆ **Rules:** It refers to the rules on your local browser, select enable or disable to display or not display the colored marks when the motion detection, face detection, or intrusion detection is triggered. E.g.: enabled as the rules are, and the face detection is enabled as well, when a face is detected, it will be marked with a green rectangle on the live view.
- ◆ **Image Format:** Choose the image format for picture capture.
- **Record File Settings:** Set the saving path of the recorded video files. Valid for the record files you recorded with the web browser.
 - ◆ **Record File Size:** Select the packed size of the manually recorded and downloaded video files to 256M, 512M or 1G. After the selection, the maximum record file size is the value you selected.
 - ◆ **Save record files to:** Set the saving path for the manually recorded video files.
 - ◆ **Save downloaded files to:** Set the saving path for the downloaded video files in playback mode.
- **Picture and Clip Settings:** Set the saving paths of the captured pictures and clipped video files. Valid for the pictures you captured with the web browser.
 - ◆ **Save snapshots in live view to:** Set the saving path of the manually captured pictures in live view mode.
 - ◆ **Save snapshots when playback to:** Set the saving path of the captured pictures in playback mode.
 - ◆ **Save clips to:** Set the saving path of the clipped video files in playback mode.

Note: You can click **Browse** to change the directory for saving the clips and pictures.

3. Click **Save** to save the settings.

5.2 Configuring Time Settings

Purpose:

You can follow the instructions in this section to configure the time synchronization and DST settings.

Steps:

1. Enter the Time Settings interface:

Configuration > Basic Configuration > System > Time Settings

Or **Configuration > Advanced Configuration > System > Time Settings**

Figure 5-2 Time Settings

- Select the Time Zone.

Select the Time Zone of your location from the drop-down menu.

- ◆ Synchronizing Time by NTP Server.

(1) Check the checkbox to enable the **NTP** function.

(2) Configure the following settings:

Server Address: IP address of NTP server.

NTP Port: Port of NTP server.

Interval: The time interval between the two synchronizing actions with NTP server.

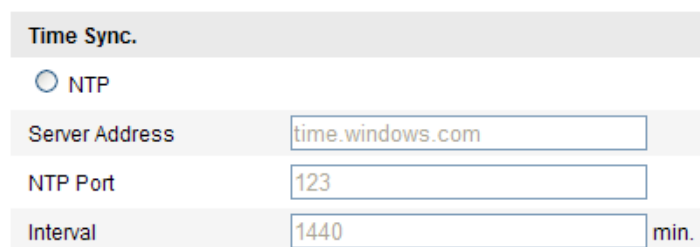


Figure 5-3 Time Sync by NTP Server

Note: If the camera is connected to a public network, you should use a NTP server that has a time synchronization function, such as the server at the National Time Center (IP Address: 210.72.145.44). If the camera is set in a customized network, NTP software can be used to establish a NTP server for time synchronization.

◆ Synchronizing Time Synchronization Manually

Enable the **Manual Time Sync** function and then click  to set the system time from the pop-up calendar.

Note: You can also check the **Sync with computer time** checkbox to synchronize the time of the camera with that of your computer.

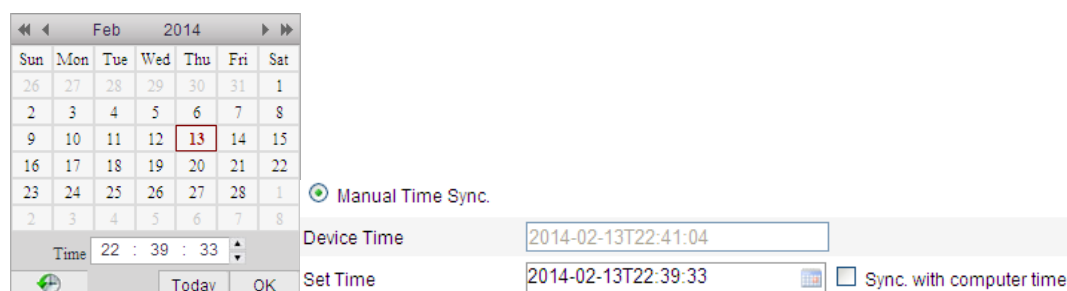


Figure 5-4 Time Sync Manually

- Click the **DST** tab page to enable the DST function and Set the date of the DST period.

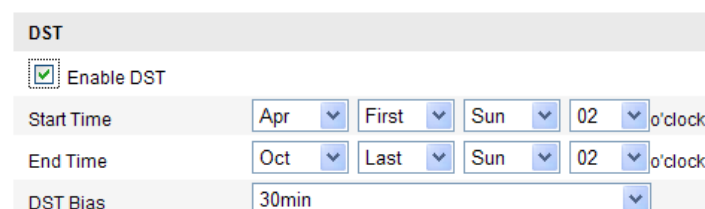


Figure 5-5 DST Settings

2. Click **Save** to save the settings.

5.3 Configuring Network Settings

5.3.1 Configuring TCP/IP Settings

Purpose:

TCP/IP settings must be properly configured before you operate the camera over network. The camera supports both the IPv4 and IPv6. Both versions may be configured simultaneously without conflicting to each other, and at least one IP version should be configured.

Steps:

1. Enter TCP/IP Settings interface:

Configuration > Basic Configuration > Network > TCP/IP

Or Configuration > Advanced Configuration > Network > TCP/IP

The screenshot displays the 'TCP/IP' settings page. At the top, there is a navigation bar with tabs: TCP/IP, Port, DDNS, PPPoE, SNMP, 802.1X, QoS, FTP, UPnP™, Email, and NAT. The 'TCP/IP' tab is selected. Below the navigation bar, the 'NIC Settings' section is visible. It includes a 'NIC Type' dropdown menu set to 'Auto'. There is an unchecked checkbox for 'DHCP'. The 'IPv4 Address' is set to '172.6.23.123', 'IPv4 Subnet Mask' is '255.255.255.0', and 'IPv4 Default Gateway' is '172.6.23.1'. The 'IPv6 Mode' is set to 'Route Advertisement', with a 'View Route Advertisement' button next to it. The 'IPv6 Address' is set to '...', 'IPv6 Subnet Mask' is '0', and 'IPv6 Default Gateway' is empty. The 'Mac Address' is '44:19:b7:09:a9:7f', 'MTU' is '1500', and 'Multicast Address' is empty. Below the 'NIC Settings' section is the 'DNS Server' section, which includes a 'Preferred DNS Server' set to '8.8.8.8' and an empty 'Alternate DNS Server' field.

Figure 5-6 TCP/IP Settings

2. Configure the basic network settings, including the NIC Type, IPv4 or IPv6 Address, IPv4 or IPv6 Subnet Mask, IPv4 or IPv6 Default Gateway, MTU settings and Multicast Address.

Notes:

- The valid value range of MTU is 500 ~ 1500.
 - The Multicast sends a stream to the multicast group address and allows multiple clients to acquire the stream at the same time by requesting a copy from the multicast group address. Before utilizing this function, you have to enable the Multicast function of your router.
3. Click **Save** to save the above settings.

Note: A reboot is required for the settings to take effect.

5.3.2 Configuring Port Settings

Purpose:

You can set the port No. of the camera, e.g. HTTP port, RTSP port and HTTPS port.

Steps:

1. Enter the Port Settings interface:

Configuration > Basic Configuration > Network > Port

Or Configuration > Advanced Configuration > Network > Port

TCP/IP	Port	DDNS	PPPoE	SNMP	802.1X	QoS	FTP	UPnP™	Email	NAT
HTTP Port		80								
RTSP Port		554								
HTTPS Port		443								
Server Port		8000								

Figure 5-7 Port Settings

2. Set the HTTP port, RTSP port and HTTPS port of the camera.

HTTP Port: The default port number is 80, and it can be changed to any port No. which is not occupied.

RTSP Port: The default port number is 554 and it can be changed to any port No. ranges from 1024 to 65535.

HTTPS Port: The default port number is 443, and it can be changed to any port

No. which is not occupied.

Server Port: The default server port number is 8000, and it can be changed to any port No. ranges from 2000 to 65535.

3. Click **Save** to save the settings.

Note: A reboot is required for the settings to take effect.

5.3.3 Configuring PPPoE Settings

Steps:

1. Enter the PPPoE Settings interface:

Configuration > Advanced Configuration > Network > PPPoE

Figure 5-8 PPPoE Settings

2. Check the **Enable PPPoE** checkbox to enable this feature.
3. Enter **User Name**, **Password**, and **Confirm** password for PPPoE access.

Note: The User Name and Password should be assigned by your ISP.

4. Click **Save** to save and exit the interface.

Note: A reboot is required for the settings to take effect.

5.3.4 Configuring DDNS Settings

Purpose:

If your camera is set to use PPPoE as its default network connection, you can use the Dynamic DNS (DDNS) for network access.

Before you start:

Registration on the DDNS server is required before configuring the DDNS settings of

the camera.

Steps:

1. Enter the DDNS Settings interface:

Configuration > Advanced Configuration > Network > DDNS

The screenshot shows the DDNS configuration page. At the top, there is a row of tabs: TCP/IP, Port, DDNS, PPPoE, SNMP, 802.1X, QoS, FTP, UPnP™, Email, and NAT. The 'DDNS' tab is active. Below the tabs, there is a section for DDNS settings. It starts with a checkbox labeled 'Enable DDNS' which is checked. Below this is a dropdown menu for 'DDNS Type' with 'HiDDNS' selected. There are text input fields for 'Server Address' (containing 'www.hik-online.com'), 'Domain' (containing '431618683'), 'Port' (containing '0'), 'User Name', 'Password', and 'Confirm'.

Figure 5-9 DDNS Settings

2. Check the **Enable DDNS** checkbox to enable this feature.
3. Select **DDNS Type**. Four DDNS types are selectable: HiDDNS, IPServer , DynDNS and NO-IP.
 - DynDNS:

Steps:

- (1)Enter **Server Address** of DynDNS (e.g. members.dyndns.org).
- (2)In the **Domain** text field, enter the domain name obtained from the DynDNS website.
- (3)Enter the **Port** of DynDNS server.
- (4)Enter the **User Name** and **Password** registered on the DynDNS website.
- (5)Click **Save** to save the settings.

TCP/IP	Port	DDNS	PPPoE	SNMP	802.1X	QoS	FTP	UPnP™	Email	NAT
--------	------	-------------	-------	------	--------	-----	-----	-------	-------	-----

☒ Enable DDNS

DDNS Type:

Server Address:

Domain:

Port:

User Name:

Password:

Confirm:

Figure 5-10 DynDNS Settings

- IP Server:

Steps:

- (1) Enter the Server Address of the IP Server.
- (2) Click **Save** to save the settings.

Note: For the IP Server, you have to apply a static IP, subnet mask, and gateway and preferred DNS from the ISP. The **Server Address** should be entered with the static IP address of the computer that runs the IP Server software.

☒ Enable DDNS

DDNS Type:

Server Address:

Domain:

Port:

User Name:

Password:

Confirm:


Figure 5-11 IPServer Settings

Note: For the US and Canada area, you can enter 173.200.91.74 as the server address.

- NO-IP:

Steps:

- (1) Choose the DDNS Type as NO-IP.

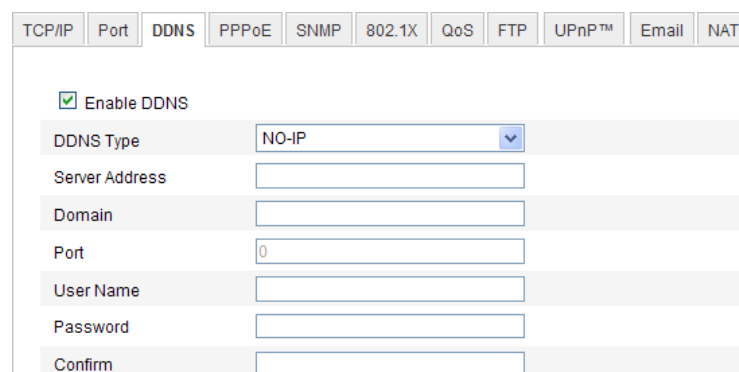

The screenshot shows the DDNS configuration interface. At the top, there is a navigation bar with tabs: TCP/IP, Port, DDNS (selected), PPPoE, SNMP, 802.1X, QoS, FTP, UPnP™, Email, and NAT. Below the tabs, there is a section for DDNS settings. A checkbox labeled 'Enable DDNS' is checked. The 'DDNS Type' is set to 'NO-IP' in a dropdown menu. Below this, there are input fields for 'Server Address', 'Domain', 'Port' (with a value of 0), 'User Name', 'Password', and 'Confirm'.


Figure 5-12 NO-IP DNS Settings

- (2) Enter the Server Address as www.noip.com
- (3) Enter the Domain name you registered.
- (4) Enter the Port number, if needed.
- (5) Enter the User Name and Password.
- (6) Click **Save** and then you can view the camera with the domain name.

- HiDDNS

Steps:

- (1) Choose the DDNS Type as HiDDNS.

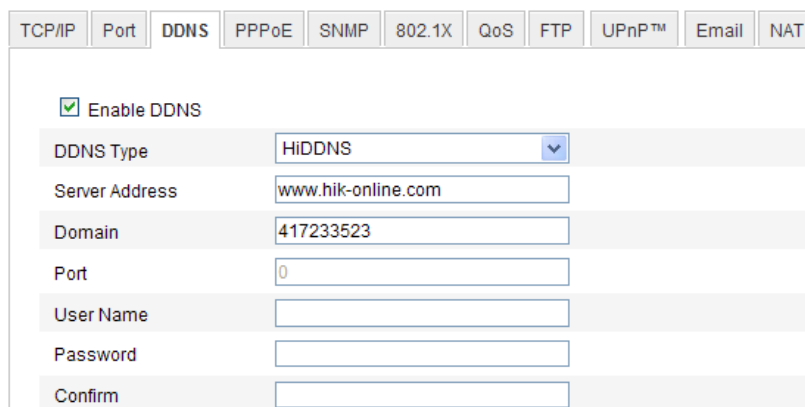

The screenshot shows the DDNS configuration interface with the 'HiDDNS' type selected. The 'DDNS Type' dropdown is set to 'HiDDNS'. The 'Server Address' field contains 'www.hik-online.com'. The 'Domain' field contains '417233523'. The 'Port' field has a value of 0. The 'User Name', 'Password', and 'Confirm' fields are empty.

Figure 5-13 HiDDNS Settings

- (2) Enter the Server Address *www.hik-online.com*.
- (3) Enter the Domain name of the camera. The domain is the same with the device alias in the HiDDNS server.
- (4) Click **Save** to save the new settings.

Note: A reboot is required for the settings to take effect.

5.3.5 Configuring SNMP Settings

Purpose:

You can set the SNMP function to get camera status, parameters and alarm related information and manage the camera remotely when it is connected to the network.

Before you start:

Before setting the SNMP, please download the SNMP software and manage to receive the camera information via SNMP port. By setting the Trap Address, the camera can send the alarm event and exception messages to the surveillance center.

Note: The SNMP version you select should be the same as that of the SNMP software. And you also need to use the different version according to the security level you required. SNMP v1 provides no security and SNMP v2 requires password for access. And SNMP v3 provides encryption and if you use the third version, HTTPS protocol must be enabled.

Steps:

1. Enter the SNMP Settings interface:

Configuration > Advanced Configuration > Network > SNMP

TCP/IP	Port	DDNS	PPPoE	SNMP	802.1X	QoS	FTP	UPnP™	Email	NAT
--------	------	------	-------	-------------	--------	-----	-----	-------	-------	-----

SNMP v1/v2

Enable SNMPv1

☐

Enable SNMP v2c

☐

Write SNMP Community

private

Read SNMP Community

public

Trap Address

Trap Port

162

Trap Community

public

SNMP v3

Enable SNMPv3

☐

Read UserName

Security Level

no auth, no priv

Authentication Algorithm

☒ MD5 ☐ SHA

Authentication Password

Private-key Algorithm

☒ DES ☐ AES

Private-key password

Write UserName

Security Level

no auth, no priv

Authentication Algorithm

☒ MD5 ☐ SHA

Authentication Password

Private-key Algorithm

☒ DES ☐ AES

Private-key password

SNMP Other Settings

SNMP Port

161

Figure 5-14 SNMP Settings

2. Check the corresponding version checkbox (Enable SNMP SNMPv1 , Enable SNMP v2c , Enable SNMPv3) to enable the feature.

3. Configure the SNMP settings.

Note: The settings of the SNMP software should be the same as the settings you configure here.

4. Click **Save** to save and finish the settings.

Note: A reboot is required for the settings to take effect.

5.3.6 Configuring 802.1X Settings

Purpose:

The IEEE 802.1X standard is supported by the network cameras, and when the feature is enabled, the camera data is secured and user authentication is needed when

connecting the camera to the network protected by the IEEE 802.1X.

Before you start:

The authentication server must be configured. Please apply and register a user name and password for 802.1X in the server.

Steps:

1. Enter the 802.1X Settings interface:

Configuration > Advanced Configuration > Network > 802.1X

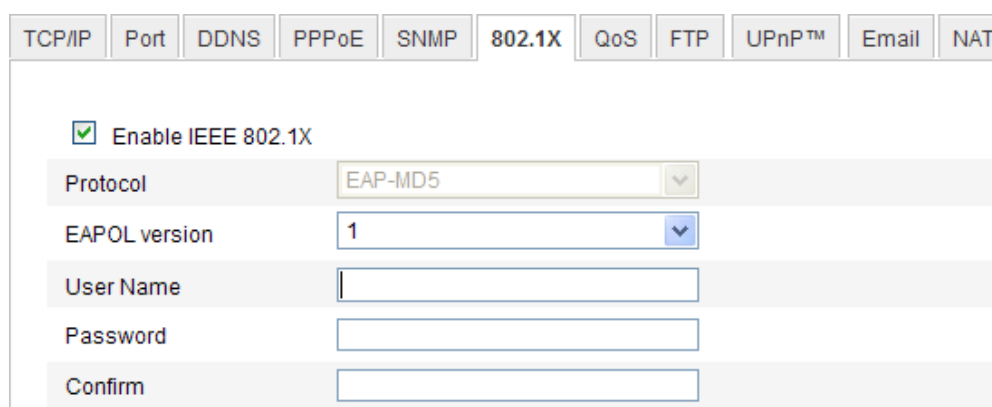


Figure 5-15 802.1X Settings

2. Check the **Enable IEEE 802.1X** checkbox to enable the feature.
3. Configure the 802.1X settings, including EAPOL version, user name and password.

Note: The EAPOL version must be identical with that of the router or the switch.

4. Enter the user name and password to access the server.
5. Click **Save** to finish the settings.

Note: A reboot is required for the settings to take effect.

5.3.7 Configuring QoS Settings

Purpose:

QoS (Quality of Service) can help solve the network delay and network congestion by configuring the priority of data sending.

Steps:

1. Enter the QoS Settings interface:

Configuration > Advanced Configuration > Network > QoS

TCP/IP	Port	DDNS	PPPoE	SNMP	802.1X	QoS	FTP	UPnP™	Email	NAT
--------	------	------	-------	------	--------	-----	-----	-------	-------	-----

Video/Audio DSCP

Event/Alarm DSCP

Management DSCP

Figure 5-16 QoS Settings

- Configure the QoS settings, including video / audio DSCP, event / alarm DSCP and Management DSCP.

The valid value range of the DSCP is 0-63. The bigger the DSCP value is, the higher the priority is.

Note: DSCP refers to the Differentiated Service Code Point; and the DSCP value is used in the IP header to indicate the priority of the data.

- Click **Save** to save the settings.

Note: A reboot is required for the settings to take effect.

5.3.8 Configuring UPnP™ Settings

Universal Plug and Play (UPnP™) is a networking architecture that provides compatibility among networking equipment, software and other hardware devices. The UPnP protocol allows devices to connect seamlessly and to simplify the implementation of networks in the home and corporate environments.

With the function enabled, you don't need to configure the port mapping for each port, and the camera is connected to the Wide Area Network via the router.

Steps:

- Enter the UPnP™ settings interface.

Configuration > Advanced Configuration > Network > UPnP

- Check the checkbox to enable the UPnP™ function.

The name of the device when detected online can be edited.



Figure 5-17 Configure UPnP Settings

5.3.9 Email Sending Triggered by Alarm

Purpose:

The system can be configured to send an Email notification to all designated receivers if an alarm event is detected, e.g., motion detection event, video loss, video tampering, etc.

Before you start:

Please configure the DNS Server settings under **Basic Configuration > Network > TCP/IP** or **Advanced Configuration > Network > TCP/IP** before using the Email function.

Steps:

1. Enter the TCP/IP Settings (**Configuration > Basic Configuration > Network > TCP/IP** or **Configuration > Advanced Configuration > Network > TCP/IP**) to set the IPv4 Address, IPv4 Subnet Mask, IPv4 Default Gateway and the Preferred DNS Server.

Note: Please refer to *Section 5.3.1 Configuring TCP/IP Settings* for detailed information.

2. Enter the Email Settings interface:

Configuration > Advanced Configuration > Network > Email

TCP/IP Port DDNS PPPoE SNMP 802.1X QoS FTP UPnP™ **Email** NAT

Sender

Sender

Sender's Address

SMTP Server

SMTP Port

☐ Enable SSL

Interval ☐ Attached Image

☐ Authentication

User Name

Password

Confirm

Receiver

Receiver1

Receiver1's Address

Receiver2

Receiver2's Address

Receiver3

Receiver3's Address

Save

Figure 5-18 Email Settings

- Configure the following settings:

Sender: The name of the email sender.

Sender's Address: The email address of the sender.

SMTP Server: The SMTP Server IP address or host name (e.g., smtp.263xmail.com).

SMTP Port: The SMTP port. The default TCP/IP port for SMTP is 25 (not secured). And the SSL SMTP port is 465.

Enable SSL: Check the checkbox to enable SSL if it is required by the SMTP server.

Attached Image: Check the checkbox of Attached Image if you want to send emails with attached alarm images.

Interval: The interval refers to the time between two actions of sending attached pictures.

Authentication (optional): If your email server requires authentication, check

this checkbox to use authentication to log in to this server and enter the login user Name and password.

Choose Receiver: Select the receiver to which the email is sent. Up to 2 receivers can be configured.

Receiver: The name of the user to be notified.

Receiver's Address: The email address of user to be notified.

4. Click **Save** to save the settings.

5.3.10 Configuring NAT (Network Address Translation) Settings

Purpose:

1. Enter the NAT settings interface.

Configuration > Advanced Configuration > Network > NAT

2. Choose the port mapping mode.

To port mapping with the default port numbers:

Choose **Port Mapping Mode.** Port Mapping Mode Auto

To port mapping with the customized port numbers:

Choose Port Mapping Mode Manual

And for manual port mapping, you can customize the value of the port number by yourself.

☒ Enable Port Mapping

Port Mapping Mode Manual

	Port Type	External Port	External IP Address	Status
☒	HTTP	80	0.0.0.0	Not Valid
☒	RTSP	554	0.0.0.0	Not Valid
☒	Server Port	8000	0.0.0.0	Not Valid

Save

Figure 5-19 Configure NAT Settings

3. Click **Save** to save the settings.

5.3.11 Configuring FTP Settings


Purpose:

You can configure the FTP server related information to enable the uploading of the captured pictures to the FTP server. The captured pictures can be triggered by events or a timing snapshot task.

Steps:

1. Enter the FTP Settings interface:

Configuration > Advanced Configuration > Network > FTP

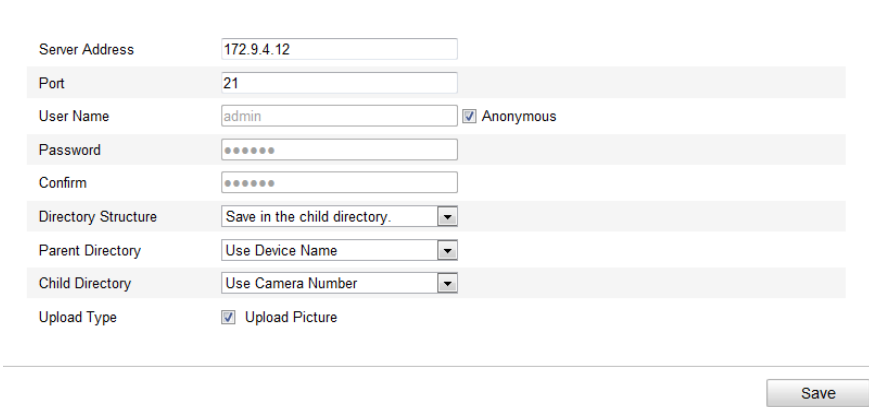

The screenshot displays the FTP Settings configuration page. It includes the following fields and options:

- Server Address:** 172.9.4.12
- Port:** 21
- User Name:** admin
- Anonymous:** ☒ Anonymous
- Password:** (masked with dots)
- Confirm:** (masked with dots)
- Directory Structure:** Save in the child directory.
- Parent Directory:** Use Device Name
- Child Directory:** Use Camera Number
- Upload Type:** ☒ Upload Picture

A **Save** button is located at the bottom right of the form.

Figure 5-20 FTP Settings

2. Configure the FTP settings; and the user name and password are required for login the FTP server.

Directory: In the **Directory Structure** field, you can select the root directory, parent directory and child directory. When the parent directory is selected, you have the option to use the Device Name, Device Number or Device IP for the name of the directory; and when the Child Directory is selected, you can use the Camera Name or Camera No. as the name of the directory.

Upload type: To enable uploading the captured picture to the FTP server.

Anonymous Access to the FTP Server (in which case the user name and password won't be required.): Check the **Anonymous** checkbox to enable the anonymous access to the FTP server.

TCP/IP	Port	DDNS	PPPoE	SNMP	802.1X	QoS	FTP	UPnP™	Email	NAT
Server Address		0.0.0.0								
Port		21								
User Name										☒ Anonymous
Password										
Confirm										
Directory Structure		Save in the root directory.								
Parent Directory		Use Device Name								
Child Directory		Use Camera Name								
Upload Type		☐ Upload Picture								

Figure 5-21 FTP Settings

Note: The anonymous access function must be supported by the FTP server.

- Click **Save** to save the settings.

Note: If you want to upload the captured pictures to FTP server, you have to enable the continuous snapshot or event-triggered snapshot on **Snapshot** page. For detailed information, please refer to the *Section 6.3*.

5.4 Configuring Video and Audio Settings

5.4.1 Configuring Video Settings

Steps:

- Enter the Video Settings interface:

Configuration > Basic Configuration > Video / Audio > Video

Or **Configuration > Advanced Configuration > Video / Audio > Video**

Video	
Stream Type	Main Stream(Normal)
Video Type	Video&Audio
Resolution	1920*1080P
Bitrate Type	Variable
Video Quality	Medium
Frame Rate	25
Max. Bitrate	4096 Kbps
Video Encoding	H.264
Profile	High Profile
I Frame Interval	50
SVC	OFF

Figure 5-22 Configure Video Settings

2. Select the **Stream Type** of the camera to main stream (normal), sub-stream or third stream.

The main stream is usually for recording and live viewing with good bandwidth, and the sub-stream and third stream can be used for live viewing when the bandwidth is limited.

3. You can customize the following parameters for the selected main stream or sub-stream:

Video Type:

Select the stream type to video stream, or video & audio composite stream. The audio signal will be recorded only when the **Video Type** is **Video & Audio**.

Resolution:

Select the resolution of the video output.

Bitrate Type:

Select the bitrate type to constant or variable.

Video Quality:

When bitrate type is selected as **Variable**, 6 levels of video quality are selectable.

Frame Rate:

Set the frame rate to 1/16~25 fps. The frame rate is to describe the frequency at which the video stream is updated and it is measured by frames per second (fps). A higher frame rate is advantageous when there is movement in the video stream, as it maintains image quality throughout.

Max. Bitrate:

Set the max. bitrate to 32~16384 Kbps. The higher value corresponds to the higher video quality, but the higher bandwidth is required.

Video Encoding:

If the **Stream Type** is set to main stream, H.264 and MJPEG are selectable, and if the stream type is set to sub stream, H.264, MJPEG, and MPEJ4 are selectable.

Note: The supported video encoding may differ according to the different platform.

Profile:

Basic profile, Main Profile and High Profile for coding are selectable.

I Frame Interval:

Set the I-Frame interval to 1~400.

SVC:

Scalable Video Coding is an extension of the H.264/AVC standard. Set it OFF or ON according to your actual needs.

4. Click **Save** to save the settings.

5.4.2 Configuring Audio Settings

Steps:

1. Enter the Audio Settings interface

Configuration > Basic Configuration > Video / Audio > Audio

Or **Configuration > Advanced Configuration > Video / Audio > Audio**

Figure 5-23 Audio Settings

2. Configure the following settings.

Audio Encoding: G.711 ulaw, G.711alaw, G.726, and MP2L2 are selectable. And 32kbps, 64kbps, and 128kbps are supported if MP2L2 is selected.

Audio Input: MicIn and Linein are selectable for the connected microphone and pickup respectively.

Input Volume: 0-100

Environmental Noise Filter: Set it as OFF or ON. When you set the function on the noise detected can be filtered.

3. Click **Save** to save the settings.

5.4.3 Configuring ROI Encoding

ROI stands for the region of interest. And the ROI encoding enables you to discriminate the ROI and background information in compression, that is to say, the technology assigns more encoding resource to the region of interest to increase the quality of the ROI whereas the background information is less focused.

Steps:


1. Enter the ROI settings interface

Configuration > Advanced Configuration > Video / Audio >ROI

VideoAudioROI

Channel No.

IP Camera1

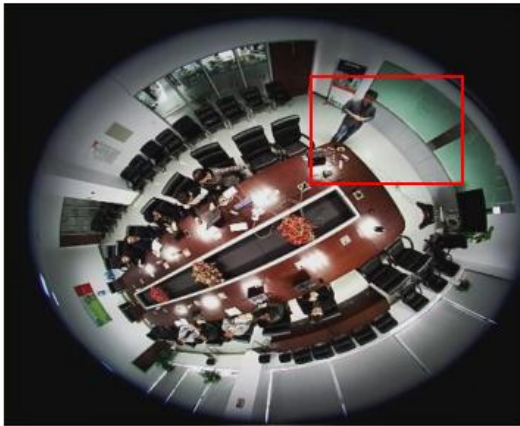

Stop Drawing

Clear All

Stream Type

Stream Type

Main Stream(Normal)

Fixed Region

☒ Enable

Region No.

1

ROI Level

3

Region Name

Meeting Room

Figure 5-24 Region of Interest Settings

2. Draw the region of interest on the image. There are four regions can be drawn.
3. Choose the stream type to set the ROI encoding.
4. Choose the ROI type.

There are two options for ROI encoding, the fixed region encoding and the dynamic tracking.

- The fixed region encoding is the ROI encoding for the manually configured area. And you can choose the Image Quality Enhancing level for ROI encoding, and you can also name the ROI area.
 - The dynamic region refers to the ROI defined by intelligent analysis such as human face detection. You can choose the Image Quality Enhancing level for the ROI encoding.
5. Click **Save** to save the settings.

5.5 Configuring Image Parameters

5.5.1 Configuring Display Settings

Purpose:

You can set the image quality of the camera, including brightness, contrast, saturation, hue, sharpness, etc.

Note:

The display parameters vary according to the different camera model. Please refer to the actual interface for details.

Steps:

1. Enter the Display Settings interface:

Configuration > Basic Configuration> Image> Display Settings

Or Configuration > Advanced Configuration> Image> Display Settings

2. Set the image parameters of the camera.

Note:

In order to guarantee the image quality in the different illumination, it provides two sets of parameters for user to configure.

Day/night Auto-switch

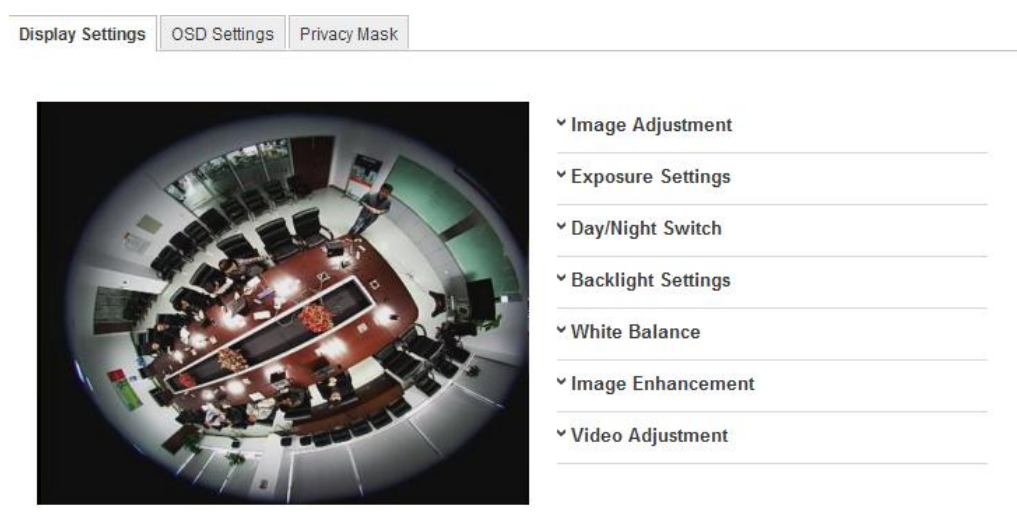


Figure 5-25 Display Settings of Day/night Auto-switch

◆ Image Adjustment

Brightness describes bright of the image, which ranges from 1~100, and the default value is 50.

Contrast describes the contrast of the image, which ranges from 1~100, and the default value is 50.

Hue adjusts color of the image.

Saturation describes the colorfulness of the image color, which ranges from 1~100, and the default value is 50.

Sharpness describes the edge contrast of the image, which ranges from 1~100, and the default value is 50.

◆ Exposure Settings

If the camera is equipped with the fixed lens, only **Manual** is selectable, and the iris mode is not configurable.

The exposure time refers to the electronic shutter time, which ranges from 1 ~ 1/100,000s. Adjust it according to the actual luminance condition.

◆ Day/Night Switch

Select the day/night switch mode, and configure the smart IR settings from this option.

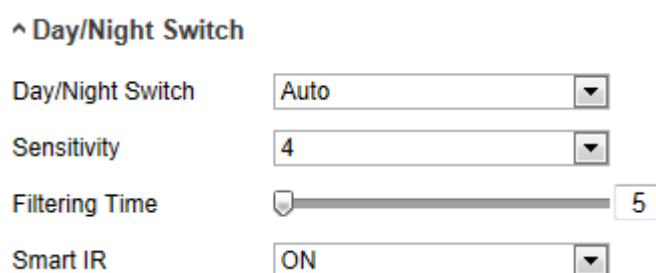


Figure 5-26 Day/Night Switch

Day: the camera stays at day mode.

Night: the camera stays at night mode.

Auto: the camera switches between the day mode and the night mode according to the illumination automatically. The sensitivity ranges from 0~7, the higher the value is, the easier the mode switches. The filtering time refers to the interval time between the day/night switch. You can set it from 5s to 120s.

Schedule: The camera switches between the day mode and the night mode according to the configured time period.

Triggered by Alarm Input: The camera switches to the day mode or the night mode after the alarm is triggered.

Smart IR: Smart IR function gives user an option to adjust the power of the IR LED, thus avoiding image over-exposure.

◆ Backlight Settings

BLC: If you focus on an object against strong backlight, the object will be too dark to be seen clearly. BLC compensates light to the object in the front to make it clear. OFF, Up, Down, Left, Right, Center and customize are selectable.

WDR: Wide Dynamic Range can be used when there is a high contrast of the bright area and the dark area of the scene.

◆ White Balance

White balance is the white rendition function of the camera used to adjust the color temperature according to the environment.

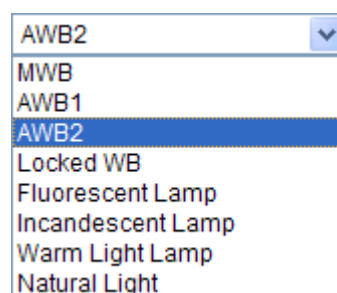


Figure 5-27 White Balance

◆ Image Enhancement

Digital Noise Reduction: DNR reduces the noise in the video stream. OFF, Normal Mode and Expert Mode are selectable. Set the DNR level from 0~100, and the default value is 50 in Normal Mode. Set the DNR level from both space DNR level [0~100] and time DNR level [0~100] in Expert Mode.

Grey Scale: You can choose the range of the grey scale as [0-255] or [16-235].

◆ Video Adjustment

Scene Mode: Choose the scene as indoor or outdoor according to the real

environment.

Video Standard: 50 Hz and 60 Hz are selectable. Choose according to the different video standards; normally 50 Hz for PAL standard and 60 Hz for NTSC standard.

5.5.2 Configuring OSD Settings

Purpose:

You can customize the camera name and time on the screen.

Steps:

1. Enter the OSD Settings interface:

Configuration > Advanced Configuration > Image > OSD Settings

Figure 5-28 OSD Settings

2. Check the corresponding checkbox to select the display of camera name, date or week if required.
3. Edit the camera name in the text field of **Camera Name**.
4. Select from the drop-down list to set the time format, date format, display mode and the OSD font size.
5. You can use the mouse to click and drag the text frame **Camera 01** in the live view window to adjust the OSD position.



Figure 5-29 Adjust OSD Location

6. Click **Save** to activate above settings.

5.5.3 Configuring Privacy Mask

Purpose:

Privacy mask enables you to cover certain areas on the live video to prevent certain spots in the surveillance area from being live viewed and recorded.

Steps:

1. Enter the Privacy Mask Settings interface:

Configuration > Advanced Configuration > Image > Privacy Mask

2. Check the checkbox of **Enable Privacy Mask** to enable this function.
3. Click **Draw Area**.

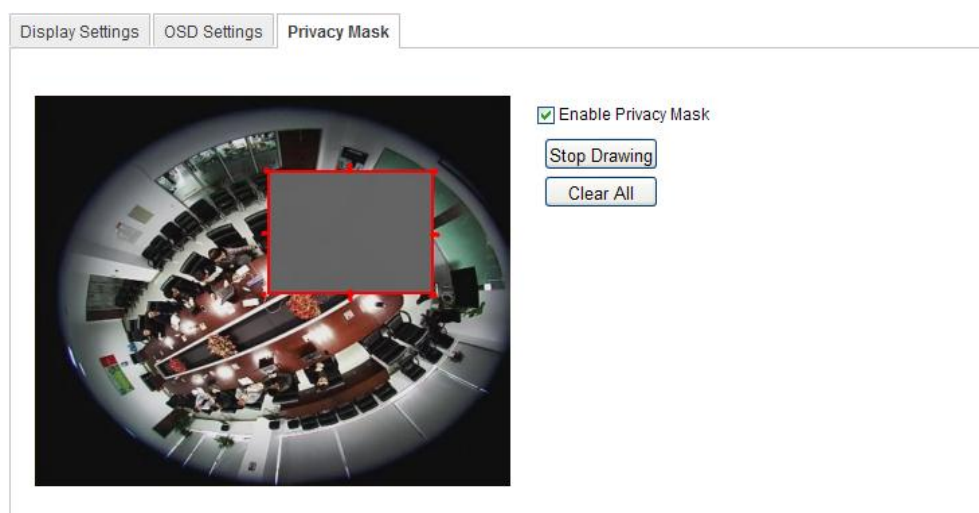


Figure 5-30 Privacy Mask Settings

4. Click and drag the mouse in the live video window to draw the mask area.

Note: You are allowed to draw up to 4 areas on the same image.

5. Click **Stop Drawing** to finish drawing or click **Clear All** to clear all of the areas you set without saving them.
6. Click **Save** to save the settings.

5.6 Configuring and Handling Alarms

This section explains how to configure the network camera to respond to alarm events, including motion detection, video tampering, alarm input, alarm output, exception, face detection, audio exception detection, intrusion detection, defocus detection, and scene change detection, etc. These events can trigger the linkage methods, such as Notify Surveillance Center, Send Email, Trigger Alarm Output, etc.

Note:

Check the checkbox of **Notify Surveillance Center** if you want to the alarm information pushed to your mobile phone as soon as the alarm is triggered.

5.6.1 Configuring Motion Detection

Purpose:

Motion detection is a feature which can take alarm response actions and record the video for the motion occurred in the surveillance scene.

Tasks:

1. Set the Motion Detection Area.

Steps:

- (1) Enter the motion detection settings interface

Configuration > Advanced Configuration > Basic Event > Motion Detection

- (2) Check the checkbox of Enable Motion Detection.

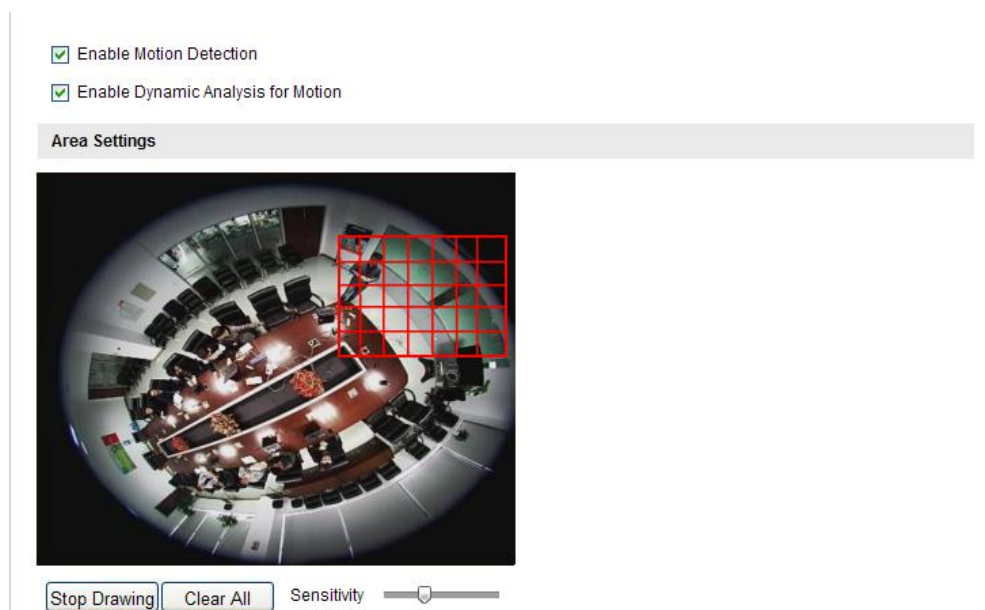


Figure 5-31 Enable Motion Detection

(3) Click **Draw Area**. Click and drag the mouse on the live video image to draw a motion detection area.

Note: You can draw up to 8 motion detection areas on the same image.

(4) Click **Stop Drawing** to finish drawing.

Note: You can click **Clear All** to clear all of the areas.

(5)(Optional) Move the slider **Sensitivity** to set the sensitivity of the detection.

2. Set the Arming Schedule for Motion Detection.

Steps:

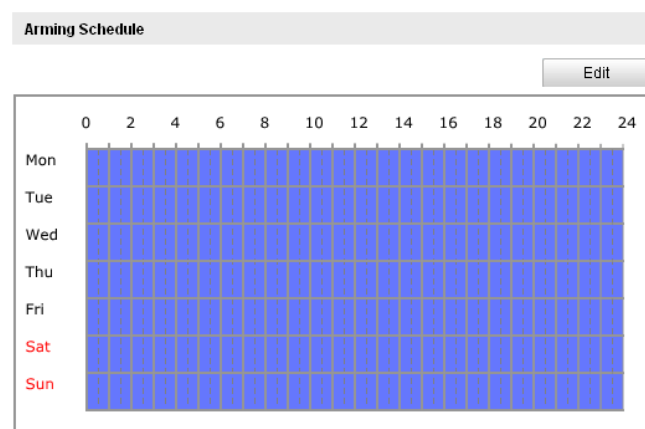


Figure 5-32 Arming Time

 
(1) Click **Edit** to edit the arming schedule. The Figure 5-28 shows the

editing interface of the arming schedule.


(2) Choose the day you want to set the arming schedule.

(3) Click  to set the time period for the arming schedule.

(4) After you set the arming schedule, you can copy the schedule to other days (Optional).

(5) Click  to save the settings.

Note: The time of each period can't be overlapped. Up to 4 periods can be configured for each day.

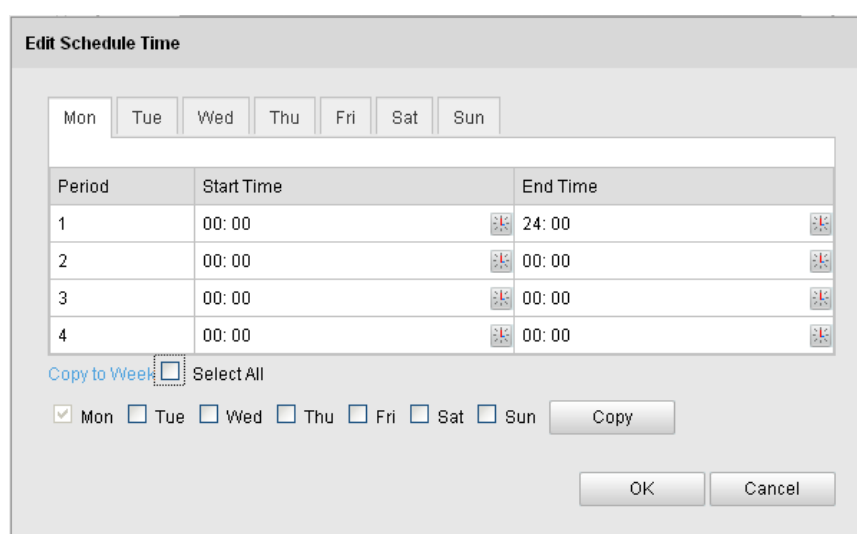

The dialog box titled "Edit Schedule Time" contains a tabbed interface for selecting days of the week (Mon, Tue, Wed, Thu, Fri, Sat, Sun). Below the tabs is a table with four rows, each representing a time period. Each row has columns for "Period", "Start Time", and "End Time". The first row shows a period from 00:00 to 24:00. The other three rows show periods from 00:00 to 00:00. To the right of each time field is a clock icon. Below the table, there is a "Copy to Week" checkbox and a "Select All" checkbox. Below these are checkboxes for each day of the week, with "Mon" checked. A "Copy" button is located to the right of the day checkboxes. At the bottom right are "OK" and "Cancel" buttons.

Period	Start Time	End Time
1	00:00	24:00
2	00:00	00:00
3	00:00	00:00
4	00:00	00:00

Copy to Week ☐ Select All

☒ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat ☐ Sun

Figure 5-33 Arming Time Schedule

3. Set the Alarm Actions for Motion Detection.

Purpose:

You can specify the linkage method when an event occurs. The following contents are about how to configure the different types of linkage method.

Linkage Method	
Normal Linkage	Other Linkage
☐ Audible Warning ☐ Notify Surveillance Center ☐ Send Email ☒ Upload to FTP ☐ Trigger Channel	Trigger Alarm Output ☐ Select All ☐ A->1

Figure 5-34 Linkage Method

Steps:

- (1) Check the checkbox to select the linkage method. Notify surveillance center, send email, upload to FTP, trigger channel and trigger alarm output are selectable (Optional).

- **Notify Surveillance Center**

Send an exception or alarm signal to remote management software when an event occurs.

- **Send Email**

Send an email with alarm information to a user or users when an event occurs.

Note: To send the Email when an event occurs, you need to refer to *Section 5.3.9* to set the related parameters.

- **Upload to FTP**

Capture the image when an alarm is triggered and upload the picture to a FTP server.

Note: Set the FTP address and the remote FTP server first. Refer to *Section 5.3.11* for detailed information.

- **Trigger Channel**

The video will be recorded when the motion is detected. You have to set the recording schedule to realize this function. Please refer to *Section 6.2* for detailed information.

- **Trigger Alarm Output**

Trigger one or more external alarm outputs when an event occurs.

Note: To trigger an alarm output when an event occurs, please refer to *Section 5.6.4* to set the related parameters.

5.6.2 Configuring Video Tampering Alarm

Purpose:

You can configure the camera to trigger the alarm when the lens is covered and take

alarm response action.

Steps:

1. Enter the Tamper-proof Settings interface:

Configuration > Advanced Configuration > Basic Event > Video Tampering

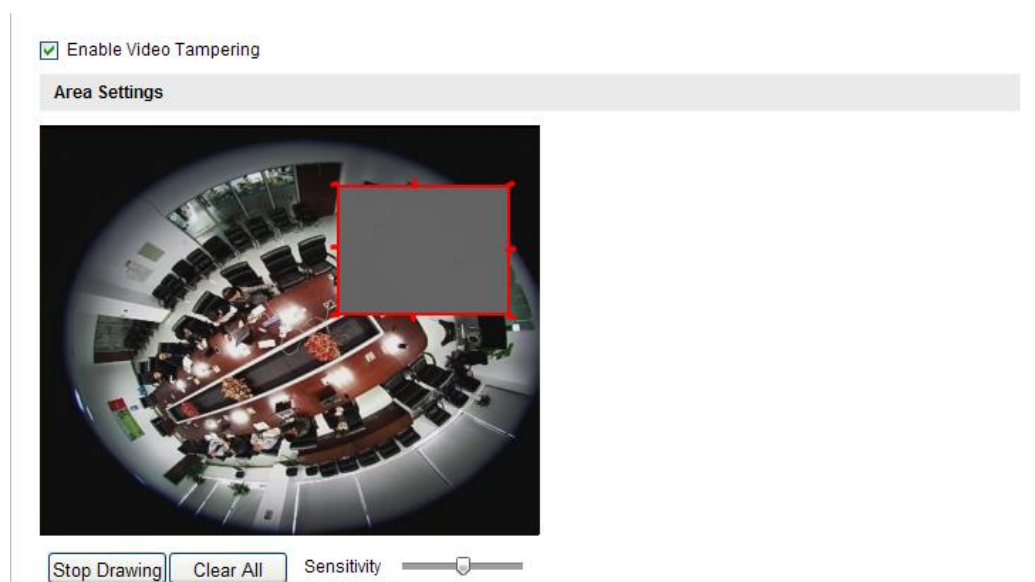


Figure 5-35 Tamper-proof Alarm

2. Check **Enable Tamper-proof** checkbox to enable the tamper-proof detection.
3. Set the tamper-proof area; refer to *Task 1 Set the Motion Detection Area* in *Section 5.6.1*.
4. Click **Edit** to edit the arming schedule for tamper-proof. The arming schedule configuration is the same as the setting of the arming schedule for motion detection. Refer to *Task 2 Set the Arming Schedule for Motion Detection* in *Section 5.6.1*.
5. Check the checkbox to select the linkage method taken for the tamper-proof. Audible warning, notify surveillance center, send email and trigger alarm output are selectable. Please refer to *Task 3 Set the Alarm Actions for Motion Detection* in *Section 5.6.1*.
6. Click **Save** to save the settings.

5.6.3 Configuring Alarm Input

Steps:

1. Enter the Alarm Input Settings interface:

Configuration > Advanced Configuration> Basic Event > Alarm Input:

- Choose the alarm input No. and the Alarm Type. The alarm type can be NO (Normally Open) and NC (Normally Closed). Edit the name to set a name for the alarm input (optional).

The screenshot displays the 'Alarm Input Settings' configuration page. At the top, there are three input fields: 'Alarm Input No.' with a dropdown menu showing 'A<-1', 'Alarm Name' with a text box containing 'Camera 01' and a '(cannot copy)' note, and 'Alarm Type' with a dropdown menu showing 'NO'. Below these fields is a section titled 'Arming Schedule'. This section contains a grid with days of the week (Mon, Tue, Wed, Thu, Fri, Sat, Sun) on the vertical axis and hours (0, 2, 4, 6, 8, 10, 12, 14, 16, 18, 20, 22, 24) on the horizontal axis. The grid cells are currently empty, indicating no arming schedule is set. An 'Edit' button is located to the right of the grid.

Figure 5-36 Alarm Input Settings

- Click **Edit** to set the arming schedule for the alarm input. Refer to **Task 2: Set the Arming Schedule for Motion Detection** in Section 5.6.1.
- Check the checkbox to select the linkage method taken for the alarm input. Refer to **Task 3: Set the Alarm Actions for Motion Detection** in Section 5.6.1.
- You can also choose the PTZ linking for the alarm input if your camera is installed with a pan/tilt unit. Check the relative checkbox and select the No. to enable Preset Calling, Patrol Calling or Pattern Calling.
- You can copy your settings to other alarm inputs.
- Click **Save** to save the settings.

5.6.4 Configuring Alarm Output

Steps:

- Enter the Alarm Output Settings interface:

Configuration>Advanced Configuration> Basic Event > Alarm Output

- Select one alarm output channel in the **Alarm Output** drop-down list. You can

also set a name for the alarm output (optional).

3. The **Delay** time can be set to **5sec, 10sec, 30sec, 1min, 2min, 5min, 10min** or **Manual**. The delay time refers to the time duration that the alarm output remains in effect after alarm occurs.
4. Click **Edit** to enter the **Edit Schedule Time** interface. The time schedule configuration is the same as the settings of the arming schedule for motion detection. Refer to **Task 2: Set the Arming Schedule for Motion Detection** in Section 5.6.1.
5. You can copy the settings to other alarm outputs.
6. Click **Save** to save the settings.

The screenshot displays the 'Alarm Output Settings' interface. At the top, there are three input fields: 'Alarm Output' with a dropdown menu showing 'A->1', 'Alarm Name' with a text box and '(cannot copy)' label, and 'Delay' with a dropdown menu showing '5s'. Below these fields is a section titled 'Arming Schedule' which contains a grid for scheduling. The grid has columns for hours from 0 to 24 in increments of 2, and rows for days of the week: Mon, Tue, Wed, Thu, Fri, Sat, and Sun. The grid cells are currently empty, and an 'Edit' button is located to the right of the grid.

Figure 5-37 Alarm Output Settings

5.6.5 Handling Exception

Purpose:

The exception type can be HDD full, HDD error, network disconnected, IP address conflicted and illegal login to the cameras.

Steps:

1. Enter the Exception Settings interface:

Configuration > Advanced Configuration > Basic Event > Exception

2. Check the checkbox to set the actions taken for the Exception alarm. Refer to

Task 3: Set the Alarm Actions Taken for Motion Detection in Section 5.6.1.

Exception Type HDD Full	
Normal Linkage	Other Linkage
☒ Notify Surveillance Center	Trigger Alarm Output ☐ Select All
☒ Send Email	☐ A->1

Figure 5-38 Exception Settings

- Click **Save** to save the settings.

5.6.6 Configuring Line Crossing Detection

Purpose:

Line crossing detection function detects people, vehicle or other objects which cross a pre-defined virtual line, and some certain actions can be taken when the alarm is triggered.

Note: Line crossing detection function varies according to different camera models.

Steps:

- Enter the Line Crossing Detection settings interface:

Configuration > Advanced Configuration > Basic Event > Line Crossing Detection

☒ Enable Line Crossing Detection

Area Settings



Draw Area Clear

Line 1

Direction A<->B

Sensitivity 50

Figure 5-39 Line Crossing Detection

2. Check the checkbox of **Enable Line Crossing Detection** to enable the function.
3. Select the line from the drop-down list for detection settings.
4. Click the **Draw Area** button, and a virtual line is displayed on the live video.
5. Click-and-drag the line, and you can locate it on the live video as desired. Click on the line, two red squares are displayed on each end, and you can click-and-drag one of the red squares to define the shape and length of the line.
6. Select the direction for line crossing detection. And you can select the directions as A<->B, A->B, and B->A.

A<->B: Only the arrow on the B side shows; when an object going across the plane with both direction can be detected and alarms are triggered.

A->B: Only the object crossing the configured line from the A side to the B side can be detected.

B->A: Only the object crossing the configured line from the B side to the A side can be detected.
7. Click-and-drag the slider to set the detection sensitivity.

Sensitivity: Range [1-100]. The higher the value is, the more easily the line crossing action can be detected.
8. Repeat the above steps to configure other lines. Up to 4 lines can be set. You can click the **Clear** button to clear all pre-defined lines.
9. Click the **Edit** button to set the arming schedule.
10. Select the linkage methods for line crossing detection, including Notify Surveillance Center, Send Email, Upload to FTP, Trigger Channel and Trigger Alarm Output.
11. Click **Save** to save the settings.

5.6.7 Configuring Intrusion Detection

Purpose:

Intrusion detection function detects people, vehicle or other objects which enter and loiter in a pre-defined virtual region, and some certain actions can be taken when the alarm is triggered.

Note: Intrusion detection function varies according to different camera models.

Steps:

1. Enter the Intrusion Detection settings interface:

Configuration> Advanced Configuration> Basic Event> Intrusion Detection

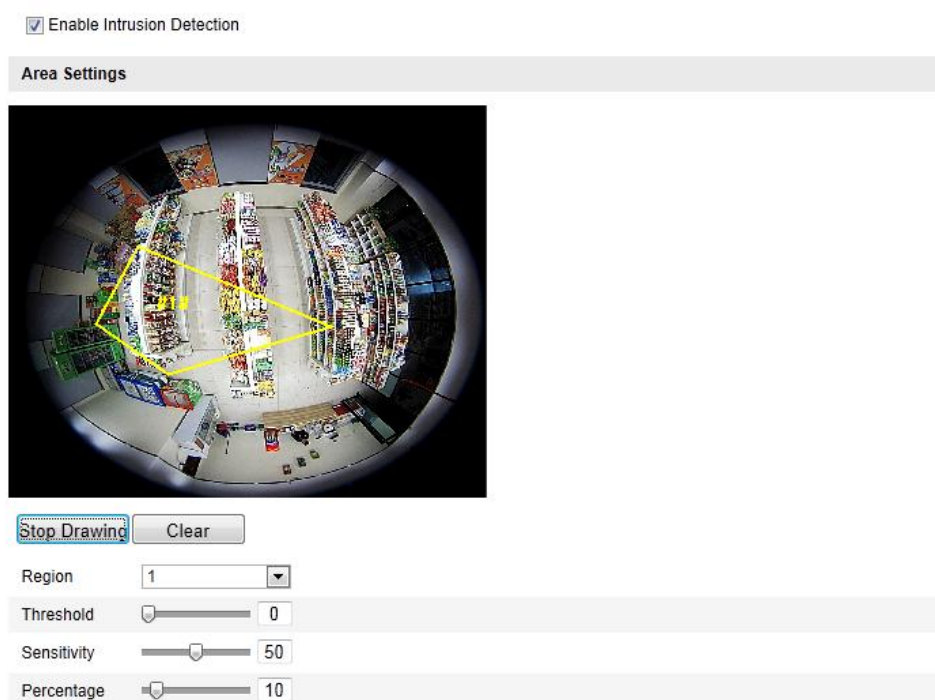


Figure 5-40 Intrusion Detection

2. Check the checkbox of **Enable Intrusion Detection** to enable the function.
3. Select the region from the drop-down list for detection settings.
4. Click the **Draw Area** button to start the region drawing.
5. Click on the live video to specify the four vertexes of the detection region, and right click to complete drawing.
6. Set the time threshold, detection sensitivity and object percentage for intrusion detection.

Threshold: Range [0s-10s], the threshold for the time of the object loitering in the region. If you set the value as 0, alarm is triggered immediately after the

object entering the region.

Sensitivity: Range [1-100]. The value of the sensitivity defines the size of the object which can trigger the alarm. When the sensitivity is high, a very small object can trigger the alarm.

Percentage: Range [1-100]. Percentage defines the ratio of the in-region part of the object which can trigger the alarm. For example, if the percentage is set as 50%, when the object enters the region and occupies half of the whole region, the alarm is triggered.

7. Repeat the above steps to configure other regions. Up to 4 regions can be set. You can click the **Clear** button to clear all pre-defined regions.
8. Click the **Edit** button to set the arming schedule.
9. Select the linkage methods for intrusion detection, including Notify Surveillance Center, Send Email, Upload to FTP, Trigger Channel and Trigger Alarm Output.
10. Click **Save** to save the settings.

5.7 Configuring Heat Map

Note: Heat map function can be configured by the iVMS-4200 software. For detailed instructions of the software, please refer to the user manual of iVMS-4200.

Before you start:

Start the iVMS-4200, and add the fisheye camera to the software.

Purpose:

Heat map graphically represents the individual values contained in matrix data, such as where the visitors have spent the time, using different colors, so as to visually show you the most welcome and less-popular fields.

❖ **Heat Map Configuration**

Steps:

1. Enter the Heat Map configuration interface using the iVMS-4200:

Device Management > Remote Config > Heat Map

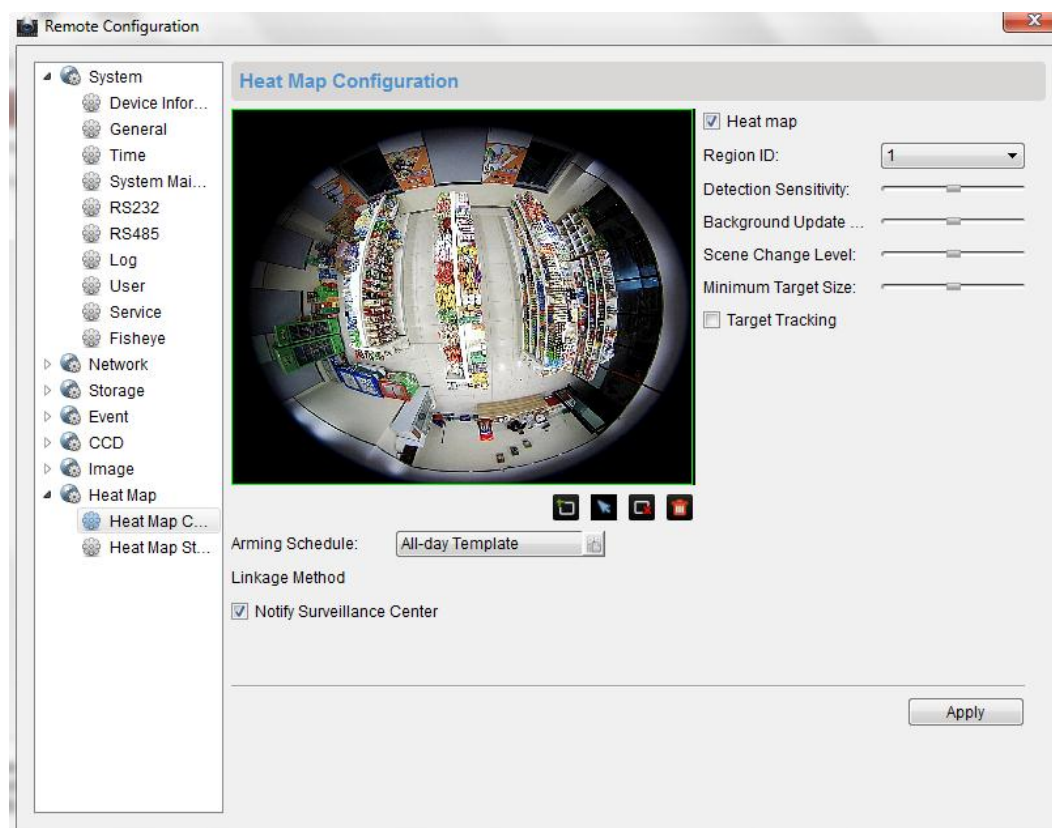


Figure 5-41 Heat Map Configuration

2. Check the checkbox of **Heat Map** to enable the function.
3. Select the region from the drop-down list for detection settings.
4. Click the icon , and then specify four vertexes to define the detection region for heat value statistics.
 Click the icon , you can move the defined region to the desired location.
 Click the icon , you can delete the current region;
 Click the icon , you can delete all the defined regions.

5. Configure the parameters for heat map detection region.

Detection Sensitivity [0~100]: It refers to the sensitivity of the camera identify a target. The over-high sensitivity may cause the misinformation. It is recommended you set the sensitivity as the default value, which is 50.

Background Update Rate [0~100]: It refers to the speed of the new scene replaces the previous scene. E.g.: In front of a cabinet, the people besides the cabinet will be double counted if the goods moved from the cabinet, and the camera treats the cabinet (on which the good removed) as a new scene. The default value of 50 is recommended.

Scene Change Level [0~100]: It refers to level of the camera responses to the

dynamic environment, e.g., a swaying curtain. The camera may treat the swaying curtain as a target. Setting the level properly will avoid the misinformation. The default level is 50.

Minimum Target Size [0~100]: It refers to the size of the camera identify a target. You can set the target size according to the actual environment. The default size is 50.

Target Track: Check the checkbox to enable / disable the tracking of the target.

6. Click **Edit** to set the arming schedule.
7. Check the checkbox of **Notify Surveillance Center** to enable the linkage method.
8. Click **Save** to save the settings.

❖ Heat Map Statistics

You can search the heat value statistics and view the statistics on the Space Heat Map or Time Heat Map using the platform, such as iVMS-5200 and iVMS-8700.

Chapter 6 Storage Settings

Before you start:

To configure record settings, please make sure that you have the network storage device within the network or the SD card inserted in your camera.

6.1 Configuring NAS Settings

Before you start:

The network disk should be available within the network and properly configured to store the recorded files, log files, etc.

Steps:

1. Add the network disk

(1) Enter the NAS (Network-Attached Storage) Settings interface:

Configuration > Advanced Configuration > Storage > NAS

Record Schedule	Storage Management	NAS	Snapshot
HDD No.	Type	Server Address	File Path
1	NAS	172.6.21.99	/dvr/test01
2	NAS		
3	NAS		
4	NAS		
5	NAS		
6	NAS		
7	NAS		
8	NAS		

Figure 6-1 Add Network Disk

(2) Enter the IP address of the network disk, and enter the default file.

Note: Please refer to the *User Manual of NAS* for creating the file path.

(3) Click **Save** to add the network disk.

Note: After having saved successfully, you need to reboot the camera to activate the settings.

2. Initialize the added network disk.

(1) Enter the HDD Settings interface (**Advanced Configuration > Storage >**

Storage Management), in which you can view the capacity, free space, status, type and property of the disk.

HDD No.	Capacity	Free space	Status	Type	Property	Progress
9	20.00GB	0.00GB	Uninitialized	NAS	R/W	

Quota

Max. Picture Capacity: 0.00GB

Free Size for Picture: 0GB

Max. Record Capacity: 0.00GB

Free Size for Record: 0GB

Percentage of Picture: 25%

Percentage of Record: 75%

Figure 6-2 Storage Management Interface

- (2) If the status of the disk is **Uninitialized**, check the corresponding checkbox to select the disk and click **Format** to start initializing the disk.

When the initialization completed, the status of disk will become **Normal**.

HDD No.	Capacity	Free space	Status	Type	Property	Progress
9	20.00GB	19.75GB	Normal	NAS	R/W	

Quota

Max. Picture Capacity: 0.00GB

Free Size for Picture: 0GB

Max. Record Capacity: 0.00GB

Free Size for Record: 0GB

Percentage of Picture: 25%

Percentage of Record: 75%

Figure 6-3 View Disk Status

3. Define the quota for record and pictures.
 - (1) Input the quota percentage for picture and for record.
 - (2) Click **Save** and refresh the browser page to activate the settings.

Quota

Max. Picture Capacity: 4.94GB

Free Size for Picture: 4.94GB

Max. Record Capacity: 14.81GB

Free Size for Record: 14.81GB

Percentage of Picture: 25%

Percentage of Record: 75%

Figure 6-4 Quota Settings

Notes:

- Up to 8 NAS disks can be connected to the camera.

- To initialize and use the SD card after insert it to the camera, please refer to the steps of NAS disk initialization.

6.2 Configuring Recording Schedule

Purpose:

There are two kinds of recording for the cameras: manual recording and scheduled recording. For the manual recording, refer to *Section 4.3 Recording and Capturing Pictures Manually*. In this section, you can follow the instructions to configure the scheduled recording. By default, the record files of scheduled recording are stored in the SD card (if supported) or in the network disk.

Steps:

1. Enter the Record Schedule Settings interface:

Configuration > Advanced Configuration > Storage > Record Schedule

The screenshot shows the 'Record Schedule' configuration page. At the top, there are four tabs: 'Record Schedule' (active), 'Storage Management', 'NAS', and 'Snapshot'. Below the tabs, there are three dropdown menus: 'Pre-record' set to '5s', 'Post-record' set to '5s', and 'Overwrite' set to 'Yes'. Below these is a checkbox labeled 'Enable Record Schedule' which is checked. Underneath the checkbox is a 7x24 grid representing the recording schedule for each day of the week (Mon-Sun) and each hour of the day (0-24). The grid is color-coded: green for 'Motion Detection', light blue for 'Motion & Alarm', purple for 'Other', and dark blue for 'Continuous'. A legend on the right side of the grid explains these colors. An 'Edit' button is located above the grid. At the bottom right of the interface is a 'Save' button.

Figure 6-5 Recording Schedule Interface

2. Check the checkbox of **Enable Record Schedule** to enable scheduled recording.
3. Set the record parameters of the camera.

Pre-record	5s	▼
Post-record	5s	▼
Overwrite	Yes	▼

Figure 6-6 Record Parameters

- **Pre-record:** The time you set to start recording before the scheduled time or the event. For example, if an alarm triggers recording at 10:00, and the pre-record time is set as 5 seconds, the camera starts to record at 9:59:55.
The Pre-record time can be configured as No Pre-record, 5 s, 10 s, 15 s, 20 s, 25 s, 30 s or not limited.
- **Post-record:** The time you set to stop recording after the scheduled time or the event. For example, if an alarm triggered recording ends at 11:00, and the post-record time is set as 5 seconds, the camera records until 11:00:05.
The Post-record time can be configured as 5 s, 10 s, 30 s, 1 min, 2 min, 5 min or 10 min.

Note: The record parameter configurations vary depending on the camera model.

- Click **Edit** to edit the record schedule.

Edit Schedule

Mon Tue Wed Thu Fri Sat Sun

☐ All Day Continuous ▼

☒ Customize

Period	Start Time	End Time	Record Type
1	00:00	00:00	Continuous ▼
2	00:00	00:00	Continuous ▼
3	00:00	00:00	Continuous ▼
4	00:00	00:00	Continuous ▼
5	00:00	00:00	Continuous ▼
6	00:00	00:00	Continuous ▼
7	00:00	00:00	Continuous ▼
8	00:00	00:00	Continuous ▼

Copy to Week ☐ Select All

☒ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat ☐ Sun

Figure 6-7 Record Schedule

- Choose the day to set the record schedule.

(1) Set all-day record or segment record:

- ◆ If you want to configure the all-day recording, please check the **All Day** checkbox.
- ◆ If you want to record in different time sections, check the **Customize** checkbox. Set the **Start Time** and **End Time**.

Note: The time of each segment can't be overlapped. Up to 4 segments can be configured.

(2) Select a **Record Type**. The record type can be Continuous, Motion Detection, Alarm, Motion | Alarm, Motion & Alarm, etc.

◆ **Continuous**

If you select **continuous**, the video will be recorded automatically according to the time of the schedule.

◆ **Record Triggered by Motion Detection**

If you select **Motion Detection**, the video will be recorded when the motion is detected.

Besides configuring the recording schedule, you have to set the motion detection area and check the checkbox of **Trigger Channel** in the **Linkage Method** of Motion Detection Settings interface. For detailed information, please refer to the *Task 1: Set the Motion Detection Area in the Section 5.6.1*.

◆ **Record Triggered by Alarm**

If you select **Alarm**, the video will be recorded when the alarm is triggered via the external alarm input channels.

Besides configuring the recording schedule, you have to set the **Alarm Type** and check the checkbox of **Trigger Channel** in the **Linkage Method** of **Alarm Input Settings** interface. For detailed information, please refer to *Section 5.6.3*.

◆ **Record Triggered by Motion & Alarm**

If you select **Motion & Alarm**, the video will be recorded when the motion

and alarm are triggered at the same time.

Besides configuring the recording schedule, you have to configure the settings on the **Motion Detection** and **Alarm Input Settings** interfaces.

Please refer to *Section 5.6.1* and *Section 5.6.3* for detailed information.

◆ Record Triggered by Motion | Alarm

If you select **Motion | Alarm**, the video will be recorded when the external alarm is triggered or the motion is detected.

Besides configuring the recording schedule, you have to configure the settings on the **Motion Detection** and **Alarm Input Settings** interfaces.

Please refer to *Section 5.6.1* and *Section 5.6.3* for detailed information.

The screenshot shows the 'Edit Schedule' window. At the top, there are tabs for days of the week: Mon, Tue, Wed, Thu, Fri, Sat, Sun. Below these are two radio buttons: 'All Day' (selected) and 'Customize'. Next to 'All Day' is a dropdown menu showing 'Continuous'. Below the radio buttons is a table with 8 rows representing different periods of the day. Each row has columns for 'Period', 'Start Time', 'End Time', and 'Record Type'. The 'Record Type' column has a dropdown menu for each row. At the bottom of the table, there are checkboxes for 'Copy to Week' (checked) and 'Select All'. Below these are checkboxes for each day of the week: Mon, Tue, Wed, Thu, Fri, Sat, Sun, all of which are checked. To the right of these checkboxes is a 'Copy' button. At the bottom right of the window are 'OK' and 'Cancel' buttons.

Period	Start Time	End Time	Record Type
1	00:00	09:00	Motion Detection
2	09:00	14:00	Motion & Alarm
3	14:00	20:00	Continuous
4	20:00	24:00	Continuous
5	00:00	00:00	Continuous
6	00:00	00:00	Continuous
7	00:00	00:00	Continuous
8	00:00	00:00	Continuous

Figure 6-8 Edit Record Schedule

- (3) Check the checkbox of **Select All** and click **Copy** to copy settings of this day to the whole week. You can also check any of the checkboxes before the date and click **Copy**.
 - (4) Click **OK** to save the settings and exit the **Edit Record Schedule** interface.
6. Click **Save** to save the settings.

6.3 Configuring Snapshot Settings

Purpose:

You can configure the scheduled snapshot and event-triggered snapshot. The captured picture can be stored in the SD card (if supported) or the netHDD (For detailed information about netHDD, please refer to *Section 6.1 Configuring NAS Settings*). You can also upload the captured pictures to a FTP server.

Basic Settings

Steps:

1. Enter the Snapshot Settings interface:

Configuration > Advanced Configuration > Storage > Snapshot

2. Check the **Enable Timing Snapshot** checkbox to enable continuous snapshot.
Check the **Enable Event-triggered Snapshot** checkbox to check event-triggered snapshot.
3. Select the quality of the snapshot.
4. Set the time interval between two snapshots.
5. Click **Save** to save the settings.

Uploading to FTP

You can follow below configuration instructions to upload the snapshots to FTP.

- Upload continuous snapshots to FTP

Steps:

- 1) Configure the FTP settings and check **Upload Picture** checkbox in FTP Settings interface. Please refer to *Section 5.3.11 Configuring FTP Settings* for more details to configure FTP parameters.

- 2) Check the **Enable Timing Snapshot** checkbox.

- Upload event-triggered snapshots to FTP

Steps:

- 1) Configure the FTP settings and check **Upload Picture** checkbox in FTP Settings interface. Please refer to *Section 5.3.11 Configuring FTP Settings* for more details to configure FTP parameters.

- 2) Check **Upload Picture** checkbox in Motion Detection Settings or Alarm Input interface. Please refer to *Task 3: Set the Alarm Actions Taken for Motion Detection* in Section 5.6.1.
- 3) Check the **Enable Event-triggered Snapshot** checkbox.

Record Schedule
Storage Management
NAS
Snapshot

Timing

☒ Enable Timing Snapshot

Format

JPEG ▼

Resolution

1920*1080 ▼

Quality

High ▼

Interval

0

millisecond ▼

Event-Triggered

☒ Enable Event-Triggered Snapshot

Format

JPEG ▼

Resolution

1920*1080 ▼

Quality

High ▼

Interval

0

millisecond ▼

Capture Number

4

Save

Figure 6-9 Snapshot Settings

Chapter 7 Playback

Purpose:

This section explains how to view the remotely recorded video files stored in the network disks or SD cards.

Steps:

1. Click **Playback** on the menu bar to enter playback interface.

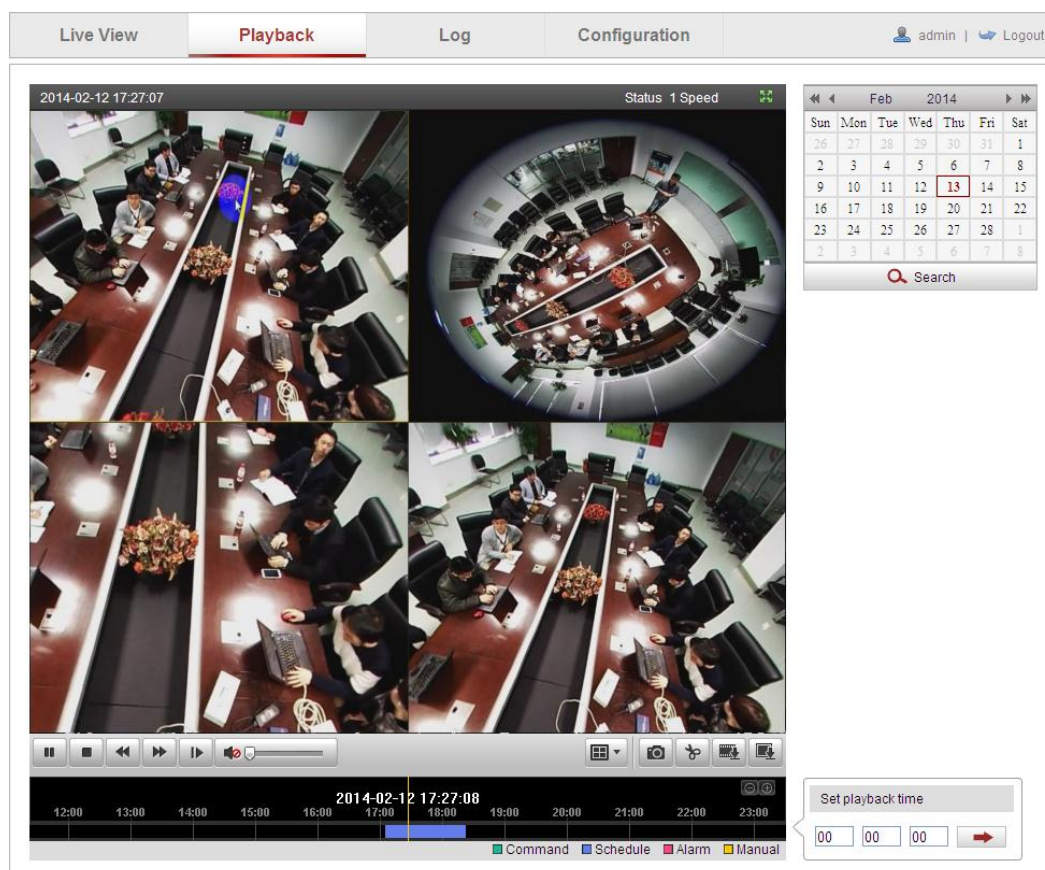


Figure 7-1 Playback Interface

2. Select the date and click **Search**.

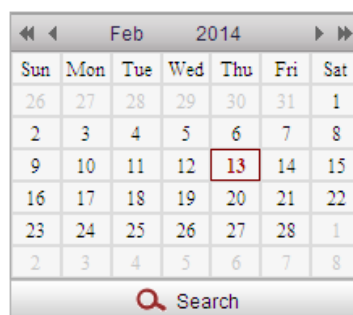


Figure 7-2 Search Video

3. Click  to play the video files found on this date.

The toolbar on the bottom of Playback interface can be used to control playing process.



Figure 7-3 Playback Toolbar

Table 7-1 Description of the buttons

Button	Operation	Button	Operation
	Play		Capture a picture
	Pause		Start/Stop clipping video files
	Stop		Audio on and adjust volume/Mute
	Speed down		Download video files
	Speed up		Download captured pictures
	Playback by frame		Select the layout mode

Note: You can choose the file paths locally for downloaded playback video files and pictures in Local Configuration interface. Please refer to *Section 5.1* for details.

Drag the progress bar with the mouse to locate the exact playback point. You can also

input the time and click to locate the playback point in the **Set playback time** field. You can also click to zoom out/in the progress bar.

 


Figure 7-4 Set Playback Time

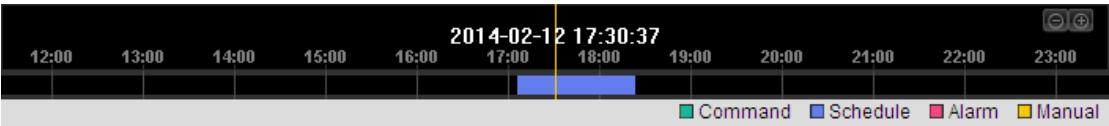


Figure 7-5 Progress Bar

The different colors of the video on the progress bar stand for the different video types.

 


Figure 7-6 Video Types

Chapter 8 Log Searching

Purpose:

The operation, alarm, exception and information of the camera can be stored in log files. You can also export the log files on your demand.

Before you start:

Please configure network storage for the camera or insert a SD card in the camera.

Steps:

1. Click **Log** on the menu bar to enter log searching interface.

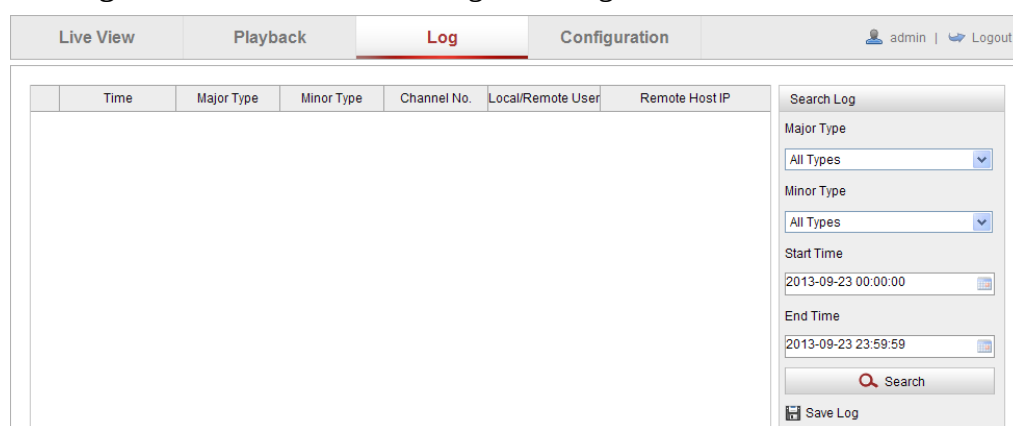


Figure 8-1 Log Searching Interface

2. Set the log search conditions to specify the search, including the Major Type, Minor Type, Start Time and End Time.
3. Click **Search** to search log files. The matched log files will be displayed on the **Log** interface.

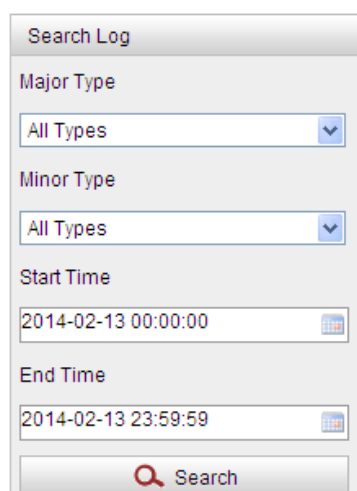


Figure 8-2 Log Searching

4. To export the log files, click **Save log** to save the log files in your computer.

Chapter 9 Others

9.1 Managing User Accounts

Enter the User Management interface:

Configuration > Basic Configuration > Security > User

Or **Configuration > Advanced Configuration > Security > User**

The **admin** user has access to create, modify or delete other accounts. Up to 15 user accounts can be created.



The screenshot shows a web interface for user management. At the top right, there are three buttons: 'Add' (highlighted with a blue border), 'Modify', and 'Delete'. Below these buttons is a table with three columns: 'No.', 'User Name', and 'Level'. The table contains two rows of data.

No.	User Name	Level
1	admin	Administrator
2	Test	Operator

Figure 9-1 User Information

- Add a User

Steps:

1. Click **Add** to add a user.
2. Input the new **User Name**, select **Level** and input **Password**.

Note: The level indicates the permissions you give to the user. You can define the user as **Operator** or **User**.

3. In the **Basic Permission** field and **Camera Configuration** field, you can check or uncheck the permissions for the new user.
4. Click **OK** to finish the user addition.

Add user	
User Name	Test
Level	Operator
Password	•••••
Confirm	•••••
Basic Permission ☒ Remote: Parameters Settings ☒ Remote: Log Search / Interrogate Working Status ☐ Remote: Upgrade / Format ☒ Remote: Two-way Audio ☐ Remote: Shutdown / Reboot ☐ Remote: Notify Surveillance Center / Trigger Alarm Output ☐ Remote: Video Output Control ☐ Remote: Serial Port Control	Camera Configuration ☒ Remote: Live View ☒ Remote: PTZ Control ☒ Remote: Manual Record ☒ Remote: Playback
OK Cancel	

Figure 9-2 Add a User

● Modify a User

Steps:

1. Left-click to select the user from the list and click **Modify**.
2. Modify the **User Name**, **Level** or **Password**.
3. In the **Basic Permission** field and **Camera Configuration** field, you can check or uncheck the permissions.
4. Click **OK** to finish the user modification.

Modify user	
User Name	Test 01
Level	Operator
Password	•••••
Confirm	•••••
Basic Permission ☒ Remote: Parameters Settings ☒ Remote: Log Search / Interrogate Working Status ☒ Remote: Upgrade / Format ☒ Remote: Two-way Audio ☒ Remote: Shutdown / Reboot ☒ Remote: Notify Surveillance Center / Trigger Alarm Output ☒ Remote: Video Output Control ☒ Remote: Serial Port Control	Camera Configuration ☒ Remote: Live View ☒ Remote: PTZ Control ☒ Remote: Manual Record ☒ Remote: Playback
OK Cancel	

Figure 9-3 Modify a User

- Delete a User

Steps:

1. Click to select the user you want to delete and click **Delete**.
2. Click **OK** on the pop-up dialogue box to delete the user.

9.2 Configuring RTSP Authentication

Purpose:

You can specifically secure the stream data of live view.

Steps:

1. Enter the RTSP Authentication interface:

Configuration > Advanced Configuration > Security > RTSP Authentication

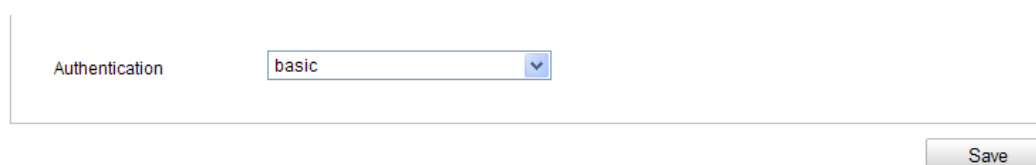


Figure 9-4 RTSP Authentication

2. Select the **Authentication** type **basic** or **disable** in the drop-down list to enable or disable the RTSP authentication.

Note: If you disable the RTSP authentication, anyone can access the video stream by the RTSP protocol via the IP address.

3. Click **Save** to save the settings.

9.3 Anonymous Visit

Purpose:

Enabling this function allows visit for whom doesn't have the user name and password of the device.

Steps:

1. Enter the Anonymous Visit interface:

Configuration > Advanced Configuration > Security > Anonymous Visit

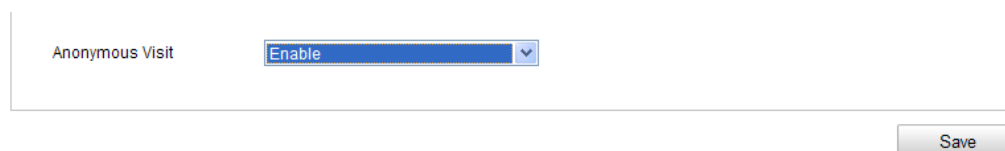


Figure 9-5 Anonymous Visit

2. Set the **Anonymous Visit** permission **Enable** or **Disable** in the drop-down list to enable or disable the anonymous visit.
3. Click **Save** to save the settings.

There will be a checkbox of Anonymous by the next time you logging in.

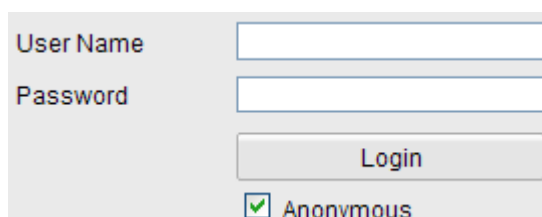


Figure 9-6 Login Interface with an Anonymous Checkbox

4. Check the checkbox of **Anonymous** and click **Login**.

Note: Only live view is available for the anonymous user.

9.4 IP Address Filter


Purpose:

This function makes it possible for access control.

Steps:

1. Enter the IP Address Filter interface:

Configuration > Advanced Configuration > Security > IP Address Filter

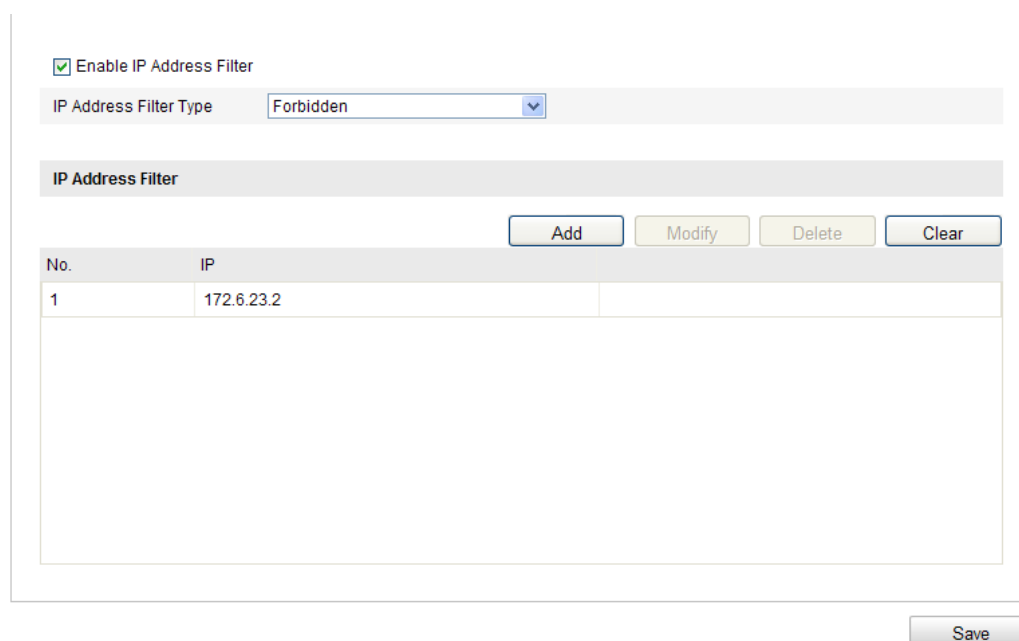

The interface for configuring IP address filters. It includes a checkbox to enable the filter, a dropdown menu for the filter type (set to 'Forbidden'), and a table for the filter list. The table has columns for 'No.' and 'IP'. A single entry is shown with '1' in the first column and '172.6.23.2' in the second. Action buttons 'Add', 'Modify', 'Delete', and 'Clear' are located above the table. A 'Save' button is at the bottom right.

☒ Enable IP Address Filter

IP Address Filter Type: Forbidden

IP Address Filter

Add Modify Delete Clear

No.	IP
1	172.6.23.2


Save

Figure 9-7 IP Address Filter Interface

2. Check the checkbox of **Enable IP Address Filter**.
3. Select the type of IP Address Filter in the drop-down list, **Forbidden** and **Allowed** are selectable.
4. Set the IP Address Filter list.
 - Add an IP Address

Steps:

- (1) Click the **Add** to add an IP.
- (2) Input the IP Address.

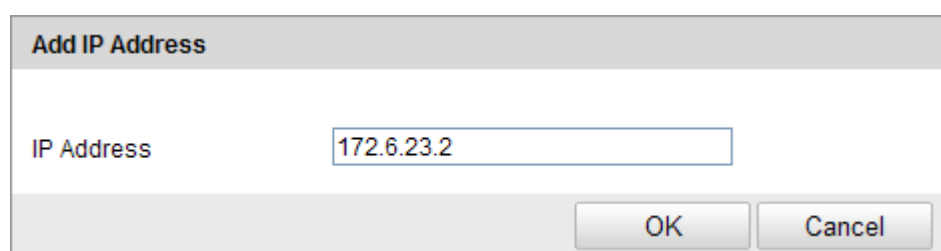

A dialog box titled 'Add IP Address'. It contains a text input field labeled 'IP Address' with the value '172.6.23.2'. At the bottom, there are 'OK' and 'Cancel' buttons.

Add IP Address

IP Address:

OK Cancel

Figure 9-8 Add an IP

- (3) Click the **OK** to finish adding.

- Modify an IP Address

Steps:

- (1) Left-click an IP address from filter list and click **Modify**.
- (2) Modify the IP address in the text filed.

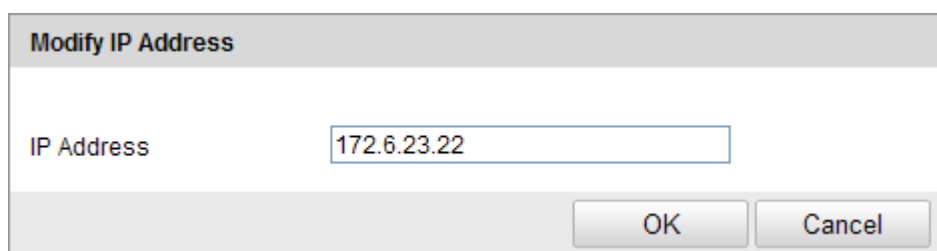


Figure 9-9 Modify an IP

(3) Click the **OK** to finish modifying.

- Delete an IP Address

Left-click an IP address from filter list and click **Delete**.

- Delete all IP Addresses

Click **Clear** to delete all the IP addresses.

5. Click **Save** to save the settings.

9.5 Security Service

Purpose:

Telnet service can be enabled / disabled for the remote login.

Steps:

1. Enter the Security Service interface:

Configuration > Basic Configuration > Security > Security Service

Or **Configuration > Advanced Configuration > Security > Security Service**



Figure 9-10 Security Service

2. Check the checkbox of Enable Telnet to enable the telnet service.

3. Click **Save** to save the settings.

Note: Telnet service is disabled by default.

9.6 Viewing Device Information

Enter the Device Information interface:

Configuration > Basic Configuration> System > Device Information

Or **Configuration > Advanced Configuration> System > Device Information**

In the **Device Information** interface, you can edit the Device Name.

Other information of the network camera, such as Model, Serial No., Firmware Version, Encoding Version, Number of Channels, Number of HDDs, Number of Alarm Input and Number of Alarm Output are displayed. The information cannot be changed in this menu. It is the reference for maintenance or modification in future.

The screenshot shows the 'Device Information' tab selected in a web interface. Below the tab are several sub-tabs: 'Time Settings', 'Maintenance', 'RS232', 'RS485', 'DST', and 'Fisheye Parameters'. The 'Basic Information' section is expanded, showing a form with the following fields:

Device Name	IP CAMERA
Device No.	88
Model	XX-XXXXXXXX-X
Serial No.	XXXXXXXXXXXXXXXXXXXX
Firmware Version	V5.0.9 build 140108
Encoding Version	V4.0 build 140108
Number of Channels	5
Number of HDDs	1
Number of Alarm Input	1
Number of Alarm Output	1

Figure 9-11 Device Information

9.7 Maintenance

9.7.1 Rebooting the Camera

Steps:

1. Enter the Maintenance interface:

Configuration > Basic Configuration> System > Maintenance

Or **Configuration > Advanced Configuration> System > Maintenance**

2. Click **Reboot** to reboot the network camera.

The screenshot shows a 'Reboot' button in a web interface. The button is labeled 'Reboot' and is located next to the text 'Reboot the device.'

Figure 9-12 Reboot the Device

9.7.2 Restoring Default Settings

Steps:

1. Enter the Maintenance interface:

Configuration > Basic Configuration > System > Maintenance

Or **Configuration > Advanced Configuration > System > Maintenance**

2. Click **Restore** or **Default** to restore the default settings.

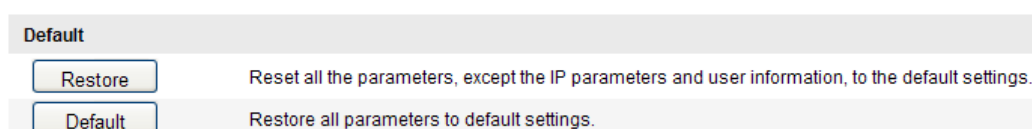


Figure 9-13 Restore Default Settings

Note: After restoring the default settings, the IP address is also restored to the default IP address, please be careful for this action.

9.7.3 Exporting / Importing Configuration File

Purpose:

Configuration file is used for the batch configuration of the camera, which can simplify the configuration steps when there are a lot of cameras needing configuring.

Steps:

Enter the Maintenance interface:

Configuration > Basic Configuration > System > Maintenance

Or **Configuration > Advanced Configuration > System > Maintenance**

1. Click **Export** to export the current configuration file, and save it to the certain place.
2. Click **Browse** to select the saved configuration file and then click **Import** to start importing configuration file.

Note: You need to reboot the camera after importing configuration file.

3. Click **Export** and set the saving path to save the configuration file in local storage.

The screenshot shows two sections: 'Import Config. File' and 'Export Config. File'. In the 'Import' section, there is a text box for 'Config File' containing 'F:\12', and two buttons labeled 'Browse' and 'Import'. Below it is a 'Status' label. The 'Export' section has a single 'Export' button.

Figure 9-14 Import/Export Configuration File

9.7.4 Upgrading the System

Steps:

1. Enter the Maintenance interface:

Configuration > Basic Configuration > System > Maintenance

Or **Configuration > Advanced Configuration > System > Maintenance**

2. Click **Browse** to select the local upgrade file and then click **Upgrade** to start remote upgrade.

Note: The upgrading process will take 1 to 10 minutes. Please don't disconnect power of the camera during the process. The camera reboots automatically after upgrading.

The screenshot shows a 'Remote Upgrade' section with a 'Firmware' text box, 'Browse', and 'Upgrade' buttons. Below this is a 'Status' label and a note: 'Note: The upgrading process will be 1 to 10 minutes, please don't disconnect power to the device during the process. The device reboots automatically after upgrading.'

Figure 9-15 Remote Upgrade

9.8 RS-232 Settings

Purpose:

The RS-232 port can be used in two ways:

- **Parameters Configuration:** Connect a computer to the camera through the serial port. Device parameters can be configured by using software such as HyperTerminal. The serial port parameters must be the same as the serial port parameters of the camera.
- **Transparent Channel:** Connect a serial device directly to the camera. The serial

device will be controlled remotely by the computer through the network.

Steps:

1. Enter RS-232 Port Setting interface:

Configuration> Advanced Configuration> System > RS232

Device Information	Time Settings	Maintenance	RS232	RS485	DST	Fisheye Parameters
Baud Rate	115200 bps					
Data Bit	8					
Stop Bit	1					
Parity	None					
Flow Ctrl	None					
Usage	Console					

Figure 9-16 RS-232 Settings

Note: If you want to connect the camera by the RS-232 port, the parameters of the RS-232 should be exactly the same with the parameters you configured here.

2. Click **Save** to save the settings.

9.9 RS-485 Settings

Purpose:

The RS-485 serial port is used to control the PTZ of the camera. The configuring of the PTZ parameters should be done before you control the PTZ unit.

Steps:

1. Enter RS-485 Port Setting interface:

Configuration> Advanced Configuration> System > RS485

Device Information	Time Settings	Maintenance	RS232	RS485	DST	Fisheye Parameters
Baud Rate	9600 bps					
Data Bit	8					
Stop Bit	1					
Parity	None					
Flow Ctrl	None					
PTZ Protocol	PELCO-D					
PTZ Address	0					

Figure 9-17 RS-485 Settings

2. Set the RS-485 parameters and click **Save** to save the settings.

By default, the Baud Rate is set as 9600 bps, the Data Bit is 8, the stop bit is 1 and the Parity and Flow Control is None.

Note: The Baud Rate, PTZ Protocol and PTZ Address parameters should be exactly the same as the PTZ camera parameters.

9.10 Fisheye Parameters


Purpose:

Steps:

1. Enter the Fisheye Parameters interface:

Configuration > Basic Configuration > System > Fisheye Parameters

Or **Configuration > Advanced Configuration > System > Fisheye Parameters**

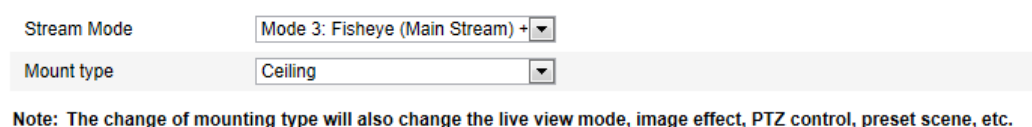

Stream Mode: Mode 3: Fisheye (Main Stream) +

Mount type: Ceiling

Note: The change of mounting type will also change the live view mode, image effect, PTZ control, preset scene, etc.

Figure 9-18 Fisheye Parameters

2. Select the stream mode from the drop-down list.

4 types of stream modes are selectable:

- **Mode 1: Fisheye + Panorama + 3 PTZ**

5 channels of video stream are available: 1 for Fisheye View, 1 for Panorama View and 3 for PTZ View.

If Mode 1 is set for the stream mode, the following live view modes are selectable on the live view interface: Fisheye View, Panorama View, Fisheye + 3 PTZ, Panorama + 3 PTZ, and Custom.

Note: The sub stream is not supported for the channels in Mode 1.

- **Mode 2: Fisheye + 4 PTZ**

5 channels of video stream are available: 1 for Fisheye View and 4 for PTZ View.

If Mode 2 is set for the stream mode, the following live view modes are

selectable on the live view interface: Fisheye View, 4 PTZ Views and Custom.

Note: The sub stream is not supported for the channels in Mode 2.

- **Mode 3: Fisheye (Main Stream) + Fisheye (Sub Stream) + 3 PTZ**

4 channels of video stream are available: 1 for Fisheye View and 3 for PTZ View.

If Mode 3 is set for the stream mode, the following live view modes are selectable on the live view interface: Fisheye View, Fisheye + 3 PTZ, and Custom.

Note: Both main stream and sub stream are supported in the channel for Fisheye View.

- **Mode 4: Panorama (Main Stream) + Panorama (Sub Stream)**

Only 1 channel of video stream is available: Panorama View

If Mode 4 is set for the stream mode, only the Panorama View is supported on the live view interface.

Note: Both main stream and sub stream are supported in the channel for Panorama View.

3. Select the mount type according to your actual environment for the fisheye camera.
Ceiling mounting, table mounting, and wall mounting are selectable.
4. Click **Save** and reboot the device to activate the new settings.

.

Appendix

Appendix 1 SADP Software Introduction

● Description of SADP V 2.0

SADP (Search Active Devices Protocol) is a kind of user-friendly and installation-free online device search tool. It searches the active online devices within your subnet and displays the information of the devices. You can also modify the basic network information of the devices using this software.

● Search active devices online

◆ Search online devices automatically

After launch the SADP software, it automatically searches the online devices every 15 seconds from the subnet where your computer locates. It displays the total number and information of the searched devices in the Online Devices interface. Device information including the device type, IP address, port number, gateway, etc. will be displayed.

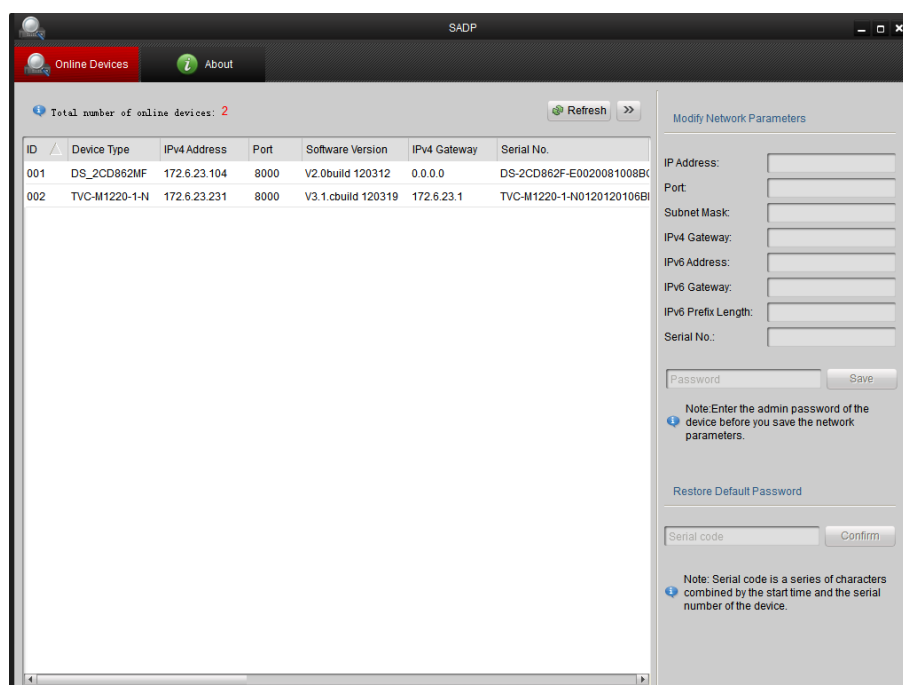


Figure A.1.1 Search Online Devices

Note: Device can be searched and displayed in the list in 15 seconds after it went online; it will be removed from the list in 45 seconds after it went offline.

 
◆ Search online devices manually

You can also click **Refresh** to refresh the online device list manually. The newly searched devices will be added to the list.

Note: You can click  or  on each column heading to order the information; you can click  to expand the device table and hide the network parameter panel on the right side, or click  to show the network parameter panel.

● Modify network parameters

Steps:

1. Select the device to be modified in the device list and the network parameters of the device will be displayed in the **Modify Network Parameters** panel on the right side.
2. Edit the modifiable network parameters, e.g. IP address and port number.
3. Enter the password of the admin account of the device in the **Password** field and click  to save the changes.

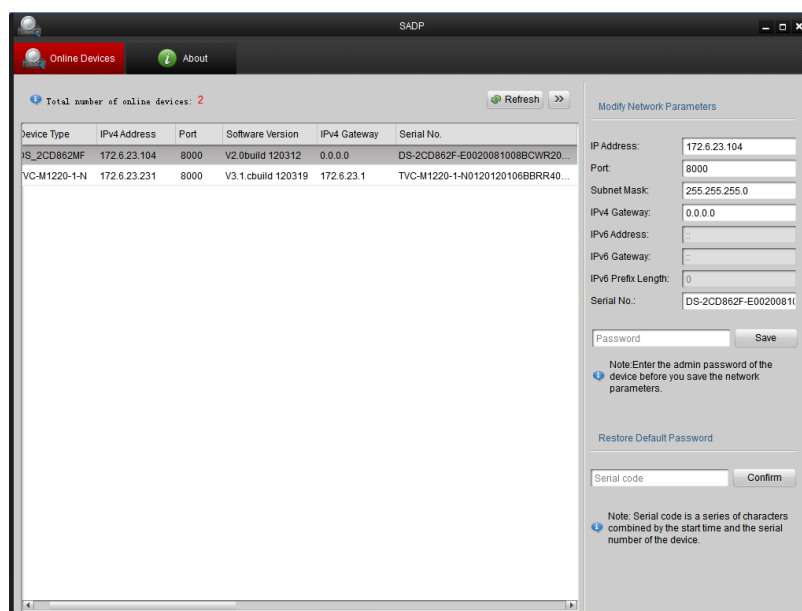


Figure A.1.2 Modify Network Parameters

● Restore default password

Steps:

1. Contact our technical engineers to get the serial code.
2. Input the code in the **Serial code** field and click **Confirm** to restore the default password.

Appendix 2 Port Mapping

The following settings are for TP-LINK router (TL-WR641G). The settings vary depending on different models of routers.

Steps:

1. Select the **WAN Connection Type**, as shown below:

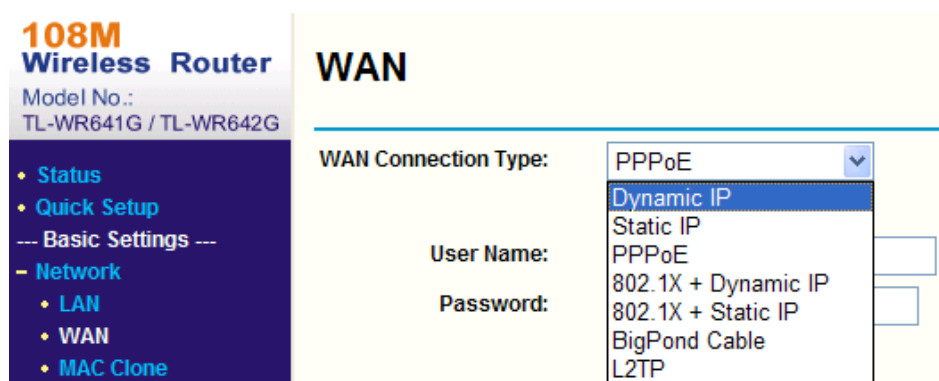


Figure A.2.1 Select the WAN Connection Type

2. Set the **LAN** parameters of the router as in the following figure, including IP address and subnet mask settings.

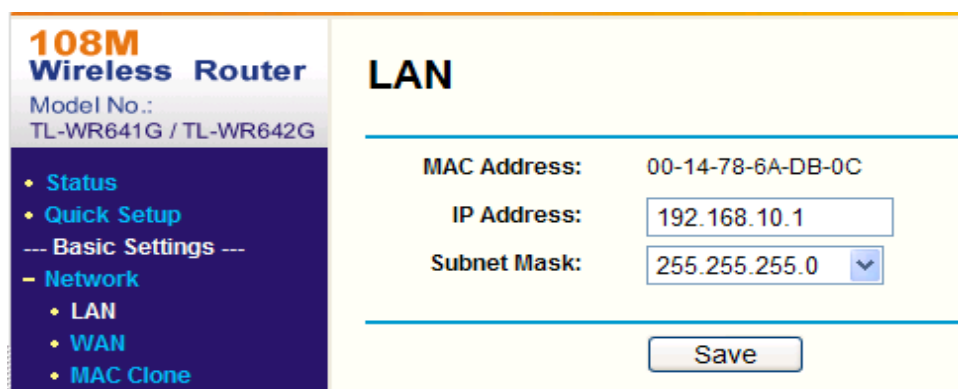


Figure A.2.2 Set the LAN parameters

3. Set the port mapping in the virtual servers of **Forwarding**. By default, camera uses port 80, 8000 and 554. You can change these ports value with web browser or client software.

Example:

When the cameras are connected to the same router, you can configure the ports of a camera as 80, 8000, and 554 with IP address 192.168.1.23, and the ports of

another camera as 81, 8001, 555, 8201 with IP 192.168.1.24. Refer to the steps as below:

Steps:

1. As the settings mentioned above, map the port 80, 8000, 554 and 8200 for the network camera at 192.168.1.23
2. Map the port 81, 8001, 555 and 8201 for the network camera at 192.168.1.24.
3. Enable **ALL** or **TCP** protocols.
4. Check the **Enable** checkbox and click **Save**.

108M Wireless Router
Model No.: TL-WR641G / TL-WR642G

- Status
- Quick Setup
- Basic Settings ---
- Network
- Wireless
- Advanced Settings ---
- DHCP
- Forwarding
 - Virtual Servers
 - Port Triggering
 - DMZ
 - UPnP
- Security
 - Static Routing
 - Dynamic DNS
- Maintenance ---
- System Tools

Virtual Servers

ID	Service Port	IP Address	Protocol	Enable
1	80	192.168.10.23	ALL	☒
2	8000	192.168.10.23	ALL	☒
3	554	192.168.10.23	ALL	☒
4	8200	192.168.10.23	ALL	☒
5	81	192.168.10.24	ALL	☒
6	8001	192.168.10.24	ALL	☒
7	555	192.168.10.24	ALL	☒
8	8201	192.168.10.24	ALL	☒

Common Service Port: DNS(53) Copy to ID 1

Previous Next Clear All Save

Figure A.2.3 Port Mapping

Note: The port of the network camera cannot conflict with other ports. For example, some web management port of the router is 80. Change the camera port if it is the same as the management port.



First Choice for Security Professionals