


PROCEDURE FOR PLAYING BACK RECORDED FOOTAGE FROM HIKVISION DVR/NVR USING THE DS-1003KI REMOTE KEYBOARD OR HAND HELD REMOTE CONTROL

The below guide will explain the procedure and key press combinations for selecting and playing back recorded footage from cameras connected to a Hikvision DVR or NVR using the DS-1003KI remote keyboard or hand held remote control.

Press the MENU button on the DS-1003KI or remote control to display OSD menu screen:




Use the joystick (DS-1003KI) or arrow keys (handheld remote control) to navigate to the Playback icon and press ENTER button to enter into the below playback screen:

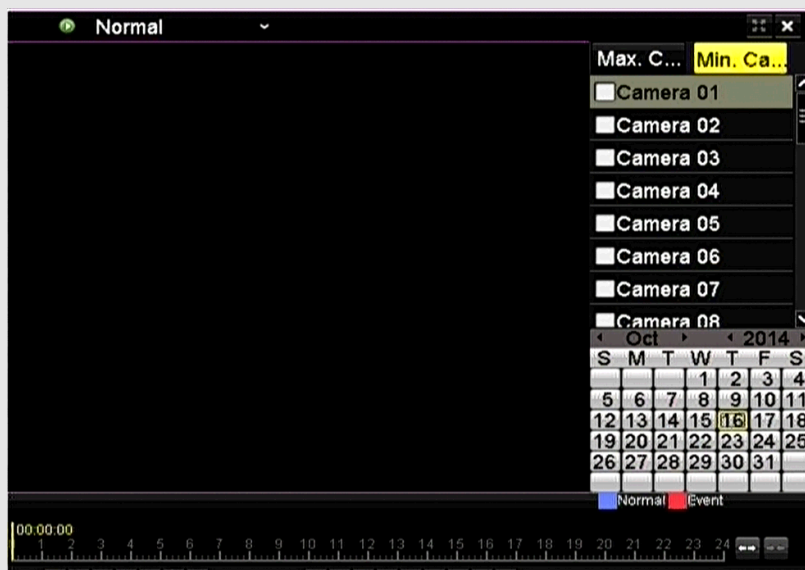

Press the PLAY button to move between Max.Ca, Min. Ca and Camera 1 using joystick (DS-1003KI) or arrow keys (remote control).

PROCEDURE FOR PLAYING BACK RECORDED FOOTAGE FROM HIKVISION DVR/NVR USING THE DS-1003KI REMOTE KEYBOARD OR HAND HELD REMOTE CONTROL

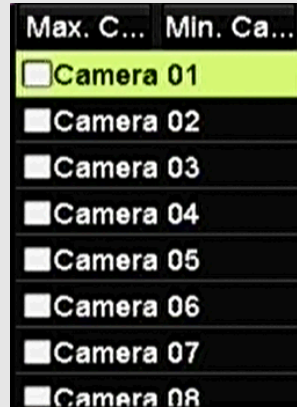


Pressing the ENTER button on Mac.Ca will select all camera channels for playback

Pressing the ENTER button on Min.Ca will unselect all camera channels for playback

Pressing the ENTER button on Camera 01 will allow you to move down the channel list and individually choose which cameras you wish to view in playback, this is done by pressing the MENU button on each channel where when selected a tick will appear in the white box next to the chosen channel number.

Once you have chosen the channels you wish to view in playback press the ENTER button then move down so the month icon is highlighted as below then press ENTER again.

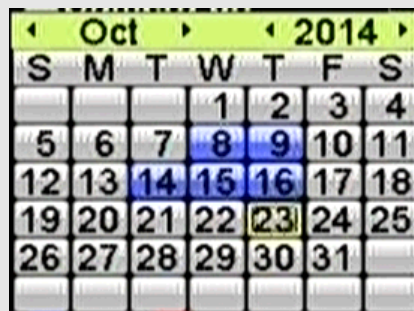

Now using the joystick (DS-1003KI) or arrow keys (remote control) it is possible to select the chosen month and day that you wish to playback, moving the yellow icon off the top of the calendar will move the month back and moving the yellow icon off the button of the calendar will move the month forward. Once you have selected the chosen month for playback simply move the icon to the chosen day and press the PLAY button followed by the ENTER button to begin playback.

PROCEDURE FOR PLAYING BACK RECORDED FOOTAGE FROM HIKVISION DVR/NVR USING THE DS-1003KI REMOTE KEYBOARD OR HAND HELD REMOTE CONTROL



Once playing back you can use the below controls to alter the playback speed and time:

Tap the joystick right (DS-1003KI) or press the right arrow (remote control)
will jump the playback time forward by 30 seconds

Tap the joystick left (DS-1003KI) or press the left arrow (remote control)
will jump the playback time back by 30 seconds

Tap the joystick up (DS-1003KI) or press the up arrow (remote control)
will put the playback into fast forward of which there are 4 speeds

Tap the joystick down (DS-1003KI) or press the down arrow (remote control)
will put the playback into rewind of which there are 4 speeds

Press the EDIT button to enable the clipping bookmark tool for easy back up